

[Manuals.plus](#) /

› [PXLISIE](#) /

› PXLISIE Professional Cordless Hair Clipper Instruction Manual

PXLISIE HHG

PXLISIE Professional Cordless Hair Clipper Instruction Manual

Model: HHG

1. INTRODUCTION AND PRODUCT OVERVIEW

Thank you for choosing the PXLISIE Professional Cordless Hair Clipper. This manual provides essential information for the safe and effective use of your new device. Please read it thoroughly before first use and keep it for future reference.

This versatile grooming tool is designed for precise and clean cuts, suitable for hair, beard, sideburns, face, and body hair. Its ergonomic design ensures comfortable handling, and the powerful motor provides efficient performance.



Image 1.1: Overview of the PXLISIE Professional Cordless Hair Clipper and its complete accessory kit, including guide combs, charging cable, and cleaning tools.

Powerful Motor



Carbonsteel cutter head



Sharp blade



Image 1.2: Detailed view of the T-blade and the robust motor, highlighting the precision cutting capabilities of the clipper.

2. PACKAGE CONTENTS

Please check the package contents upon unboxing to ensure all items are present:

- 1 x PXLISIE Professional Cordless Hair Clipper (Model: HHG)
- 4 x Guide Combs (1.5mm, 2mm, 3mm, 4mm)
- 1 x USB Charging Cable (Type-C)
- 1 x Cleaning Brush
- Several Ear Spoons (as part of the hair cutting kit)

Professional Hair Trimmer



Image 2.1: The hair clipper shown alongside its four interchangeable guide combs, illustrating the various cutting lengths available.

3. SAFETY INSTRUCTIONS

To ensure safe operation and prevent damage, please observe the following safety precautions:

- Do not immerse the clipper unit in water or other liquids. The blades are washable, but the main body is not waterproof.
- Keep the device out of reach of children.
- Ensure the clipper is switched off before cleaning, attaching/detaching combs, or performing any maintenance.
- Only use the provided USB charging cable. Using unauthorized chargers may damage the device or pose a safety risk.
- Do not use the clipper if the blades are damaged or bent, as this may cause injury.
- Avoid using the clipper on wet hair to prevent damage to the device and ensure optimal performance.

- Do not disassemble or attempt to repair the device yourself. Contact customer support for assistance.

4. SETUP AND INITIAL USE

4.1 Charging the Clipper

Before first use, fully charge the clipper. The built-in rechargeable battery provides approximately 120 minutes of cordless operation after a 2-hour charge.

1. Connect the Type-C end of the USB charging cable to the charging port at the bottom of the clipper.
2. Connect the USB-A end of the cable to a USB power source (e.g., USB charger, computer, power bank, car charger).
3. The charging indicator light will illuminate (or change color) to show that the device is charging.
4. Once fully charged, disconnect the clipper from the power source.



Image 4.1: The hair clipper being charged via its USB-C port, connected to a laptop, demonstrating its convenient charging capability.

4.2 Attaching Guide Combs

To achieve different cutting lengths, attach one of the four guide combs (1.5mm, 2mm, 3mm, 4mm) to the clipper blade.

1. Ensure the clipper is switched off.
2. Align the chosen guide comb with the clipper blade.
3. Gently push the comb onto the blade until it clicks securely into place.
4. To remove, gently pull the comb away from the blade.

4.3 Oiling the Blades

For optimal performance and to prevent hair pulling, it is recommended to add a few drops of clipper oil (not included) to the blades before each use.

1. Ensure the clipper is switched off.
2. Apply 1-2 drops of clipper oil evenly across the top of the blades.
3. Turn on the clipper for a few seconds to allow the oil to distribute.

4. Wipe off any excess oil with a clean cloth.

5. OPERATING INSTRUCTIONS

5.1 Turning On/Off

Press the power button located on the clipper handle to turn the device on or off.

5.2 Hair Trimming

For best results, ensure hair is clean and dry before trimming. If using for beard or body hair, ensure the area is clean.

1. Select the desired guide comb and attach it securely (refer to Section 4.2). For a zero-gap trim, use without a comb.
2. Turn on the clipper.
3. Hold the clipper firmly and place the flat top of the blade against the skin.
4. Move the clipper slowly and steadily against the direction of hair growth.
5. For precise edging and detailing (without a comb), use light pressure and guide the T-blade along the desired lines.
6. Regularly clear accumulated hair from the blades during use to maintain performance.



Image 5.1: Various hair and beard styles demonstrating the versatility and precision achievable with the PXLISIE hair clipper.

6. MAINTENANCE AND CLEANING

Proper maintenance ensures the longevity and optimal performance of your PXLISIE hair clipper.

6.1 Cleaning the Blades

The blades are designed for easy cleaning:

1. Ensure the clipper is switched off and disconnected from any power source.
2. Use the included cleaning brush to remove loose hair from the blades and the clipper head.
3. For a more thorough clean, you can rinse the blades under running water. **Do not rinse the main body of the clipper.**

4. After rinsing, ensure the blades are completely dry before reattaching or storing the clipper. Air dry or use a clean, dry cloth.

6.2 Oiling the Blades

Regular oiling (as described in Section 4.3) is crucial for maintaining blade sharpness and preventing friction.

6.3 Storage

Store the clipper in a cool, dry place, away from direct sunlight and moisture. Keep it out of reach of children.

7. TROUBLESHOOTING

If you encounter any issues with your clipper, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Clipper does not turn on.	Battery is depleted.	Charge the clipper fully (refer to Section 4.1).
Poor cutting performance / Hair pulling.	Blades are dull, dirty, or not oiled.	Clean and oil the blades (refer to Section 6.1 and 4.3). Ensure hair is dry.
Clipper makes unusual noise.	Blades need oiling or are misaligned.	Oil the blades. If noise persists, contact customer support.
Battery does not charge.	Faulty charging cable or power source.	Try a different USB port or power adapter. Ensure cable is securely connected.

8. SPECIFICATIONS

Brand	PXLISIE
Model Number	HHG
Power Source	Battery Powered
Blade Material	Titanium
Units	1 Total
Package Dimensions	18.59 x 6.81 x 4.19 cm
Weight	170 grams
Battery Type	1 AAA - included (for internal component or specific function, main unit is rechargeable)
Charging Time	Approx. 2 hours
Operating Time	Approx. 120 minutes

Note: The "1 AAA - included" battery specification from the product data might refer to a small internal component or be a general listing. The main clipper unit is powered by a rechargeable battery as described in the features.

9. WARRANTY AND CUSTOMER SUPPORT

PXLISIE is committed to providing high-quality products and excellent customer service. While specific warranty terms are not detailed here, if you encounter any problems with your hair clipper, please do not hesitate to contact our customer support team.

Our after-sales team aims to address and resolve any issues properly within 24 hours. Please refer to your purchase documentation or the seller's contact information for support.

© 2024 PXLISIE. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question