

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Seesii](#) /
- › [SeeSii Electric Pruning Shears User Manual](#)

## Seesii CS400

# SeeSii Electric Pruning Shears User Manual

Model: CS400 | Brand: Seesii

## 1. INTRODUCTION

Thank you for choosing the SeeSii Electric Pruning Shears. This manual provides essential information for the safe and efficient operation, maintenance, and care of your new tool. Please read this manual thoroughly before first use and keep it for future reference. These electric pruning shears are designed for precise and effortless cutting of branches up to 40mm in diameter, ideal for gardening, fruit trees, and vineyards.

## 2. SAFETY INSTRUCTIONS

Always observe basic safety precautions to reduce the risk of fire, electric shock, and personal injury.

- **Personal Protective Equipment:** Always wear safety glasses, gloves, and appropriate protective clothing when operating the shears.
- **Work Area:** Keep the work area clean and well-lit. Do not operate in explosive atmospheres, such as in the presence of flammable liquids, gases, or dust.
- **Electrical Safety:** Avoid body contact with earthed or grounded surfaces. Do not expose power tools to rain or wet conditions.
- **Tool Care:** Maintain tools with care. Keep cutting tools sharp and clean. Follow instructions for lubricating and changing accessories.
- **Battery Safety:** Use only the specified charger for the battery pack. Do not disassemble, crush, or expose battery packs to high temperatures or fire.
- **Children and Bystanders:** Keep children and bystanders away while operating a power tool.
- **Unintended Starting:** Ensure the switch is in the off-position before connecting to battery pack, picking up or carrying the tool.

### 3. PACKAGE CONTENTS

Carefully unpack the box and ensure all items are present and undamaged. If any items are missing or damaged, contact your retailer.



Image: Complete package contents of the SeeSii Electric Pruning Shears, showing the main unit, two batteries, charger, a spare blade, a wrench, a sharpening stone, and a protective carrying case.

- SeeSii Electric Pruning Shears (1 unit)
- 21V 2000mAh Lithium-Ion Batteries (2 units)
- Battery Charger (1 unit)
- Spare SK5 Carbon Steel Blade (1 unit)
- Wrench (1 unit)
- Sharpening Stone (1 unit)
- User Manual (this document)
- Carrying Case (1 unit)

## 4. PRODUCT OVERVIEW

The SeeSii Electric Pruning Shears feature a robust design for efficient and comfortable use.



Image: Detailed view of the pruning shears, emphasizing key features such as the 21V brushless motor, adjustable cutting diameter from 10-40mm, the SK5 high carbon steel blade, and the integrated LCD digital display.

### Key Components:

- **SK5 Carbon Steel Blade:** Durable and sharp for clean cuts.
- **Brushless Motor:** Provides smooth, quiet, and efficient operation with extended lifespan.
- **LCD Display:** Shows battery charge level and number of cuts.
- **Trigger:** Activates the cutting action.
- **Safety Switch:** Prevents accidental activation.
- **Battery Port:** For inserting the lithium-ion battery.

## 5. SETUP

### 5.1 Charging the Batteries

Before first use, fully charge both lithium-ion batteries. Each 2000mAh battery provides approximately 3-4 hours of continuous use, totaling 6-8 hours with both batteries.

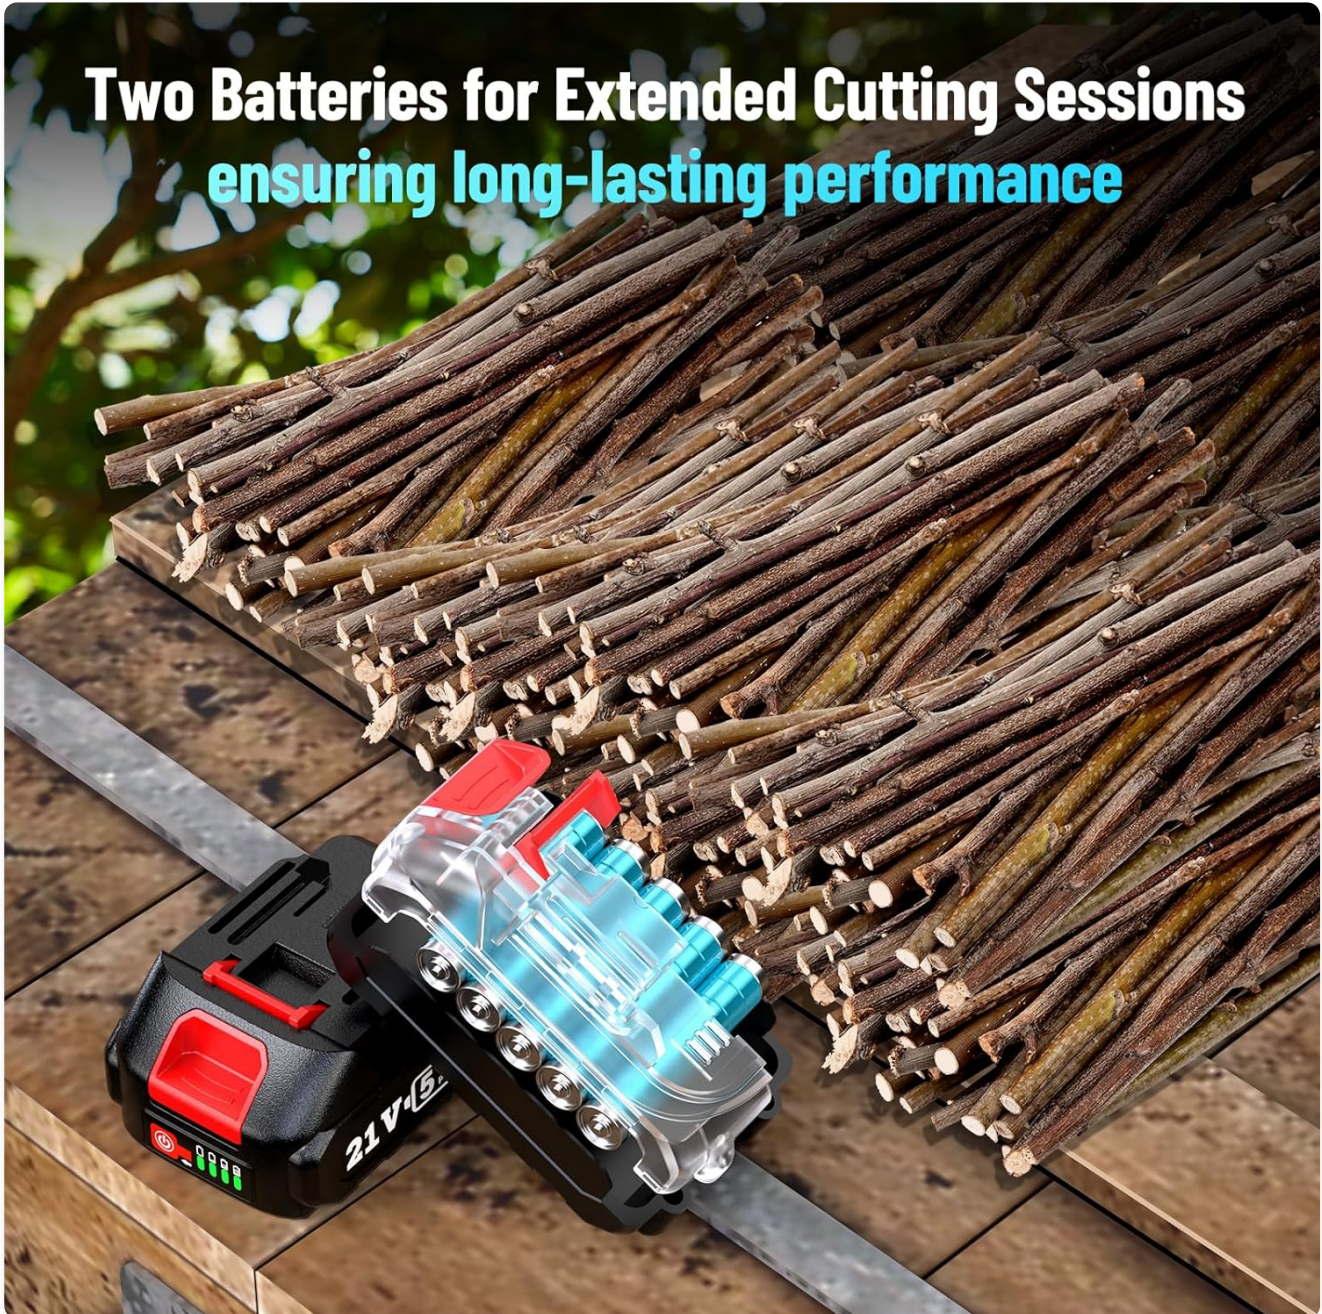


Image: Two 21V 2000mAh batteries, emphasizing their role in providing extended power for prolonged pruning tasks.

1. Connect the charger to a power outlet.
2. Insert the battery into the charger. The indicator light on the charger will show the charging status (e.g., red for charging, green for fully charged).
3. Once fully charged, disconnect the battery from the charger and unplug the charger.

### 5.2 Installing the Battery

Ensure the pruning shears are turned off before installing or removing the battery.

1. Align the battery with the battery port at the bottom of the shears handle.
2. Slide the battery firmly into place until it clicks, indicating it is securely locked.

### 5.3 Initial Blade Preparation

The blades are pre-lubricated, but it is good practice to apply a light coat of machine oil before first use and periodically thereafter.

## 6. OPERATING INSTRUCTIONS

Follow these steps for safe and effective operation of your electric pruning shears.



Image: A visual guide demonstrating the four steps to operate the electric pruning shears: battery insertion, power-on sequence, activation by double-pressing the trigger, and power-off procedure.

### 6.1 Powering On/Off

1. **To Power On:** Insert the battery. Press and hold the power switch until you hear a single beep. The LCD display will illuminate.
2. **To Activate Blades:** After powering on, quickly press the trigger twice. The blades will open, indicating readiness for use.
3. **To Power Off:** Press and hold the power switch until you hear a long beep. The blades will close and lock, and the LCD display will turn off.

### 6.2 Adjusting Cutting Diameter

The shears offer four adjustable cutting diameters: 10mm, 20mm, 30mm, and 40mm. The default maximum cutting diameter is 40mm upon activation.

# Four Adjustable Modes

effortlessly cutting trees from 10mm to 40mm



Image: Illustration of the four adjustable cutting modes (10mm, 20mm, 30mm, 40mm) and how to switch between them using the power button, with visual cues from the LCD display.

To change the cutting diameter, simply press the power button briefly while the shears are active. Each press will cycle through the available sizes (40mm > 30mm > 20mm > 10mm > 40mm).

## 6.3 Pruning Techniques

Position the branch to be cut fully within the blades. Press the trigger to make a clean cut. Avoid forcing the shears on branches exceeding the maximum cutting diameter.

# Pruning Quickly And With Precision One-Handed Use & Effortless



Branches pruning

Flower pruning

Cutting fruit pedicel

Garden pruning

Shrub pruning

Image: Examples of the electric pruning shears in action, demonstrating their versatility for pruning branches, flowers, fruit stems, general garden maintenance, and shrubs.

The lightweight and ergonomic design allows for comfortable one-handed operation, reducing fatigue during extended use.



Image: A user demonstrating the one-handed operation of the SeeSii electric pruning shears while trimming a rose bush, highlighting its lightweight design for effortless use.

## 6.4 LCD Display Information

The LCD display provides real-time information:

- **Battery Level:** Indicates the remaining charge of the battery.
- **Cut Count:** Displays the total number of cuts made. Note: Turning the power switch off and on will reset the cut count.

## 7. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your pruning shears.

### 7.1 Blade Cleaning and Lubrication

After each use, especially after cutting resinous wood, clean the blades to prevent sap buildup and corrosion.

# SK5 Blade, Sharp and Durable

Delivering precise cuts every time



Image: A close-up view of the SK5 carbon steel blade in action, demonstrating its precision and clean cutting ability on a small branch.

1. Ensure the shears are powered off and the battery is removed.
2. Use a damp cloth to wipe off any sap, dirt, or debris from the blades. For stubborn residue, use a blade cleaner or rubbing alcohol.
3. Once clean and dry, apply a few drops of light machine oil to the pivot point and along the cutting edge of the blade. Open and close the blades a few times to distribute the oil.

## 7.2 Blade Sharpening

Use the provided sharpening stone to maintain blade sharpness. Sharpen only the beveled edge of the blade.

1. Ensure the shears are powered off and the battery is removed.
2. Hold the sharpening stone at the original blade angle and gently rub it along the cutting edge in one direction.
3. Repeat several times until the blade is sharp.

## 7.3 Blade Replacement

If the blade becomes dull or damaged beyond sharpening, replace it with the provided spare blade or an original SeeSii replacement blade.

1. Ensure the shears are powered off and the battery is removed.
2. Using the provided wrench, carefully loosen the nut holding the blade in place.
3. Remove the old blade and replace it with the new one, ensuring proper alignment.
4. Tighten the nut securely.

## 7.4 Battery Care and Storage

- Store batteries in a cool, dry place away from direct sunlight and extreme temperatures.
- For long-term storage, charge batteries to approximately 50% capacity.
- Recharge batteries every 3-6 months during long storage periods to prevent deep discharge.

## 7.5 Storage of Shears

When not in use, store the pruning shears in their carrying case in a dry, secure location, out of reach of children.

# 8. TROUBLESHOOTING

This section addresses common issues you might encounter.

Problem	Possible Cause	Solution
Shears do not power on.	Battery not inserted correctly or discharged.	Ensure battery is fully charged and securely inserted.
Blades do not open after powering on.	Trigger not pressed twice rapidly.	Quickly press the trigger twice to activate the blades.
Blades cut poorly or get stuck.	Dull blades, sap buildup, or cutting branches too thick.	Clean and sharpen blades. Lubricate pivot point. Do not exceed maximum cutting diameter.
Battery life is shorter than expected.	Battery not fully charged, old battery, or extreme temperatures.	Ensure full charge. Store batteries properly. Consider battery replacement if old.

# 9. SPECIFICATIONS

Detailed technical specifications for the SeeSii Electric Pruning Shears.

Feature	Specification
Model Number	CS400
Brand	Seesii

Feature	Specification
Cutting Diameter	10mm, 20mm, 30mm, 40mm (Adjustable)
Blade Material	SK5 Carbon Steel
Motor Type	Brushless
Power Source	Battery (Lithium-Ion)
Battery Voltage	21V
Battery Capacity	2 x 2000mAh
Electric Power	600 Watts
Product Dimensions	33 x 28 x 0.1 cm
Product Weight (with battery)	2.64 kg
Color	Blue
Hand Orientation	Ambidextrous

## 10. WARRANTY AND SUPPORT

SeeSii products are manufactured to high-quality standards. For warranty information or technical support, please refer to the warranty card included with your purchase or contact SeeSii customer service through the retailer where the product was purchased. Please have your model number (CS400) and purchase date ready when contacting support.

## 11. OFFICIAL PRODUCT VIDEOS

No official product videos from the seller were found in the provided data to embed in this manual.