

[Manuals.plus](#) /

› [AUNMAS](#) /

› AUNMAS World Time Travel Alarm Clock with LED Flashlight and Temperature Display User Manual

AUNMAS AUNMAS0benmg2ryo

AUNMAS World Time Travel Alarm Clock

Model: AUNMAS0benmg2ryo

PRODUCT OVERVIEW

The AUNMAS World Time Travel Alarm Clock is a compact and versatile device designed for travelers. It combines a digital alarm clock with 18 world time zones, a built-in LED flashlight, a temperature display, and a perpetual calendar. Its lightweight and pocket-sized design make it an ideal companion for keeping track of time and providing illumination on the go.

KEY FEATURES

- **World Time Function:** Displays time for 18 pre-set cities/time zones, with automatic adjustment when a city is selected.
- **LED Flashlight:** Equipped with 3 bright LEDs for illumination in dark environments.
- **Temperature Display:** Shows ambient temperature and allows switching between Celsius (°C) and Fahrenheit (°F).
- **Alarm Clock:** Features an alarm function with 16 unique melodies to choose from.
- **Perpetual Calendar:** Displays full month view and date.
- **Compact and Portable:** Lightweight, pocket-sized design for easy carrying during travel.
- **Large LCD Screen:** Provides clear readability of time, date, and temperature.

PACKAGE CONTENTS

- 1 x AUNMAS World Time Travel Alarm Clock (Batteries not included)

Note: 2 AAA batteries are required and sold separately.

SETUP

1. Battery Installation

1. Locate the battery compartment cover on the back of the device.
2. Slide or lift the cover to open the compartment.
3. Insert two (2) AAA batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
4. Replace the battery compartment cover securely.



Figure 1: Battery compartment with AAA batteries.

2. Initial Power On

After installing batteries, the clock will power on automatically. The display will show default time and date settings. You will need to set the current time and other preferences.

OPERATING INSTRUCTIONS

The device features several buttons for operation: **MODE**, **LIGHT/SNOOZE**, **SET**, and **UP/DOWN** arrows.



Figure 2: Front and back view with button labels.

1. Setting Home Time and Date

1. Press the **MODE** button repeatedly until "HOME TIME" is displayed.
2. Press and hold the **SET** button until the time digits start flashing.
3. Use the **UP** or **DOWN** buttons to adjust the hour.
4. Press **SET** again to move to minutes, then adjust with **UP/DOWN**.
5. Continue pressing **SET** to cycle through year, month, and day settings, adjusting each with **UP/DOWN**.
6. Press **SET** one last time to confirm and exit setting mode.
7. To switch between 12-hour and 24-hour format, press the **UP** button while in time display mode (not setting mode).

2. Setting the Alarm

1. Press the **MODE** button until "ALARM" is displayed.
2. Press and hold the **SET** button until the alarm time digits flash.
3. Use the **UP** or **DOWN** buttons to adjust the alarm hour.

4. Press **SET** again to move to minutes, then adjust with **UP/DOWN**.
5. Press **SET** to confirm.
6. To activate/deactivate the alarm, press the **UP** button while in alarm display mode (not setting mode). An alarm icon will appear/disappear on the screen.
7. To select an alarm melody, press the **DOWN** button while in alarm display mode. Cycle through the 16 melodies.

When the alarm sounds, press the **LIGHT/SNOOZE** button to activate snooze (alarm will sound again after a few minutes) or any other button to turn off the alarm for the day.

3. Using World Time Function

1. Press the **MODE** button until "WORLD TIME" is displayed.
2. Rotate the top bezel of the clock to select one of the 18 pre-set cities/time zones. The display will automatically adjust to show the local time for the selected city.



Figure 3: World Time Zone selection by rotating the bezel.

4. Temperature Display

The clock displays the current ambient temperature. To switch between Celsius (°C) and Fahrenheit (°F):

- In normal time display mode, press the **DOWN** button to toggle between °C and °F.



Figure 4: Temperature display and unit selection.

5. Using the LED Flashlight

The device has a built-in flashlight with 3 LEDs.

- Press the dedicated flashlight button (usually located on the side or front, as shown in Figure 2) to turn the flashlight ON.
- Press the button again to turn the flashlight OFF.



Figure 5: Using the LED flashlight.

6. Backlight Function

To illuminate the display in low light conditions:

- Press the **LIGHT/SNOOZE** button. The display will light up for a few seconds.

MAINTENANCE

- **Cleaning:** Wipe the device with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Battery Replacement:** Replace batteries when the display dims or functions become erratic. Always replace both batteries at the same time.
- **Storage:** If storing the device for an extended period, remove the batteries to prevent leakage.

TROUBLESHOOTING

Problem	Possible Cause / Solution
Display is blank or dim.	◦ Batteries are dead or low. Replace with new AAA batteries. ◦ Batteries are inserted incorrectly. Check polarity (+/-).

Problem	Possible Cause / Solution
Clock does not keep accurate time.	◦ Batteries are low. Replace batteries. ◦ Time was not set correctly. Re-set the home time following the instructions.
Alarm does not sound.	◦ Alarm is not activated. Ensure the alarm icon is displayed on the screen. ◦ Alarm time is set incorrectly. Verify alarm settings.
Flashlight does not turn on.	◦ Batteries are dead or low. Replace batteries. ◦ Flashlight button is not pressed firmly.

SPECIFICATIONS

Feature	Detail
Brand	AUNMAS
Model Number	AUNMAS0benmg2ryo
Material	ABS (Acrylonitrile Butadiene Styrene)
Display Type	Digital LCD
Power Source	Battery Powered (2 x AAA batteries, not included)
Voltage	4.5V
Product Dimensions (L x W x H)	Approx. 13 x 3.8 x 4 cm (5.12 x 1.50 x 1.57 inches)
Alarm Function	Yes
Movement Type	Automatic
Special Features	World Time, LED Flashlight, Temperature Display (°C/°F), Perpetual Calendar, Lightweight

WARRANTY AND SUPPORT

Specific warranty information for this product is not provided in the available documentation. For warranty claims, technical support, or further assistance, please contact the retailer where you purchased the product or the manufacturer directly. Keep your purchase receipt as proof of purchase.