

[Manuals.plus](#) /

› [Simple Trending](#) /

› Simple Trending Standard Clothes Clothing Garment Rack Instruction Manual

Simple Trending ST57776-B

Simple Trending Standard Clothes Clothing Garment Rack Instruction Manual

Model: ST57776-B

Brand: Simple Trending

INTRODUCTION

This manual provides detailed instructions for the assembly, operation, and maintenance of your Simple Trending Standard Clothes Clothing Garment Rack. Please read all instructions carefully before use to ensure proper setup and safe operation.

SAFETY INFORMATION

Important Safety Precautions

- Ensure all parts are securely fastened before use.
- Do not exceed the maximum load capacity of 82 pounds.
- Distribute weight evenly on the hanging rod and bottom shelf to prevent tipping.
- Keep hands and fingers clear of moving parts during assembly and when adjusting.
- Use on a flat, stable surface. Lock wheels when the rack is stationary.
- This product is intended for indoor use only.

PACKAGE CONTENTS

Verify All Components

Please verify that all components are present before beginning assembly. If any parts are missing or damaged, please contact customer support.

- Main Hanging Rod
- Vertical Support Poles (2)
- Base Support Bars (2)
- Connecting Tubes/Joints
- Wheels (4, with 2 lockable)
- Assembly Hardware (screws, wrench)
- Instruction Manual

Assembly Instructions

Follow these steps to assemble your garment rack. An assembly tool is included.

1. **Step 1: Attach Wheels to Base Bars.** Insert the four wheels into the designated holes at the ends of the two base support bars. Ensure the two lockable wheels are placed on the same side for easy access.
2. **Step 2: Connect Vertical Support Poles to Base.** Attach the vertical support poles to the base support bars using the provided connecting tubes and screws. Ensure a secure fit.
3. **Step 3: Install Main Hanging Rod.** Connect the main hanging rod to the top of the vertical support poles. Secure it firmly with the remaining hardware.
4. **Step 4: Verify Stability.** Once assembled, gently shake the rack to ensure all connections are tight and the structure is stable. Adjust any loose connections as needed.



Image: This image illustrates the heavy-duty construction and how the metal tubes connect, highlighting the 82 lbs load capacity.



Image: This diagram provides the overall product dimensions: 43.5 inches wide, 54.25 inches high, and 14.75 inches deep, along with the load capacity.

OPERATING INSTRUCTIONS

Using Your Garment Rack

- **Hanging Clothes:** Use the top rod to hang garments. Distribute clothing evenly to maintain balance and prevent strain on the rack.
- **Bottom Storage:** The two parallel bars at the bottom provide space for additional storage, such as shoes, boxes, or baskets. Ensure items do not obstruct the wheels.
- **Moving the Rack:** To move the rack, unlock the two lockable wheels by flipping their levers. Gently push the rack to your desired location. The 360° rotating wheels allow for easy maneuverability.
- **Locking the Wheels:** Once the rack is in position, lock the two lockable wheels by flipping their levers down. This will prevent the rack from rolling unintentionally.

Product Dimension

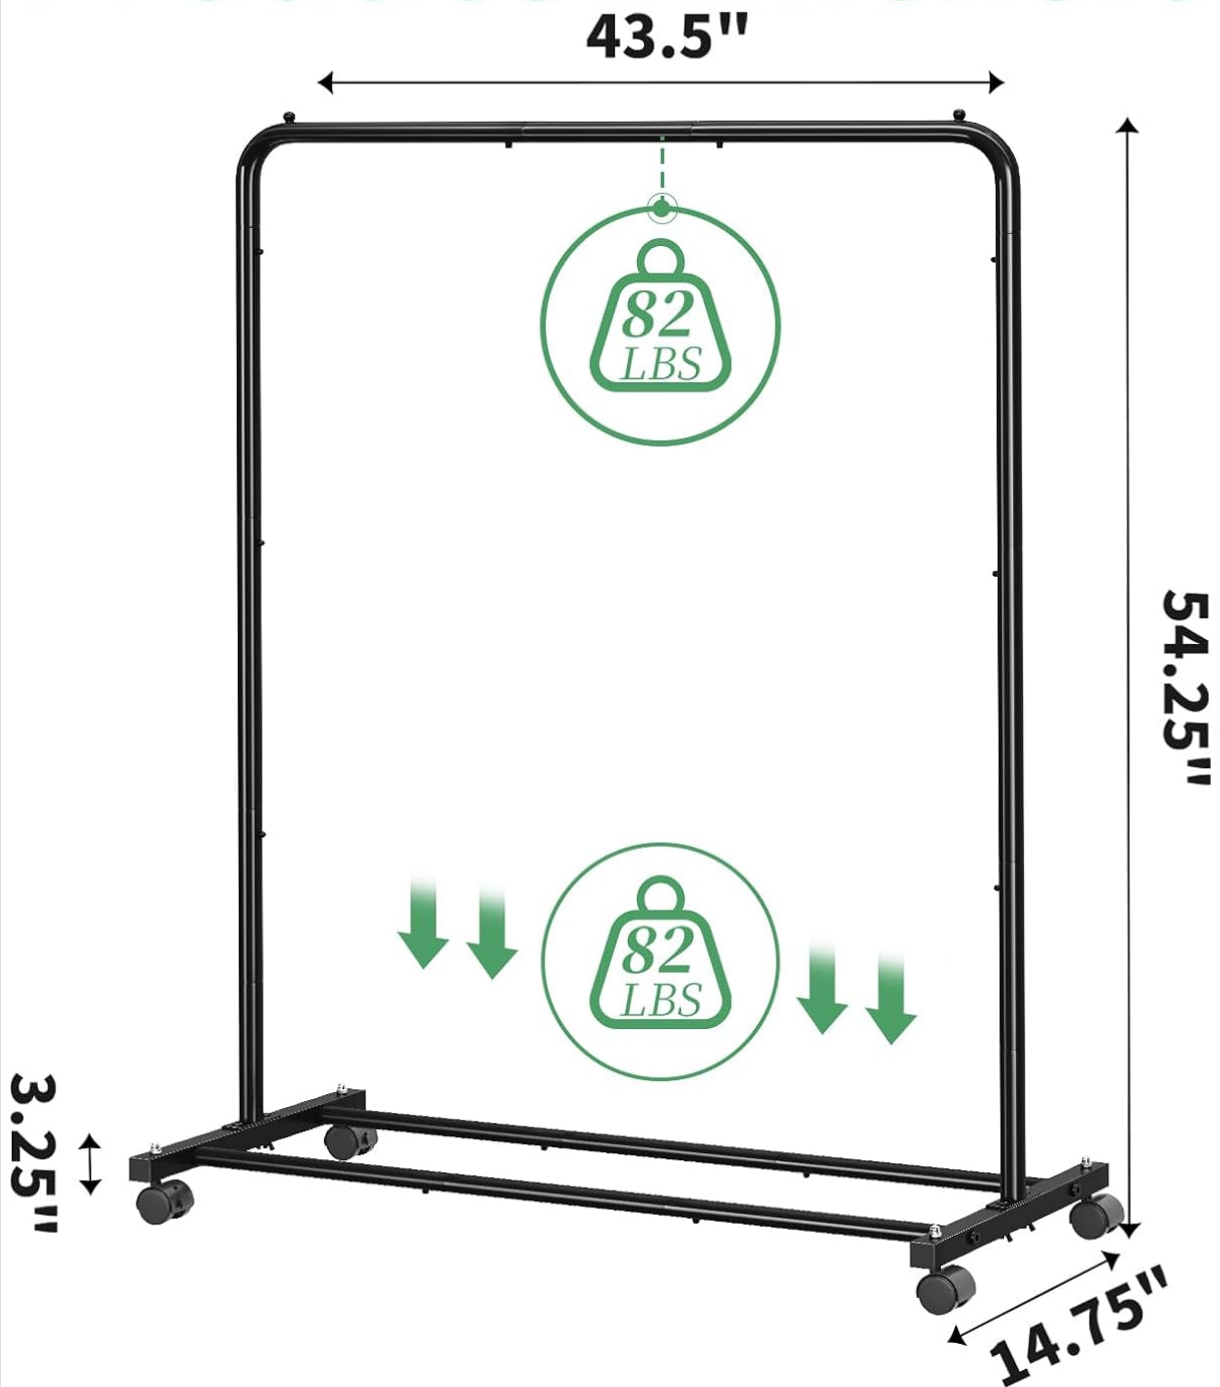


Image: This image shows a close-up of the 360-degree rotating wheels and their locking mechanism, demonstrating how to fix the rack in place or allow it to move freely.

MAINTENANCE

Care and Maintenance

- **Cleaning:** Wipe the metal surfaces with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals that could damage the finish.
- **Rust Prevention:** The rack features a rust-resistant coating. To prolong its life, avoid prolonged exposure to moisture.
- **Regular Checks:** Periodically check all screws and connections to ensure they remain tight. Retighten if

necessary to maintain stability.

TROUBLESHOOTING

Troubleshooting Common Issues

Issue	Possible Cause	Solution
Rack is wobbly	Loose connections; uneven weight distribution	Check and tighten all screws. Redistribute clothes and items evenly.
Wheels not rolling smoothly	Wheels are locked; debris in wheels	Unlock the wheels. Clear any debris from the wheel mechanisms.
Rack tips over	Overloaded; weight not distributed evenly	Do not exceed 82 lbs load capacity. Ensure weight is balanced across the rod and bottom shelf.

SPECIFICATIONS

Product Specifications

Feature	Detail
Brand	Simple Trending
Model Number	ST57776-B
Color	Black
Material	Metal
Product Dimensions (D x W x H)	14.75" x 43.5" x 54.25"
Load Capacity	82 Pounds
Installation Type	Free Standing
Special Features	Portable, Rust Resistant, Lockable Wheel
Item Weight	6.54 pounds
Assembly Required	Yes

WARRANTY AND SUPPORT

Customer Assistance

Simple Trending stands behind the quality of its products. For any questions, concerns, or warranty inquiries, please contact Simple Trending customer support directly. Contact information can typically be found on the product packaging or the Simple Trending official website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CWZZKCGR>

More documents and user manuals: <https://manuals.plus/>