

Manuals.plus /

› Segutage /

› Instruction Manual for 24V 1.6L Multifunctional Electric Rice Cooker

Segutage WSU-XB-JY12983

Instruction Manual for 24V 1.6L Multifunctional Electric Rice Cooker

BRAND: SEGUTAGE | MODEL: WSU-XB-JY12983



The Segutage 24V 1.6L Multifunctional Electric Rice Cooker, designed for portability and versatile cooking.

1. PRODUCT OVERVIEW

The Segutage 24V 1.6L Multifunctional Electric Rice Cooker is a compact and versatile appliance suitable for both home and travel, including use in trucks. It is designed to prepare a variety of meals such as rice, porridge, and nutritious eggs, and can also warm pre-cooked dishes. Constructed from food-grade PP material, it ensures safety in food preparation. Its portable design makes it easy to transport, ideal for individuals with active lifestyles. The cooker features a double safety buckle for secure sealing, preventing leaks and maintaining food temperature. The waterproof surface and non-stick coating facilitate easy cleaning and maintenance.



Key features of the Segutage Mini Rice Cooker, highlighting its portable handles, steam plate, secure buckle, non-stick liner, and user-friendly button.

2. PACKAGE CONTENTS

Please verify that all items listed below are included in your package:

- 24V 1.6L Multifunctional Electric Rice Cooker Unit
- Power Cord (24V compatible)

- Measuring Cup
- Rice Spoon
- Spare Fuse



All components included in the Segutage rice cooker package.

3. SPECIFICATIONS

Specification	Detail
Brand	Segutage
Model Name	WSU-XB-JY12983
Capacity	1.6 Liters
Product Dimensions	7.1"D x 6.1"W x 7.1"H (18cm x 15.6cm x 18cm)
Power Source	Corded Electric
Voltage	24 Volts
Wattage	140 watts
Material	ABS + PP + Stainless steel
Lid Material	Plastic
Color	White
Item Weight	2.64 pounds
Special Feature	Portable



Detailed dimensions of the rice cooker for reference.

4. SAFETY INFORMATION

Please read all safety instructions carefully before using the appliance. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Do not immerse the main unit in water or other liquids.
- Ensure the voltage used matches the appliance's requirements (24V).
- Keep out of reach of children.
- Do not operate if the power cord or plug is damaged.
- Always unplug the appliance when not in use and before cleaning.
- Use only manufacturer-recommended accessories.
- Do not block steam vents during operation.
- Exercise caution when opening the lid after cooking, as hot steam will escape.

5. SETUP

Before first use, follow these steps:

1. Unpack all components and remove any packaging materials.
2. Wash the inner pot, steam plate, measuring cup, and rice spoon with warm, soapy water. Rinse thoroughly and dry completely.
3. Wipe the exterior of the main unit with a damp cloth. Do not immerse the main unit in water.
4. Place the inner pot securely inside the main unit.
5. Ensure the power outlet is compatible with 24V DC (e.g., a truck's cigarette lighter socket).



Internal components of the rice cooker, including the removable inner pot and steam plate.

6. OPERATING INSTRUCTIONS

This appliance can be used to cook rice, porridge, steam eggs, and warm various dishes. The operation is straightforward with a single button control.

Cooking Rice/Porridge:

1. Measure the desired amount of rice using the provided measuring cup and rinse it.
2. Place the rinsed rice into the inner pot. Add the appropriate amount of water (refer to rice packaging for water ratios, typically 1:1.5 for rice). For porridge, adjust water for desired consistency.
3. Close the lid securely, ensuring the double safety buckles are latched.
4. Plug the power cord into the appliance and then into a 24V power source (e.g., vehicle cigarette lighter).
5. Press the main button to start cooking. The indicator light will illuminate.
6. Once cooking is complete, the appliance will automatically switch to 'Keep Warm' mode. The indicator light may change color or turn off.
7. Allow the rice to rest for 5-10 minutes before serving for best results.

Steaming Eggs/Dishes:

1. Add a small amount of water to the bottom of the inner pot (enough for steaming, typically 1-2 cups).
2. Place the stainless steel steam plate into the inner pot.
3. Arrange eggs or other dishes on the steam plate.
4. Close the lid securely.
5. Plug in the appliance and press the main button to start steaming.
6. Monitor cooking progress. Once steaming is complete, unplug the unit.

Warming Dishes:

1. Place your pre-cooked dish directly into the inner pot or on the steam plate.
2. Close the lid securely.
3. Plug in the appliance and press the main button. The gentle heating will warm your food.
4. Unplug once desired temperature is reached.

Demonstration of the Segutage Mini Rice Cooker's functionality, including cooking and serving food.

7. CLEANING AND MAINTENANCE

Proper cleaning and maintenance will extend the life of your rice cooker.

- Always unplug the appliance and allow it to cool completely before cleaning.
- The inner pot and steam plate have a non-stick coating and should be hand washed with a soft sponge and mild dish soap. Avoid abrasive cleaners or metal scouring pads to prevent damage to the non-stick surface.
- Wipe the exterior of the main unit with a damp cloth. Do not immerse the main unit in water.
- Ensure all parts are thoroughly dry before reassembling or storing the appliance.
- Store the rice cooker in a dry place away from direct sunlight.

Note: The main unit is not dishwasher safe. Only the inner pot and steam plate are washable.

8. TROUBLESHOOTING

If you encounter issues with your rice cooker, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on	Not plugged in correctly; No power from outlet; Blown fuse.	Ensure power cord is securely plugged into both the cooker and the 24V outlet. Check the vehicle's power outlet. Replace the fuse if necessary (refer to fuse replacement instructions).
Food not cooking properly	Incorrect water ratio; Lid not sealed properly; Insufficient cooking time.	Adjust water amount according to recipe. Ensure lid is securely latched. Allow sufficient time for cooking cycle to complete.
Food sticks to the inner pot	Not enough water; Pot not clean; Damaged non-stick coating.	Ensure proper water ratio. Clean the inner pot thoroughly before each use. If coating is damaged, consider replacing the inner pot.
Steam leaking from lid	Lid not closed properly; Seal ring damaged or misplaced.	Ensure lid is securely latched and the double safety buckles are engaged. Check the silicone seal ring for proper placement and any damage.

9. WARRANTY AND SUPPORT

This Segutage product is covered by a manufacturer's warranty against defects in materials and workmanship. For specific warranty terms and conditions, please refer to the warranty card included with your purchase or contact Segutage customer support.

For technical assistance, troubleshooting not covered in this manual, or to inquire about replacement parts, please contact Segutage customer service through the retailer where the product was purchased or visit the official Segutage website for contact information.