

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [CHIFENCHY](#) /

› [CHIFENCHY Portable Bluetooth Speaker User Manual](#)

CHIFENCHY A46-6

CHIFENCHY Portable Bluetooth Speaker

USER MANUAL

Model: A46-6

[Product](#)

[Overview](#)

[Setup](#)

[Operation](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty &](#)

[Support](#)

1. Product Overview

The CHIFENCHY Portable Bluetooth Speaker with Dynamic Light Display (Model A46-6) is designed to provide a rich audio experience combined with an engaging visual light show. This compact and lightweight speaker is ideal for on-the-go use, offering robust sound and extended playtime.



Figure 1.1: Front view of the CHIFENCHY Portable Bluetooth Speaker, showcasing its compact design and top light ring.

Key Features:

- **Dynamic Audio:** Immerse yourself in impressive 15W audio, featuring clear treble, rich mids, and powerful bass for an unforgettable listening experience.

- **Portable Design:** Compact and lightweight, allowing easy portability. Includes a TF card slot, AUX input, and fast Type-C charging.
- **Dynamic Light Show:** Experience an audiovisual spectacle as LED lights synchronize with the rhythm of your music, creating a captivating light display.
- **Extended Playtime:** Enjoy up to 15 hours of music playback on a single charge, ensuring continuous entertainment.
- **Seamless Connectivity:** Benefit from hassle-free pairing and stable connections with Bluetooth 5.3, along with the convenience of hands-free calls via the integrated microphone.
- **Waterproof Design:** Designed with a waterproof feature for enhanced durability and versatility.

Dynamic Light Show

Sync Your Beats

Your music will be enhanced by the pulsating lights, creating an immersive visual experience.



Figure 1.2: Illustration of the speaker's dynamic light show, where LED lights pulsate and change color in sync with the music.

2. Setup

2.1 Charging the Speaker

Before first use, fully charge the speaker. Connect the provided Type-C charging cable to the speaker's charging port and the other end to a compatible USB power adapter (not included) or a computer's USB port. The charging indicator light will show the charging status and turn off when fully charged. A full charge provides up to 15 hours of playtime, depending on volume level and light show usage.

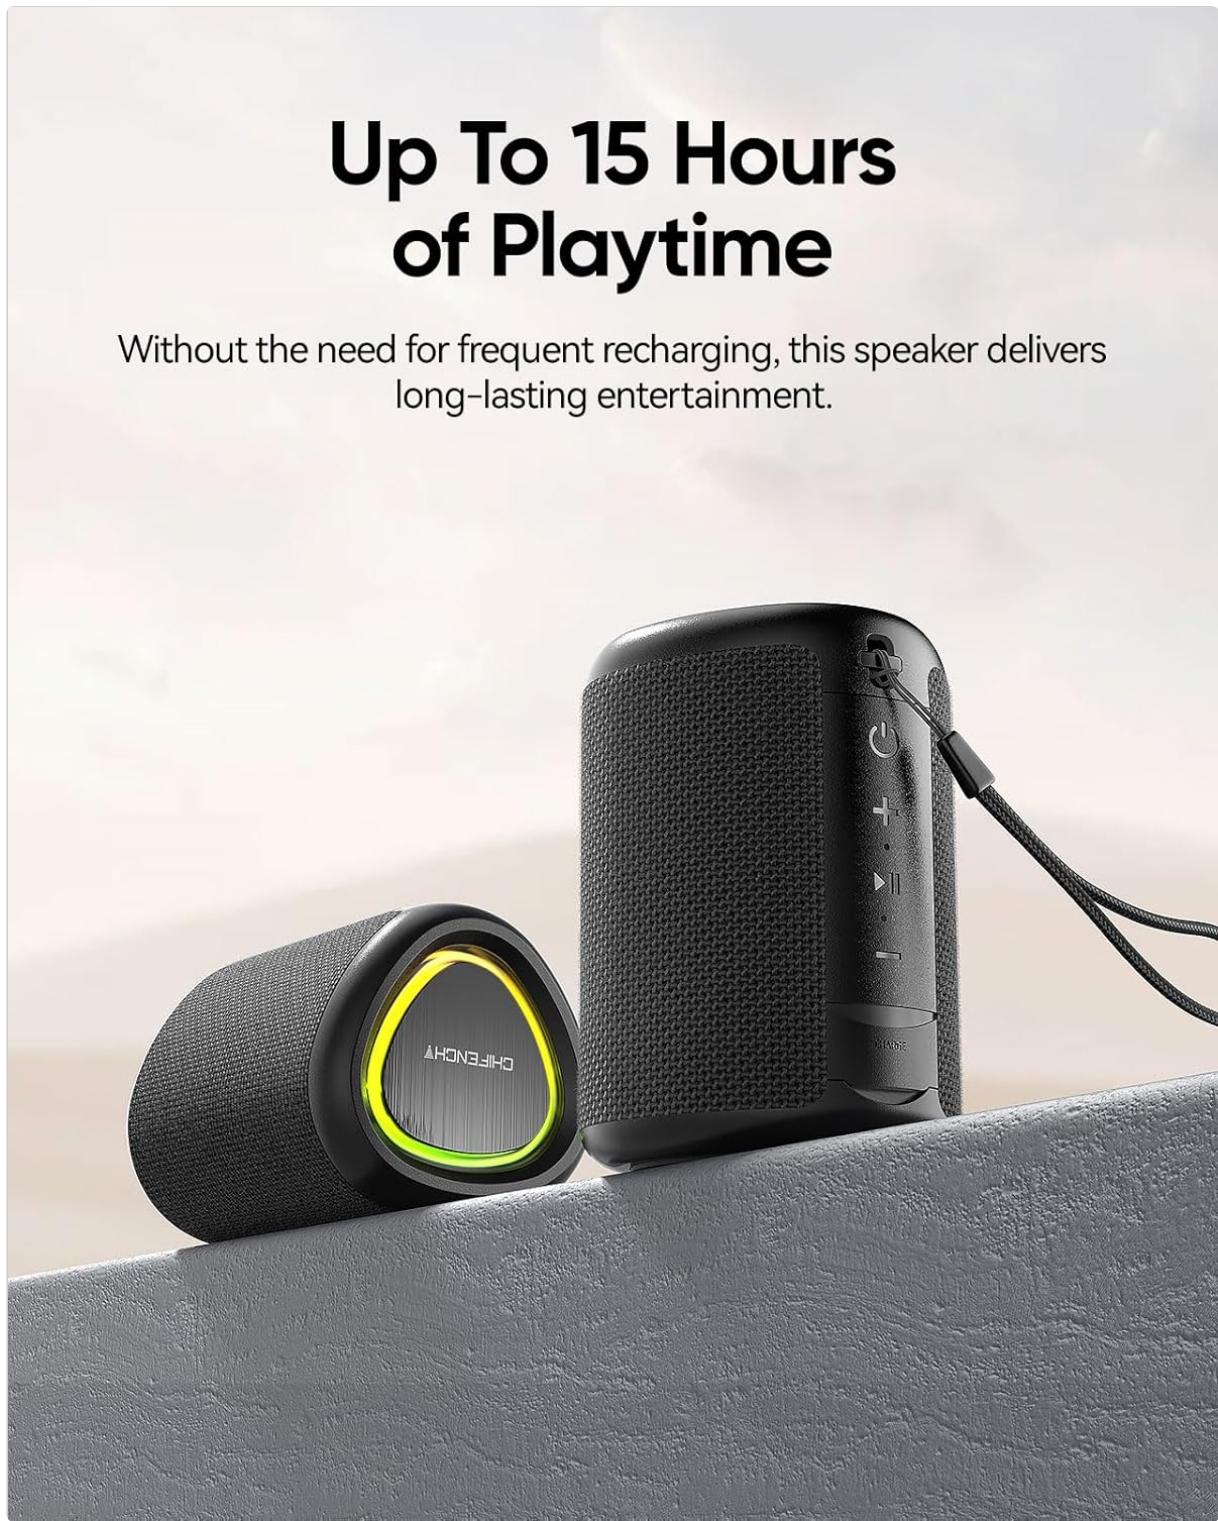


Figure 2.1: Two CHIFENCHY speakers demonstrating their long battery life, capable of up to 15 hours of continuous playback.

2.2 Powering On/Off

- To power on, press and hold the **Power button** (usually marked with a circle and vertical line) for a few seconds until you hear an audible prompt or see the indicator lights activate.
- To power off, press and hold the **Power button** again for a few seconds until the indicator lights turn off.

2.3 Bluetooth Pairing

1. Ensure the speaker is powered on and in Bluetooth pairing mode. The Bluetooth indicator light will typically flash rapidly.
2. On your smartphone, tablet, or other Bluetooth-enabled device, go to the Bluetooth settings.
3. Search for available devices. The speaker will appear as "CHIFENCHY A46-6" or similar.
4. Select the speaker from the list to initiate pairing. Once successfully paired, you will hear a confirmation sound, and the Bluetooth indicator light will become solid.
5. The speaker will automatically reconnect to the last paired device when powered on, if the device is within range and Bluetooth is enabled.

3. Operating Instructions

3.1 Audio Playback

Once connected via Bluetooth, you can play audio from your device. The speaker delivers 15W of dynamic audio, providing crisp highs, rich mids, and powerful bass.

15W (20W Peak) Dynamic Audio

Enveloping you in crisp highs, vibrant mids, and deep bass, free from distortion.



Figure 3.1: An exploded view illustrating the internal components of the speaker, highlighting its 15W dynamic audio capabilities.

3.2 Controls

- **Volume Up (+):** Short press to increase volume.
- **Volume Down (-):** Short press to decrease volume.
- **Play/Pause (▶):** Short press to play or pause audio.
- **Next Track:** Long press the Volume Up (+) button.
- **Previous Track:** Long press the Volume Down (-) button.
- **Power Button:** Press and hold to power on/off. Short press may cycle through modes (Bluetooth, AUX, TF Card) or control light modes, depending on model specifics.

3.3 Dynamic Light Display

The speaker features an integrated LED light display that synchronizes with your music. The lights pulsate and change color, creating an immersive visual experience. Specific button presses (often the power button or a dedicated light button if present) may cycle through different light modes or turn the lights on/off.

3.4 Hands-Free Calling

With the integrated microphone, you can answer calls directly through the speaker when connected via Bluetooth.

- **Answer Call:** Short press the Play/Pause button.
- **End Call:** Short press the Play/Pause button.
- **Reject Call:** Long press the Play/Pause button.

3.5 Auxiliary (AUX) Input

Connect non-Bluetooth devices using a 3.5mm audio cable (not included) to the AUX input port. The speaker will automatically switch to AUX mode or may require a short press of the power/mode button.

3.6 TF Card Playback

Insert a TF (microSD) card loaded with audio files into the designated slot. The speaker will automatically detect the card and begin playback, or you may need to switch to TF card mode using the mode button.

4. Maintenance

4.1 Cleaning

Wipe the speaker with a soft, dry, lint-free cloth. Do not use abrasive cleaners, alcohol, benzene, or other chemical solvents, as these may damage the surface or internal components.

4.2 Storage

Store the speaker in a cool, dry place away from direct sunlight, extreme temperatures, and excessive humidity. If storing for an extended period, charge the battery periodically (e.g., every 3 months) to maintain battery health.

4.3 Waterproof Feature

The speaker is designed with a waterproof feature. However, it is not intended for submersion. Ensure all ports are securely closed before exposure to water splashes or light rain. Do not expose to saltwater or other chemicals.



Figure 4.1: The CHIFENCHY speaker shown with water splashes, illustrating its waterproof design for outdoor and versatile use.

5. Troubleshooting

Problem	Possible Cause	Solution
Speaker does not power on.	Low battery; Power button not pressed correctly.	Charge the speaker fully. Press and hold the Power button for 3-5 seconds.
Cannot pair with Bluetooth device.	Speaker not in pairing mode; Device Bluetooth off; Too far from speaker; Interference.	Ensure speaker is in pairing mode (flashing light). Turn Bluetooth on/off on your device. Move device closer to speaker. Turn off other Bluetooth devices.
No sound from speaker.	Volume too low; Incorrect input mode; Device not playing audio.	Increase speaker and device volume. Check if speaker is in correct mode (Bluetooth, AUX, TF). Ensure audio is playing on your device.

Problem	Possible Cause	Solution
Light display not working.	Light mode off; Speaker malfunction.	Try pressing the power button or a dedicated light button (if available) to cycle light modes. If issue persists, contact support.
Poor audio quality.	Device too far; Obstructions; Low battery.	Move device closer to speaker. Remove obstructions. Charge the speaker.

6. Specifications

Model Name	A46-6
Brand	CHIFENCHY
Speaker Type	Single Speaker
Special Feature	Waterproof
Recommended Uses	For smartphones or tablets
Quantity of Units	1.0 unit
Manufacturer	CHIFENCHY
Average Battery Life	15 Hours
Battery Composition	Lithium Ion
Rechargeable Battery Included	Yes
Product Dimensions	7.62 x 7.62 x 9.65 cm; 331 g
ASIN	B0CX1DPVGT
First Available Date	3 April 2024
Max Speaker Output Power	15 Watts
Connectivity Technology	Bluetooth
Mounting Type	Tabletop

7. Warranty & Support

7.1 Warranty Information

Specific warranty details for the CHIFENCHY Portable Bluetooth Speaker are not provided in this manual. Please refer to the warranty card included with your product packaging or visit the official CHIFENCHY website for the most up-to-date warranty policy and registration information. Keep your purchase receipt as proof of purchase for warranty claims.

7.2 Customer Support

For technical assistance, troubleshooting beyond this manual, or service inquiries, please contact CHIFENCHY customer support. Contact information can typically be found on the product packaging, the official CHIFENCHY website, or through your retailer.

When contacting support, please have your product model (A46-6) and ASIN (B0CX1DPVGT) ready.

© 2024 CHIFENCHY. All rights reserved.

This manual is for informational purposes only. Specifications are subject to change without notice.

Related Documents - A46-6



[JBL Charge 6 Portable Bluetooth Speaker User Guide and Specifications](#)

Comprehensive guide for the JBL Charge 6 portable Bluetooth speaker, covering setup, features, technical specifications, and important safety information.



[Harman Kardon ONYX STUDIO 6](#)

Harman Kardon ONYX STUDIO 6

Bluetooth



[JBL Flip 6 Quick Start Guide: Features, Setup, and Specifications](#)

Your essential guide to the JBL Flip 6 portable Bluetooth speaker. Learn how to pair, play, use PartyBoost, the JBL Portable app, charge your device, understand its IP67 rating, and view full technical specifications.



[JBL Flip 6 Quick Start Guide](#)

A quick start guide for the JBL Flip 6 portable waterproof speaker, covering unboxing, Bluetooth pairing, playback, app usage, charging, and technical specifications.

 The image shows the front cover of the JBL Flip 6 Quick Start Guide. It features a photograph of two people walking on a beach at night, holding torches. The text "QUICK START GUIDE" is printed vertically on the left, and "FLIP 6" is on the right.	<p>JBL Flip 6 Quick Start Guide: Setup, Features, and Specifications</p> <p>Your essential guide to the JBL Flip 6 portable Bluetooth speaker. Learn how to set up, pair via Bluetooth, play music, use PartyBoost, download the JBL Portable app, charge your device, and understand its technical specifications and safety features.</p>
 The image shows the front cover of the JBL Flip 6 Quick Start Guide. It features a photograph of two people walking on a beach at night, holding torches. The text "QUICK START GUIDE" is printed vertically on the left, and "FLIP 6" is on the right.	<p>JBL Flip 6 Quick Start Guide</p> <p>A quick start guide for the JBL Flip 6 portable speaker, covering setup, Bluetooth pairing, playback, PartyBoost, app usage, charging, and waterproof/dustproof features.</p>