

[Manuals.plus](#) /

> [Armorcope](#) /

> Armorcope Pet Camera, 2K HD Dog Camera with Phone APP + Security Cameras Wireless Outdoor, Battery Powered 1080P Color Night Vision User Manual

Armorcope B0CX1NJG4J

Armorcope Pet & Security Camera User Manual

Model: B0CX1NJG4J

INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, and maintenance of your Armorcope Pet Camera and Wireless Outdoor Security Camera system. This system includes a 2K HD indoor pet camera with pan/tilt functionality and a 1080P battery-powered outdoor security camera with color night vision, designed to monitor your pets, baby, and home security.



Image: The Armorclope camera system, showing both the indoor pan/tilt pet camera and the outdoor battery-powered security camera.

SAFETY INFORMATION

Please read this section carefully before using the product to ensure safe and proper operation.

- Do not expose the camera to extreme temperatures, humidity, or direct sunlight.
- Use only the specified power adapter and charging cable.
- Keep the camera and its accessories out of reach of children and pets.
- Avoid placing the camera near strong magnetic fields.
- Do not attempt to disassemble or modify the camera.
- Ensure proper ventilation around the camera during operation.

PRODUCT FEATURES

- **Full 2K HD and 355° Pan/Tilt:**The indoor pet camera offers 2K HD resolution with 8X optical zoom and a wide range of motion (355° horizontal, 100° vertical) for comprehensive coverage. Works with 2.4GHz WiFi.

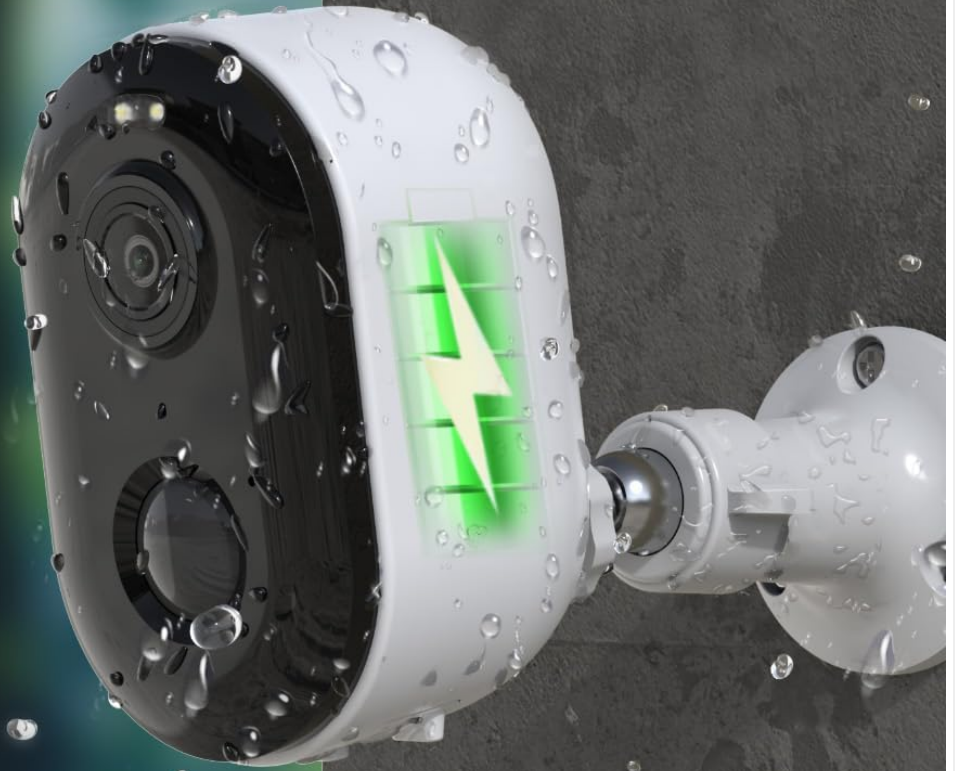 


Image: Comparison of 1080P and 2K resolution, demonstrating the pan and tilt capabilities of the indoor camera.

- **Smart Motion Detection Alarm and Auto Tracking:**Supports dog and human detection. When motion is detected, the app sends notifications, and the camera can auto-track the movement.
- **100% Wireless & Rechargeable & Waterproof:** The outdoor security camera is completely wireless, powered by a built-in rechargeable battery (1-5 months use per charge). Its IP66 waterproofing ensures operation in various weather conditions.

100%Wireless & Waterproof

With 5000 mAh rechargeable battery and IP66 waterproof, it can be mounted virtually anywhere!



Rainproof



Sunproof



Snowproof



-4°F/-20°C

122°F/50°C



- **PIR/AI Motion Detection & Real-time Alarm Notification:** Utilizes PIR motion detection and advanced AI to differentiate between people, pets, packages, and vehicles, reducing false alarms and sending real-time alerts.

PIR/AI Motion Detection & Real-time Alarm Notification

Advanced echnology to monitor activity in real time, support siren, flashing white light to drive away strangers



Image: A visual representation of the camera detecting motion and sending an alert to a smartphone, highlighting the AI detection capabilities.

- **Lifetime Free 3-day Rolling Cloud Storage & SD/Cloud Storage:** Supports local SD card storage (up to 128GB) and offers free 3-day rolling cloud storage without subscription. A 30-day free trial for premium features is also available.
- **Two-Way Audio:** Communicate with pets or family members through the camera's built-in speaker and microphone.

Two-way Audio

Timely communication, accompany your love anywhere anytime.



Image: A dog sitting in a living room with speech bubbles indicating two-way audio communication via the camera and a smartphone.

- **1080P HD Color Night Vision:** Equipped with 2 PIR LEDs and 2 white lights for clear color night vision even in dim light, with a range of up to 32ft.

1080P HD Color Night Vision

With 2 PIR led and 2 white lights, you can see amazing night vision even in dim light

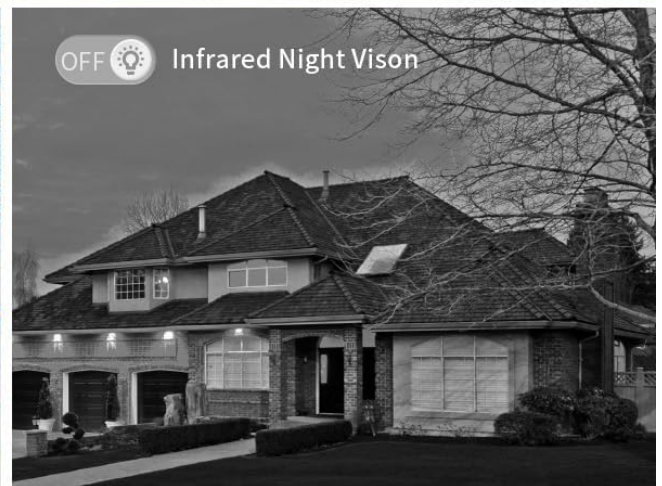 
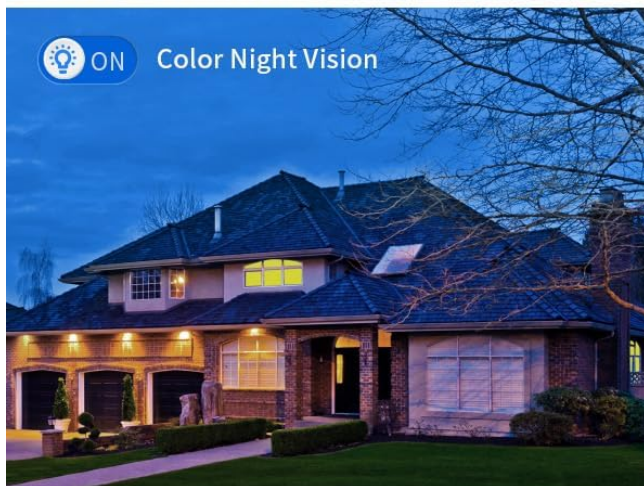 


Image: A comparison showing a house at night with color night vision enabled versus infrared night vision, demonstrating the clarity of color night vision.

- **Built-in 5000mAh Large Battery:** The outdoor camera features a high-capacity rechargeable battery, capable of triggering up to 3,500 times on a single charge.

Built-in 5000mAh Large Battery

A single charge can trigger up to 3,500 times

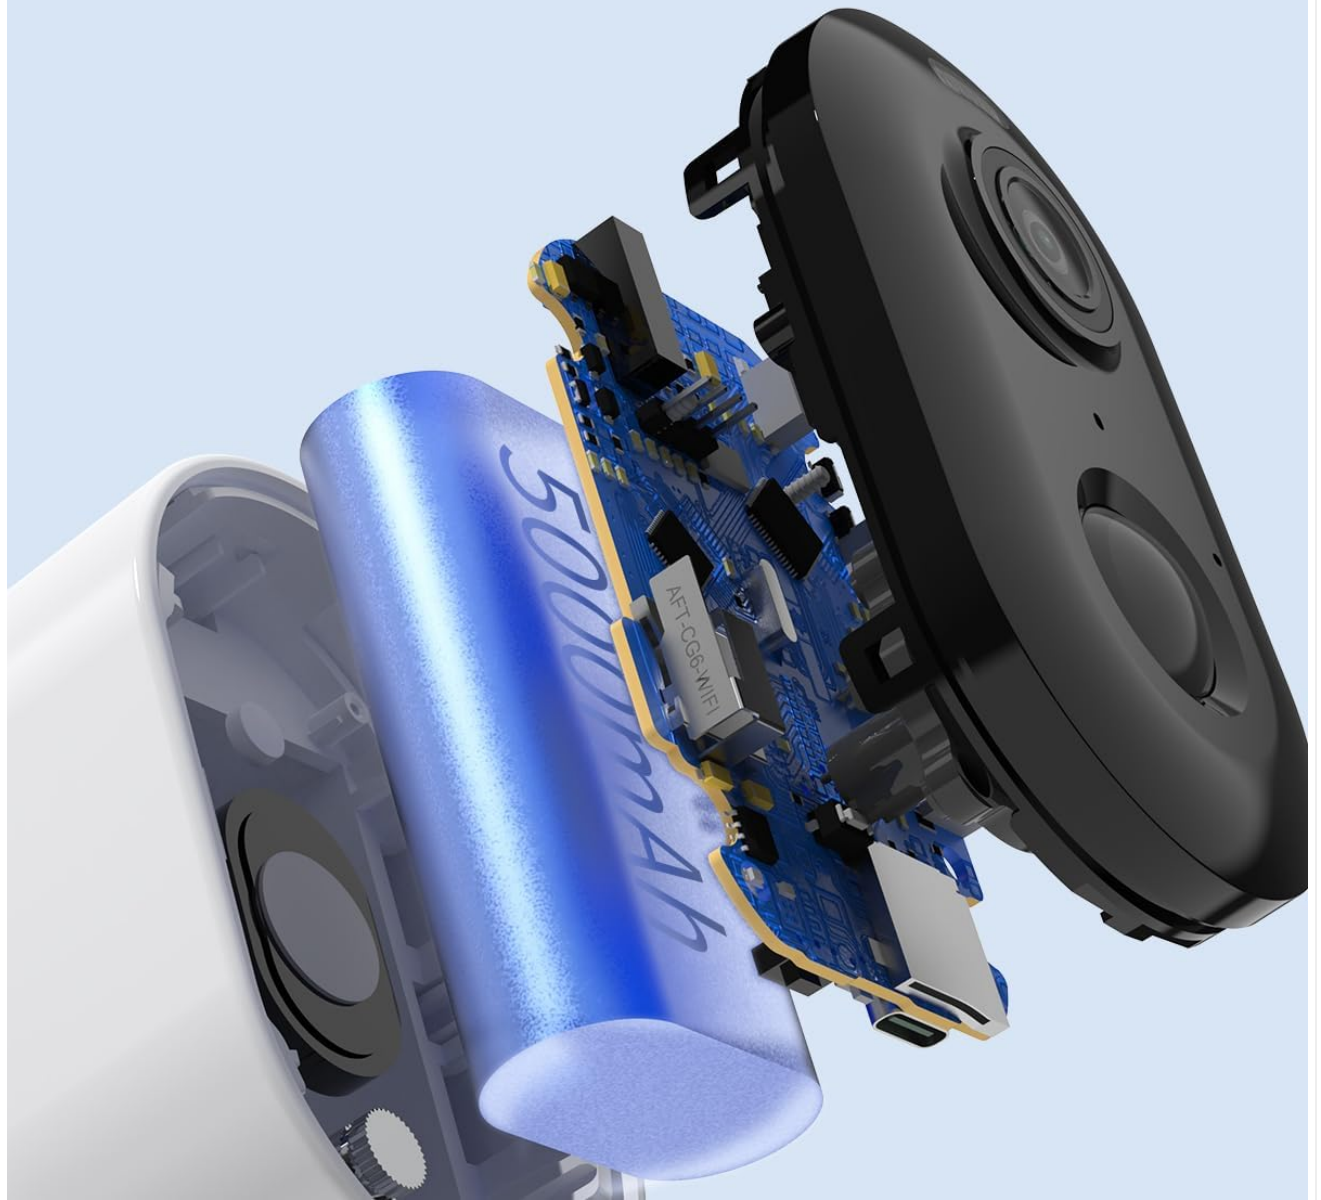 


Image: An exploded view of the outdoor camera, highlighting its internal 5000mAh rechargeable battery.

- **One-Click Call:** The indoor camera supports a one-click call function, allowing users to initiate a call from the camera.



Image: A baby's hand reaching for the indoor camera, with a speech bubble indicating a "Mom, I miss you" message, demonstrating the one-click call feature.

SETUP GUIDE

1. App Download and Account Creation

1. Search for the "VicoHome" app (or specified app in packaging) on your smartphone's app store (iOS App Store or Google Play Store).
2. Download and install the app.
3. Open the app and follow the on-screen instructions to create a new account or log in if you already have one.

2. Camera Pairing (2.4GHz WiFi Only)

- Ensure your smartphone is connected to a 2.4GHz Wi-Fi network. The cameras do not support 5GHz Wi-Fi.
- Power on the camera you wish to pair. For the outdoor camera, ensure it is charged.
- In the app, tap the "+" icon to add a new device.

- Select the appropriate camera model from the list.
- Follow the app's instructions to connect the camera to your Wi-Fi network. This usually involves scanning a QR code displayed on your phone with the camera lens.
- Once connected, name your camera and complete the setup process.

3. Mounting the Outdoor Camera

- Choose a suitable location for the outdoor camera, ensuring good Wi-Fi signal strength and a clear view of the area you wish to monitor.
- Use the supplied bracket and screws to securely mount the camera to a wall or other stable surface.
- Adjust the camera angle to cover the desired monitoring zone.

4. Charging the Outdoor Camera

- Before first use, fully charge the outdoor camera using the provided USB cable and a compatible power adapter.
- The charging indicator light on the camera will change color when fully charged.

OPERATING INSTRUCTIONS

1. Live View and Monitoring

- Open the app and select the camera you wish to view from the device list.
- The live video feed will appear.

2. Pan/Tilt Control (Indoor Camera Only)

- While in live view for the indoor camera, use the directional controls on the app interface to pan (horizontal) and tilt (vertical) the camera lens.

3. Two-Way Audio

- In live view, tap the microphone icon to speak through the camera's speaker. Release to listen.

4. Motion Detection Settings

- Navigate to the camera settings within the app.
- Adjust motion detection sensitivity, detection zones, and human/pet detection preferences.
- Enable or disable real-time alarm notifications.

5. Recording and Playback

- Recordings triggered by motion or manual recording can be accessed via the app's playback section.
- Review footage stored on the SD card or in the cloud.

6. Night Vision Modes

- The outdoor camera supports both infrared (black and white) and color night vision.
- You can typically switch between modes in the camera settings or allow the camera to automatically select based on ambient light.

7. One-Click Call (Indoor Camera Only)

- Press the designated button on the indoor camera to initiate a call to the linked smartphone app.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the camera lens and body. Do not use harsh chemicals or abrasive cleaners.
- **Battery Care (Outdoor Camera):** To prolong battery life, avoid fully discharging the battery frequently. Recharge the camera when the battery level is low. If storing for extended periods, charge the battery to about 50% and store in a cool, dry place.
- **Firmware Updates:** Regularly check the app for available firmware updates for your cameras. Updates often include performance improvements and security enhancements. Follow the app's instructions for updating.
- **SD Card Management:** If using an SD card, periodically check its status in the app. Format the SD card if you experience recording issues.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Camera won't connect to Wi-Fi.	Incorrect Wi-Fi password; 5GHz network used; camera too far from router; weak signal.	Ensure you are connecting to a 2.4GHz Wi-Fi network. Verify the Wi-Fi password. Move the camera closer to the Wi-Fi router or use a Wi-Fi extender. Restart your router and the camera.
Poor video quality.	Weak Wi-Fi signal; dirty lens; insufficient lighting.	Improve Wi-Fi signal strength. Clean the camera lens with a soft cloth. Ensure adequate lighting for optimal image quality, especially at night.
Motion detection not working or too many false alarms.	Incorrect sensitivity settings; detection zone not configured; environmental factors (e.g., moving branches).	Adjust motion detection sensitivity in the app. Configure specific detection zones to exclude irrelevant areas. Ensure AI detection (human/pet) is enabled if desired.
Outdoor camera battery drains quickly.	Frequent motion events; extreme temperatures; continuous live view.	Reduce motion detection sensitivity or frequency of recordings. Minimize continuous live viewing. Ensure the camera is operating within its specified temperature range.

SPECIFICATIONS

Feature	Detail
Brand	Armorcope
Model	B0CX1NJG4J
Compatible Devices	Smartphone
Power Source	Battery Powered
Connectivity Protocol	Wi-Fi (2.4GHz)
Mounting Type	Wall Mount
Video Capture Resolution	1080p, 2K
Wireless Communication Technology	Wi-Fi
Alert Type	Motion Only
Room Type	Hallway, Living Room, Study Room
Video Capture Format	MPEG-4
International Protection Rating	IP66 (Outdoor Camera)
Recommended Uses For Product	Pet Monitoring, Home Security
Special Feature	2-Way Audio, Color Night Vision, AI Motion Detection, Pan/Tilt (Indoor)
Indoor/Outdoor Usage	Outdoor (Battery Camera), Indoor (Pan/Tilt Camera)
Battery Capacity	5000mAh (Outdoor Camera)
Storage	SD Card (up to 128GB), Cloud Storage

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the official Armorcope website or contact their customer service directly. Details are typically provided on the product packaging or the brand's official online channels.

Online Support: Visit the Armorcope official website for FAQs, troubleshooting guides, and contact information.

Customer Service: Refer to your purchase documentation for specific customer service contact details.

OFFICIAL PRODUCT VIDEOS

No official product videos from the seller were found for this product.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question