

Jesebang BD86

Jesebang Wireless Earbuds User Manual

Model: BD86 | Brand: Jesebang

1. INTRODUCTION

Thank you for choosing Jesebang Wireless Earbuds. These earbuds are designed to provide a superior audio experience with advanced features such as Bluetooth 5.3 connectivity, Environmental Noise Cancellation (ENC) for clear calls, and a long-lasting battery. This manual will guide you through the setup, operation, and maintenance of your new earbuds.

2. WHAT'S IN THE BOX

- 1 x Fast Charging Case
- 2 x Wireless Headsets (Earbuds)
- 1 x Type-C Charging Cable
- 1 x Instruction Manual



Image: All items included in the Jesebang Wireless Earbuds package.

3. PRODUCT OVERVIEW

Familiarize yourself with the components of your Jesebang Wireless Earbuds and charging case.



Image: Detailed diagram of the earbuds and charging case components.

- **Mic 1 & Mic 2:** For voice input during calls.
- **LED Indicator:** Shows earbud status (e.g., charging, connected).
- **Charging PIN:** Connects earbuds to the case for charging.
- **LED Dual Digital Display:** Shows battery levels for both earbuds and the charging case.
- **Type-C Input:** Port for charging the case.

4. SETUP

4.1 Charging Your Earbuds and Case

Before first use, fully charge both the earbuds and the charging case. Use the provided Type-C charging cable.

- **Earbud Charging Time:** Approximately 1 hour for a full charge.
- **Case Charging Time:** Approximately 1 hour for a full charge.
- **Earbud Playtime:** Up to 6 hours on a single charge.
- **Total Playtime with Case:** Up to 30 hours.

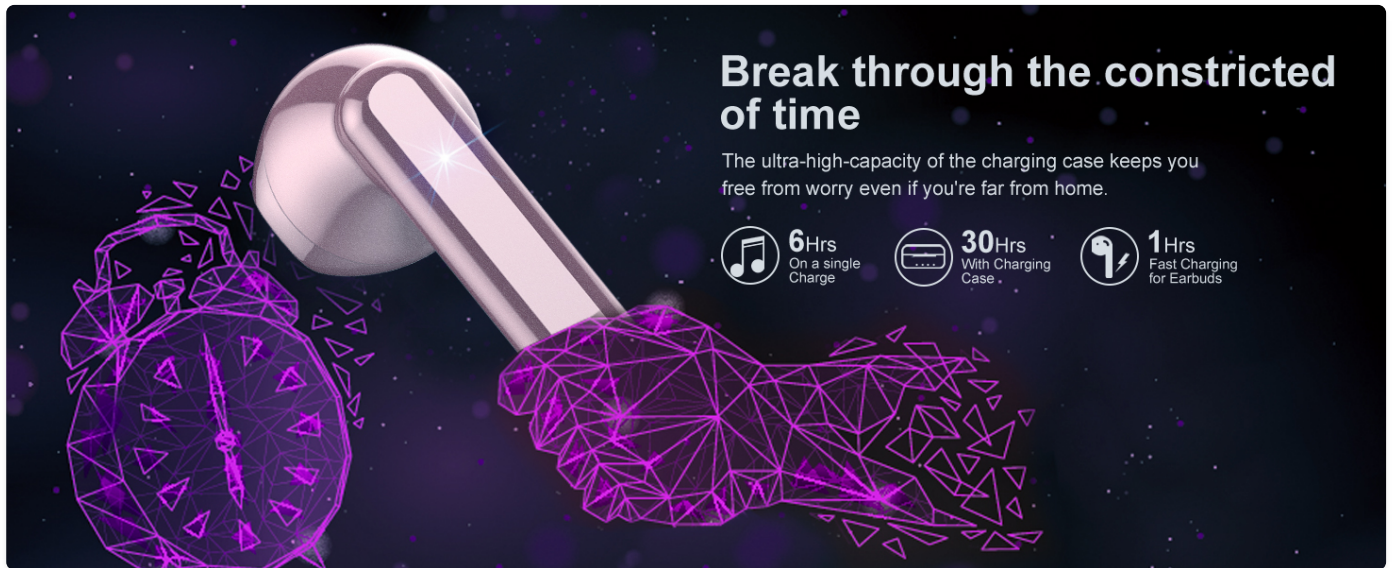 


Image: The intelligent LED digital display shows real-time battery levels.



Image: Battery life and charging capabilities.

4.2 Pairing with Your Device

The Jesebang BD86 earbuds utilize advanced Bluetooth 5.3 technology for a stable and fast connection.

1. Ensure the earbuds are charged.
2. Open the charging case. The earbuds will automatically enter pairing mode.
3. On your device (smartphone, tablet, laptop), go to Bluetooth settings.

- 4. Search for available devices and select "BD86" from the list.
- 5. Once connected, you will hear a confirmation tone, and the LED indicator on the earbuds will change.

The Bluetooth range is up to 15 meters (approximately 49 feet).

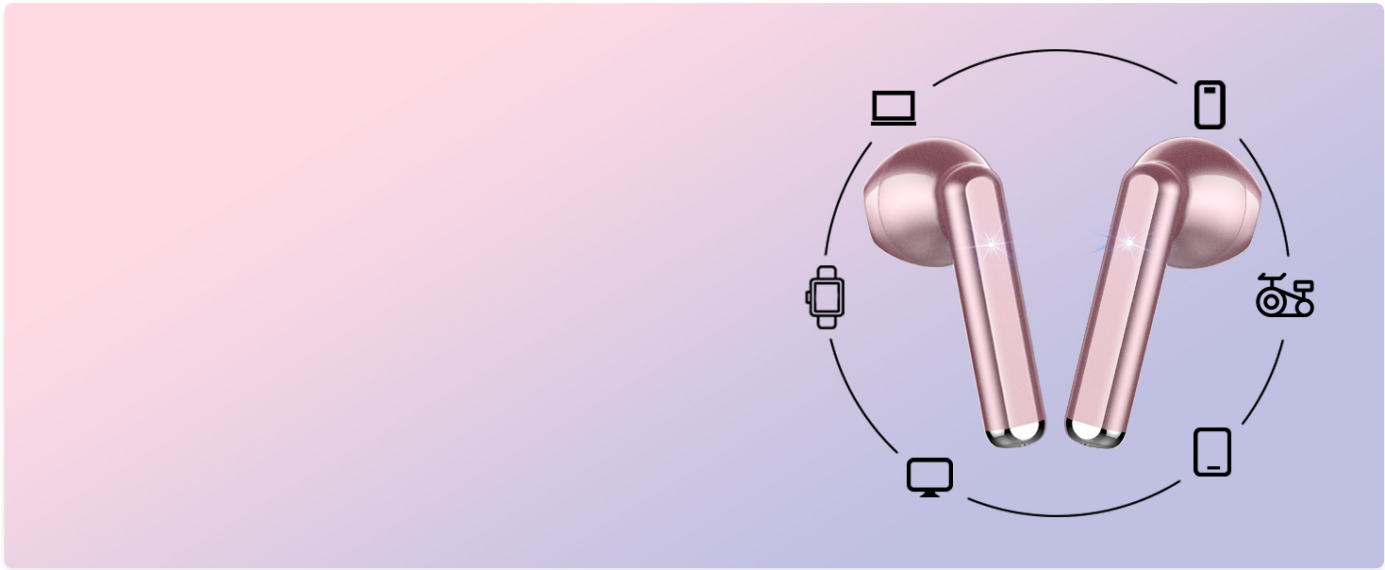 


Image: Bluetooth pairing process on a smartphone.

5. OPERATING YOUR EARBUDS

5.1 Smart Touch Controls

The BD86 earbuds feature high-sensitivity touch controls for easy management of your audio and calls.



Image: Touch control functions for the earbuds.

Gesture	Function
Tap L/R Earbud (x1)	Answer Call

Gesture	Function
Tap L/R Earbud (x2)	Play/Pause Music
Tap L/R Earbud (2 seconds)	Reject Call / Switch Song (Next/Previous)
Tap L/R Earbud (x3)	Activate Voice Assistant (Siri, Google Assistant)
Tap L/R Earbud (5 seconds)	Power On/Off

5.2 Immersive Sound and Call Clarity

Equipped with 14.2mm dynamic drivers, these headphones deliver rich, balanced audio. The integrated ENC noise reduction technology ensures your voice is crystal clear during calls by suppressing up to 95% of background noise.

A New Acoustic Paradigm

It far exceed your hearing range — from 14 Hz to 48 kHz.



13MM Drivers



ENC Noise Cancelling



HD Call

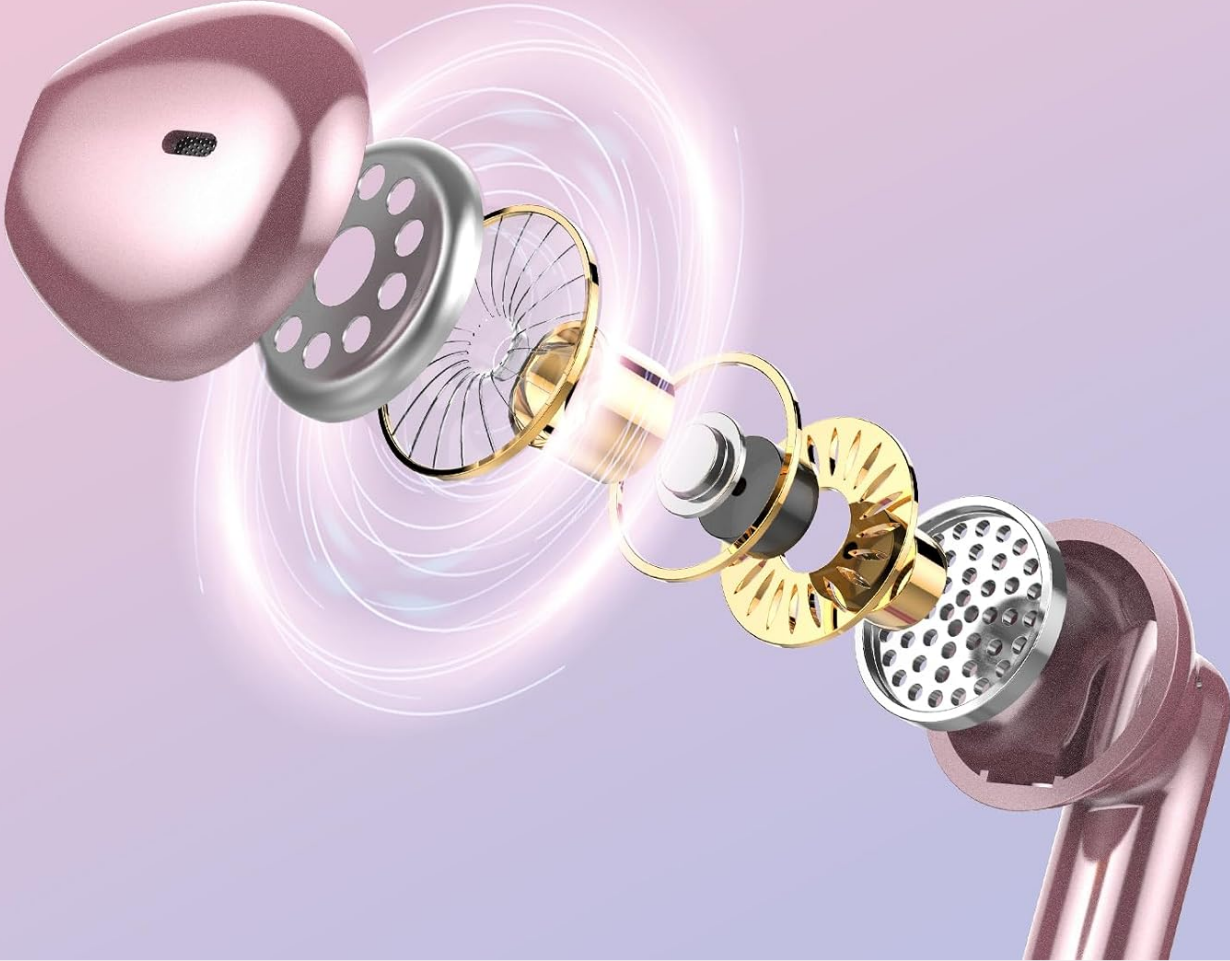 


Image: Internal structure highlighting acoustic components and noise cancellation.

5.3 Comfortable Fit

Weighing just 3.3 grams each, these wireless earphones feature an ultra-light and ergonomic design, ensuring comfort even during prolonged wear. They are designed to fit snugly without causing discomfort.

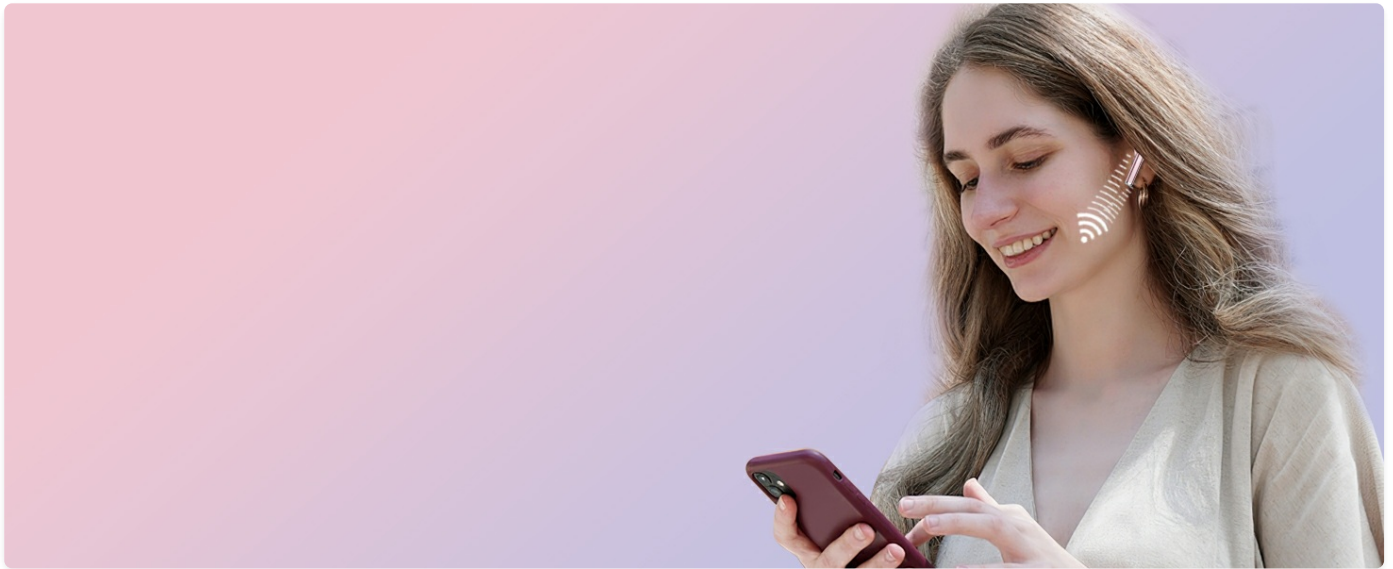 


Image: Earbuds designed for comfortable, long-term wear.

5.4 IP7 Waterproof Rating

The earbuds feature a sealed shell and an IP7 waterproof rating, providing effective protection against sweat and rain. This makes them suitable for workouts and outdoor activities.

IP7 Dust and Water Resistance

IP7 rating means that you can enjoy music with your BD86 in daily life.



Image: IP7 waterproof rating for protection against sweat and rain.

6. MAINTENANCE

To ensure the longevity and optimal performance of your Jesebang Wireless Earbuds, follow these maintenance guidelines:

- **Cleaning:** Regularly wipe the earbuds and charging case with a soft, dry, lint-free cloth. For stubborn dirt, slightly dampen the cloth with water. Do not use harsh chemicals or abrasive materials.
- **Charging Contacts:** Periodically clean the charging pins on the earbuds and inside the case with a dry cotton swab to ensure good connection.
- **Storage:** When not in use, store the earbuds in their charging case to protect them from dust and damage. Store in a cool, dry place away from extreme temperatures.

- **Avoid Water Exposure:** While IP7 rated, avoid submerging the earbuds in water or exposing them to high-pressure water jets. Dry them thoroughly if they get wet.
- **Battery Care:** To preserve battery health, avoid fully draining the battery frequently. Charge them regularly.

7. TROUBLESHOOTING

If you encounter any issues with your earbuds, please refer to the following common problems and solutions:

Problem	Possible Solution
Earbuds not pairing with device	◦ Ensure earbuds are charged and in pairing mode (LED blinking). ◦ Turn off and on Bluetooth on your device. ◦ Forget "BD86" from your device's Bluetooth list and try pairing again. ◦ Restart your device.
No sound from one or both earbuds	◦ Check earbud battery levels. ◦ Ensure earbuds are properly seated in your ears. ◦ Clean any debris from the earbud speaker mesh. ◦ Reconnect the earbuds to your device.
Charging case not charging	◦ Ensure the Type-C cable is securely connected to both the case and the power source. ◦ Try a different charging cable or power adapter. ◦ Clean the Type-C port on the case.
Poor call quality	◦ Ensure microphones are not obstructed. ◦ Move closer to your connected device to improve signal strength. ◦ Check for excessive background noise.
Touch controls not responding	◦ Ensure your fingers are clean and dry. ◦ Try resetting the earbuds (refer to manufacturer's specific reset instructions if available, otherwise place back in case and close/open).

8. SPECIFICATIONS

Feature	Detail
---------	--------

Feature	Detail
Model Name	BD86
Connectivity Technology	Wireless (Bluetooth)
Bluetooth Version	5.3
Bluetooth Range	15 Meters
Audio Driver Type	Dynamic Driver
Audio Driver Size	14.2 Millimeters
Frequency Range	20 Hz - 20,000 Hz
Battery Life (Earbuds)	6 Hours (single charge)
Carrying Case Battery Life	30 Hours (total playtime)
Carrying Case Battery Capacity	300 Milliamp Hours
Charging Time (Earbuds)	1 Hour
Charging Time (Case)	1 Hour
Water Resistance Level	IP7 Waterproof
Control Type	Touch Control
Item Weight	3.2 ounces
Product Dimensions	2.17 x 1.77 x 0.71 inches
Compatible Devices	Cellphones, Telephones, Laptops

9. WARRANTY AND SUPPORT

Jesebang stands behind the quality of its products.

- **Warranty:** Your Jesebang Wireless Earbuds come with a 2-year warranty from the date of purchase. Please retain your proof of purchase for warranty claims.
- **Customer Service:** For any inquiries, technical support, or warranty claims, please contact Jesebang customer service. We aim to provide a 24-hour customer service response.
- **Online Support:** Visit the official Jesebang Store on Amazon for more information and support:[Jesebang Store](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question