

[Manuals.plus](#) /

> [Carlett](#) /

> Carlett Pack Classic Duo 4-Wheel Folding Shopping Cart User Manual

Carlett LETT430-C1+H

Carlett Pack Classic Duo 4-Wheel Folding Shopping Cart User Manual

Model: LETT430-C1+H

PRODUCT OVERVIEW

The Carlett Classic Duo is a versatile 4-wheel shopping cart designed for convenience and mobility. It can be used as a 4-wheel cart for easy pushing or converted to a 2-wheel cart for pulling up stairs or over obstacles. Its 360° swivel front wheels enhance maneuverability, making it suitable for various shopping environments.

This cart features a removable main bag with a generous 53-liter capacity and a maximum load capacity of 25 kg. An integrated 10-liter insulated bag is perfect for keeping perishable items cool. Additional storage includes a side compartment and a rear pocket for personal belongings.

The Carlett Classic Duo is designed for compact storage, folding easily to dimensions of 42 x 30 x 62 cm. Its wheels and bag are also removable, further reducing its footprint for storage in small spaces, car trunks, or closets.

A complimentary hook is included, which attaches easily to any handlebar with a practical Velcro strap, allowing you to hang additional bags or items.

SETUP INSTRUCTIONS

- 1. Unfolding the Frame:** Place the cart on a flat surface. Release any locking mechanisms and gently pull the handle upwards until the frame fully extends and locks into place. Ensure all joints are securely engaged.



Image: The cart fully unfolded, ready for use.

- 2. Attaching the Wheels:** If the wheels are detached, align each wheel with its axle on the cart frame. Push firmly until you hear a click, indicating it is securely locked. Ensure all four wheels rotate freely.



Image: Detail of the cart's wheels, illustrating how they attach to the frame.

- 3. Attaching the Bag:** Position the main shopping bag onto the cart frame. Secure it using the straps or fasteners provided, typically located at the top and sides of the frame. Ensure the bag is stable and will not shift during use.
- 4. Adjusting the Handle:** The handle height can be adjusted for comfortable pushing or pulling. Locate the adjustment buttons or levers on the handle mechanism. Press or release them to extend or retract the handle to your desired height, then ensure it locks securely.



Image: The adjustable handle of the cart, showing its range of motion.

OPERATING INSTRUCTIONS

Using the Cart

- **4-Wheel Mode:** For easy pushing and maneuvering, especially on flat surfaces. The 360° swivel front wheels allow for smooth navigation in tight spaces.





Image: A person comfortably pushing the cart in its 4-wheel configuration.

- **2-Wheel Mode:** To convert to 2-wheel mode for pulling, tilt the cart back so that only the two rear wheels are on the ground. This mode is useful for navigating curbs, stairs, or uneven terrain.



Image: A person pulling the cart, demonstrating its 2-wheel functionality.

Loading the Bags

- **Main Shopping Bag (53L):** Place your groceries and other items inside the main compartment. Distribute weight evenly to maintain balance. Do not exceed the maximum load capacity of 25 kg.
- **Insulated Bag (10L):** Use the front insulated compartment for temperature-sensitive items like frozen foods, dairy, or fresh produce. Close the zipper securely to maintain temperature.
- **Side and Rear Pockets:** Utilize these pockets for smaller items, personal belongings, or frequently accessed items like keys, wallet, or phone.





Image: The rear of the cart, highlighting the convenient back pocket for storage.

- **Accessory Hook:** Attach the provided hook to the cart's handle using its Velcro strap. This allows you to hang additional shopping bags or a handbag, freeing up your hands.



Image: The accessory hook attached to the cart's handle, demonstrating its use.

Folding for Storage

To fold the cart, ensure the bag is empty and removed if desired. Release the locking mechanisms on the frame (usually near the base or handle joints) and collapse the frame. The wheels can also be removed for even more compact storage.



Image: The cart in its folded state, illustrating its compact design for storage.

MAINTENANCE

- **Cleaning the Bag:** The removable bag can be cleaned with a damp cloth and mild soap. For deeper cleaning, hand wash the fabric bag and allow it to air dry completely before reattaching. Do not machine wash or tumble dry.
- **Cleaning the Frame and Wheels:** Wipe the alloy steel frame with a damp cloth. Clean the wheels regularly to remove dirt, debris, or hair that may impede smooth rolling. A small brush can be used for hard-to-reach areas.
- **Storage:** Store the cart in a dry place, away from direct sunlight and extreme temperatures, to prolong its lifespan. Ensure it is clean and dry before storing.
- **Inspecting Components:** Periodically check all screws, joints, and moving parts to ensure they are secure and functioning correctly. Tighten any loose fasteners as needed.

TROUBLESHOOTING

- **Wheels Not Rolling Smoothly:** Check for any debris (e.g., hair, lint, small stones) caught in the wheel axles. Clean the wheels and axles thoroughly. Ensure the wheels are properly attached and locked into place.
- **Cart Not Folding/Unfolding Easily:** Ensure all locking mechanisms are disengaged before attempting to fold or unfold. Check for any obstructions in the folding joints. Apply gentle, even pressure.
- **Bag Not Staying Secure:** Verify that all straps and fasteners securing the bag to the frame are correctly attached and tightened. If the bag is overfilled, it may affect stability.
- **Handle Adjustment Issues:** Ensure the adjustment buttons or levers are fully pressed or released when attempting to change the handle height. Check for any dirt or foreign objects preventing smooth movement.

SPECIFICATIONS

Brand	Carlett
Model Number	LETT430-C1+H
Color	Grey
Product Dimensions (L x W x H)	62 x 42 x 102 cm (24.4 x 16.5 x 40.2 inches)
Folded Dimensions (L x W x H)	42 x 30 x 62 cm (16.5 x 11.8 x 24.4 inches)
Item Weight	4.7 Kilograms (10.4 lbs)
Maximum Weight Capacity	25 Kilograms (55 lbs)
Main Bag Capacity	53 Liters
Insulated Bag Capacity	10 Liters
Material	Alloy steel, Rubber, Polyvinyl chloride (PVC)
Special Features	Foldable, Compact, Removable Bag, Removable Wheels

Handle Material	Metal (steel or aluminum)
Tire Type	Tubeless
Country of Origin	Spain

WARRANTY AND SUPPORT

Specific warranty information for the Carlett Pack Classic Duo is not provided in this manual. For details regarding warranty coverage, duration, and claims, please refer to the documentation included with your purchase or contact the retailer where the product was acquired.

For technical support, spare parts, or any other inquiries, please contact Carlett customer service or visit their official website. Contact information can typically be found on the product packaging or the manufacturer's website.