

[Manuals.plus](#) /

› [Merax](#) /

› Merax Retro Refrigerator Freezer Combination User Manual

Merax Retro Refrigerator Freezer Combination

Merax Retro Refrigerator Freezer Combination User Manual

Model: Retro Refrigerator Freezer Combination

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using your new Merax Retro Refrigerator Freezer Combination. Keep this manual for future reference.

- **Electrical Safety:** Ensure the appliance is connected to a properly grounded outlet. Do not use extension cords. Disconnect power before cleaning or maintenance.
- **Ventilation:** Allow adequate space around the refrigerator for proper ventilation to prevent overheating.
- **Refrigerant:** This appliance uses R600a refrigerant. Handle with care and ensure proper disposal according to local regulations. Do not damage the refrigerant circuit.
- **Child Safety:** Keep packaging materials out of reach of children. Supervise children to ensure they do not play with the appliance.
- **Flammable Materials:** Do not store explosive substances or highly flammable materials inside the appliance.

2. SETUP AND INSTALLATION

2.1 Unpacking

Carefully remove all packaging materials, including foam and adhesive tape. Inspect the appliance for any damage during transit. Report any damage to your retailer immediately.

2.2 Placement

Place the refrigerator on a firm, level surface. Ensure there is sufficient space (at least 10 cm) around the back and sides for proper air circulation. Avoid direct sunlight or heat sources.



FRESH & CRUNCHY

Kühlbox mit Kühlfunktion für länger frisches Gemüse

Image: Adjustable leveling feet. These feet ensure stable positioning on uneven surfaces.

Leveling: Use the adjustable leveling feet at the bottom of the appliance to ensure it is perfectly level. This helps reduce vibration and noise.

2.3 Initial Cleaning

Before first use, clean the interior and exterior of the refrigerator with a soft cloth and a mild detergent solution. Wipe dry thoroughly.

2.4 Power Connection

Plug the appliance into a dedicated, grounded 230V AC outlet. Allow the refrigerator to stand for at least 2-4 hours before plugging it in to allow the refrigerant to settle.

2.5 Door Reversal

The door hinge direction is reversible. Refer to the detailed instructions in the full manual for steps on how to reverse the door swing if needed.

3. OPERATING INSTRUCTIONS

3.1 Temperature Control

The refrigerator features a mechanical temperature control with seven settings. Turn the dial inside the refrigerator compartment to adjust the cooling intensity. Setting '1' is the warmest, and '7' is the coldest. A medium setting (e.g., '3' or '4') is generally recommended for normal use.



Image: Interior view with temperature control. The dial allows for precise temperature adjustment.

3.2 Flexible Interior Layout

The refrigerator compartment (38 liters) includes two adjustable shelves, allowing you to customize the storage space for various food items and beverages. The door also features compartments for eggs, bottles, and smaller items.



VIEL PLATZ FÜR ESSEN

**60 Liter Fassungsvermögen mit 22 Liter
Gefrierfach**



Image: Organized door storage. Dedicated compartments for eggs and bottles optimize space.



3.3 Freezer Compartment



Geordnete Anordnung

Mit Flaschenfach und
Fach für Eier,
Dosen oder Marmelade

Image: Freezer compartment. Provides 22 liters of space for frozen goods.



WACKELT NICHT

Individuell verstellbare Füße zum Ausgleich von Bodenunebenheiten

Image: Total capacity view. The 60-liter total volume (38L fridge, 22L freezer) offers ample storage.

4. MAINTENANCE AND CLEANING

4.1 Cleaning the Interior

Regularly clean the interior with a solution of mild detergent and warm water. Avoid abrasive cleaners or harsh chemicals. Remove shelves and drawers for thorough cleaning. Ensure the appliance is unplugged before cleaning.

4.2 Cleaning the Exterior

Wipe the exterior surfaces with a soft, damp cloth. For stubborn stains, use a mild detergent. Do not use abrasive pads or cleaners that could scratch the finish.

4.3 Defrosting

This appliance features an electric defrosting system. However, manual defrosting of the freezer compartment may still be necessary if ice buildup becomes excessive. To defrost, unplug the appliance, remove all food, and allow the ice to melt naturally. Do not use sharp objects to remove ice.

4.4 Power Saving Tips

- Do not place hot food directly into the refrigerator.
- Avoid opening the doors too frequently or for extended periods.
- Ensure the door seals are clean and intact.
- Place the appliance in a cool, well-ventilated area away from direct heat sources.

5. TROUBLESHOOTING

If you encounter any issues with your refrigerator, please refer to the following common problems and solutions before contacting customer service.

Problem	Possible Cause	Solution
Refrigerator does not operate.	No power, plug loose, circuit breaker tripped.	Check power supply, ensure plug is secure, reset circuit breaker.
Temperature is not cold enough.	Temperature setting too high, door opened frequently, poor ventilation.	Adjust temperature control to a colder setting, minimize door openings, ensure adequate ventilation.
Excessive noise.	Appliance not level, items vibrating inside.	Adjust leveling feet, ensure items inside are stable.
Water on floor.	Drain hole blocked, drip tray overflowing.	Clear drain hole, empty and clean drip tray.

6. SPECIFICATIONS

Below are the key technical specifications for your Merax Retro Refrigerator Freezer Combination.



Image: Product dimensions diagram. All measurements are in centimeters.

Feature	Specification
Brand	Merax
Model Name	Frigorifero retrò
Product Dimensions (D x W x H)	42D x 45.5W x 86.8H cm
Total Capacity	60 Liters
Refrigerator Net Capacity	38 Liters
Freezer Capacity	22 Liters
Number of Doors	2
Configuration	Side-by-Side

Feature	Specification
Color	Red
Installation Type	Freestanding
Defrost System	Electric Defrosting
Voltage	230V AC
Refrigerant	R600a
Adjustable Temperature Control	Yes
Door Hinge Reversibility	Yes
Energy Efficiency Class	F
Annual Energy Consumption	172 kWh/annum
Noise Level	45 dB



ENERG ⚡



Decobus Handel GmbH

BCD-86




172 kWh/annum



22 L



38 L

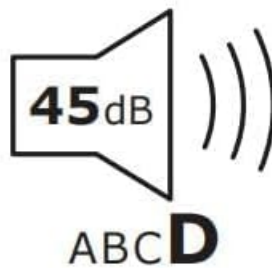

2019/2016

Image: Energy Label. Provides details on energy efficiency and capacity. For more information, visit eprel.ec.europa.eu/qr/1360715.

7. WARRANTY AND SUPPORT

This Merax appliance comes with a standard manufacturer's warranty. For detailed warranty information, please refer to the warranty card included with your product or contact your retailer.

For technical support, spare parts, or service inquiries, please contact Merax customer service through the contact information provided on the official Merax website or your purchase documentation.

© 2024 Merax. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CX1VZFW2>

More documents and user manuals: <https://manuals.plus/>