

## JKZTJOF MR23GA

# JKZTJOF MR23GA Magic Remote Control User Manual

For 2023 LG Smart TVs (Z3, G3, C3, B3 Series)

## 1. INTRODUCTION

---

This manual provides detailed instructions for the setup, operation, and maintenance of your JKZTJOF MR23GA Magic Remote Control. Please read this manual thoroughly before using the remote control to ensure proper functionality and to maximize your viewing experience with compatible LG Smart TVs.

## 2. PRODUCT OVERVIEW

---

The MR23GA Magic Remote Control is designed to enhance your interaction with compatible LG Smart TVs. It features an intelligent upgraded chip for quick response times, voice control capabilities, and dedicated shortcut buttons for popular streaming services.

### Key Features:

- **Voice Search:** Control your TV and search for content using voice commands.
- **Quick Response:** Operations are processed rapidly, ensuring a smooth user experience.
- **Shortcut Buttons:** Direct access to popular streaming applications.
- **Cursor, Click, and Scroll Function:** Navigate menus and content intuitively.
- **Durable Design:** Constructed from durable ABS material with an ergonomic design and soft, resilient buttons.





Image 2.1: Front and side view of the MR23GA Magic Remote Control, showcasing its ergonomic design and button layout.

# MR23GA Voice Remote for LG Magic 2023 Smart TV

Smart LCD LED HDTV UHD OLED HD TVs

2023 C3 B3 G3 Z3 OLED Series Smart Magic TV



Sensitive&Durable



TV Control



Quick Response



Simple Setup



Image 2.2: The MR23GA remote control highlighting its sensitive and durable build, TV control capabilities, quick response, and simple setup.

## 3. COMPATIBILITY

This remote control is compatible with the following 2023 LG Smart TV series:

- LG Z3 Series Smart TVs
- LG G3 Series Smart TVs
- LG C3 Series Smart TVs
- LG B3 Series Smart TVs
- Most 2023 LG LCD, LED, HDTV, UHD, OLED, HD, 4K, and 8K Smart TVs.

It is designed to replace original LG Magic Remote models such as MR650A, MR19BA, MR20GA, MR21GA, MR22GA, AKB75095307, AKB76037601, and AKB76037603.



Image 3.1: Visual representation of the MR23GA remote control's compatibility with several LG Magic Remote models.

## 4. SETUP INSTRUCTIONS

Follow these steps to pair your MR23GA Magic Remote Control with your LG Smart TV:

1. **Insert Batteries:** Open the battery compartment on the back of the remote control and insert two (2) AAA batteries (included). Ensure correct polarity.
2. **Reset Remote Control:** Press and hold the **[HOME]** and **[BACK]** buttons simultaneously for approximately 10 seconds. This action resets the remote control.
3. **Pair with TV:** Point the remote control towards your LG Smart TV. Press the **[Wheel (OK)]** button. A "Connected" message should appear on your TV screen, indicating successful pairing.

Once paired, the remote control will function as a direct replacement for your original LG Magic Remote.



Image 4.1: Step-by-step visual guide for pairing the MR23GA remote control with an LG Smart TV, showing the reset and connection steps.

## 5. OPERATING INSTRUCTIONS

### 5.1 Basic Navigation

- **Power Button** (⏻): Turns the TV on or off.
- **Number Buttons (0-9)**: Directly input channel numbers.
- **Volume Up/Down**: Adjusts the TV volume.
- **Channel Up/Down**: Changes TV channels.
- **Home Button** (🏠): Accesses the TV's home screen or main menu.
- **Back Button** (↶): Returns to the previous screen or menu.
- **Wheel (OK) Button**: Confirms selections and acts as a scroll wheel for navigation.

### 5.2 Voice Control

The MR23GA remote supports voice commands for convenient control. Press and hold the **[Microphone]** button and speak clearly into the remote. Release the button when finished speaking.

- Example commands: "Start music," "Volume set to mute," "Find a romance movie," "Play the next

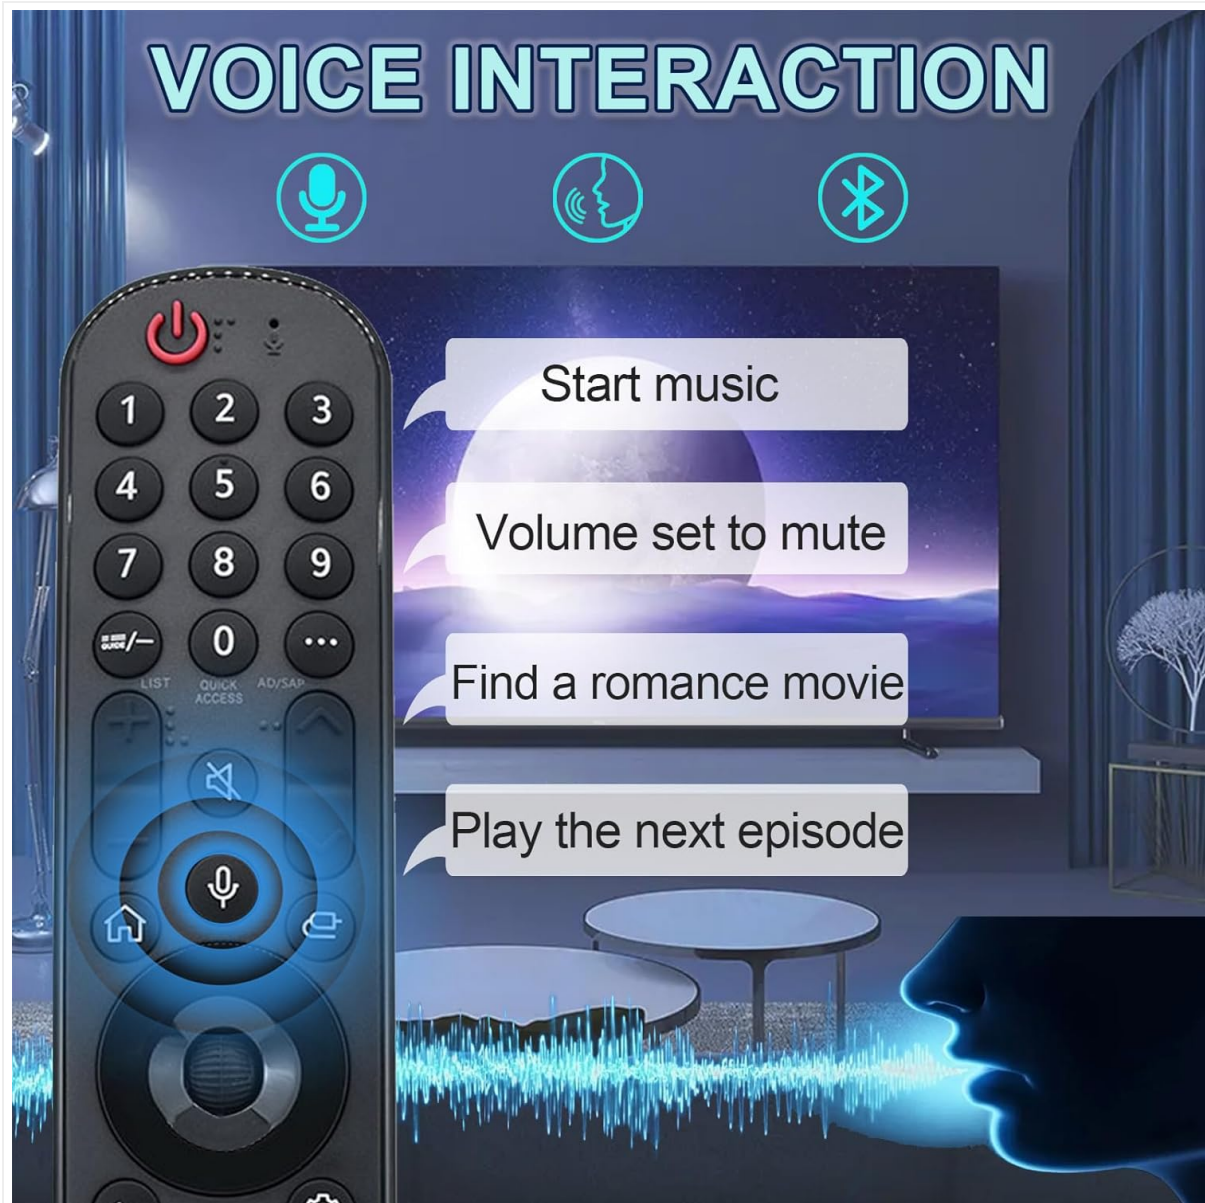


Image 5.1: Illustration of the voice interaction feature, showing example commands and the microphone button on the remote.

### 5.3 Cursor, Click, and Scroll Function

The remote features a motion-sensing cursor that allows you to point and click on your TV screen, similar to a computer mouse. Use the scroll wheel for quick navigation through lists and web pages.

# With Cursor, Click, Scroll Function!



Image 5.2: Depiction of the cursor, click, and scroll functions of the remote control on a TV screen.

## 5.4 Shortcut Buttons

The remote includes six dedicated shortcut buttons for quick access to popular streaming services and functions:

- **NETFLIX**
- **Prime Video**
- **Disney+**
- **L Channels**
- **Sling**
- **Alexa**

## 6 Shortcut Buttons

Helps you quickly access to your favorite channel!

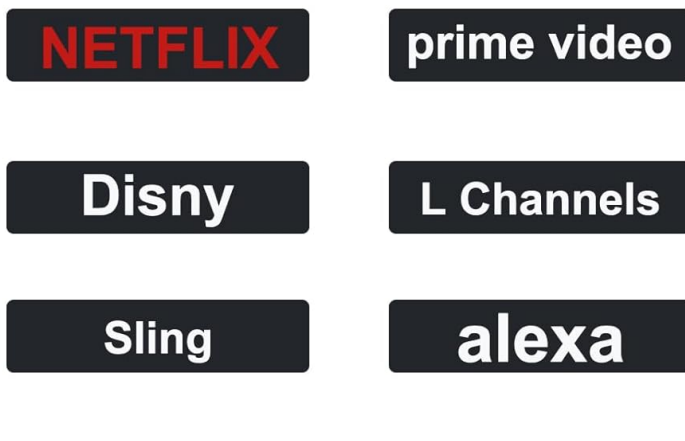


Image 5.3: Close-up of the MR23GA remote control highlighting the six dedicated shortcut buttons for various streaming services and functions.

## 6. MAINTENANCE

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's response becomes slow or inconsistent. Always replace both batteries at the same time with new AAA batteries.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.
- **Avoid Drops:** While durable, avoid dropping the remote control to prevent damage.



Image 6.1: Features of the MR23GA remote control emphasizing its durable ABS material, lightweight ergonomic design, and soft, resilient buttons.

## 7. TROUBLESHOOTING

Problem	Possible Cause / Solution
Remote is not responding.	<ul style="list-style-type: none"> <li>• Check if batteries are inserted correctly and are not depleted. Replace if necessary.</li> <li>• Ensure there are no obstructions between the remote and the TV's IR receiver.</li> <li>• Re-pair the remote control by following the "Setup Instructions" in Section 4.</li> </ul>
Voice control is not working.	<ul style="list-style-type: none"> <li>• Ensure the remote is properly paired with the TV.</li> <li>• Speak clearly and hold the microphone button while speaking.</li> <li>• Check TV settings to ensure voice control is enabled.</li> </ul>

Problem	Possible Cause / Solution
Cursor is not appearing or moving.	<ul style="list-style-type: none"><li>• Shake the remote gently to activate the cursor.</li><li>• Re-pair the remote control.</li><li>• Ensure the TV's Magic Remote settings are correctly configured.</li></ul>

## 8. SPECIFICATIONS

---

Feature	Detail
Model	MR23GA
Brand	JKZTJOF
Connectivity Technology	Infrared
Special Feature	Voice Search
Max Number of Supported Devices	1 (Television)
Control Distance	Up to 10 meters / 32 feet
Button Lifespan	Over 120,000 clicks
Power Source	2 x AAA Batteries (included)

## 9. WARRANTY AND SUPPORT

---

JKZTJOF provides a 30-day return and refund service. If you receive an incorrect or damaged product, please contact the seller directly for assistance. For further support or inquiries, refer to the seller's contact information on the purchase platform.