

Visual Land VLA1V2GERSE

Soundwave A1 Active Noise Cancelling Earbuds User Manual

Model: VLA1V2GERSE | Brand: Visual Land

INTRODUCTION

The Visual Land SOUNDWAVE A1 (2024 Edition) Active Noise Cancelling Earbuds are designed to provide a superior audio experience with advanced features for daily use. These earbuds offer 6-microphone active noise cancellation, extended playtime, and fast charging capabilities, all within a water-resistant design.

WHAT'S IN THE BOX

- Soundwave A1 Earbuds (Rose) and Charging Case
- USB-C Charging Cable
- Additional Ear Tips Sizes (S, M, L)
- User Instructions

PRODUCT OVERVIEW

Familiarize yourself with the components of your Soundwave A1 Earbuds.

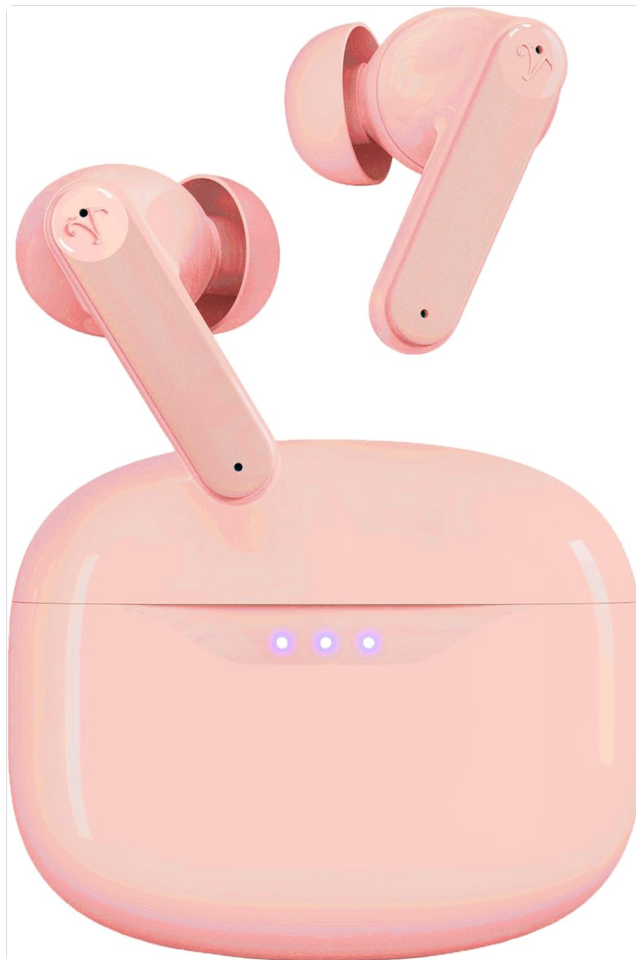


Image: The rose-colored Soundwave A1 earbuds resting inside their matching charging case, with the case lid closed. Three indicator lights are visible on the front of the case.



Image: The rose-colored Soundwave A1 earbuds are shown inside their open charging case, revealing the individual earbud slots and the charging contacts.



Image: A side view of both rose-colored Soundwave A1 earbuds, highlighting their ergonomic design and the stem extending from the main body.

SETUP

1. Charging the Earbuds and Case

Before first use, fully charge the Soundwave A1 earbuds and their charging case. The case provides additional charges for extended playtime.

1. Connect the provided USB-C charging cable to the charging port on the case.
2. Connect the other end of the cable to a compatible USB power source (e.g., wall adapter, computer USB port).
3. The indicator lights on the case will show charging status. A full charge of the case provides up to 30 hours of battery life for the earbuds.
4. For quick power, 15 minutes of charging provides up to 5 hours of playtime.

2. Bluetooth Pairing

Pair your Soundwave A1 earbuds with your device for wireless audio.

1. Ensure the earbuds are in the charging case and the case is open.
2. On your device (smartphone, tablet, etc.), go to Bluetooth settings.
3. Select "Soundwave A1" from the list of available devices.
4. Once connected, a confirmation sound will play, and the earbuds will be ready for use.
5. The earbuds utilize Bluetooth 5.3 for stable and efficient connection.

3. Fitting the Earbuds

For optimal sound quality and comfort, select the correct ear tip size.

1. The Soundwave A1 comes with 3 ear tip sizes (Small, Medium, Large).
2. Try each size to find the one that provides a secure and comfortable fit in your ear canal. A good seal is crucial for effective Active Noise Cancellation.

OPERATING INSTRUCTIONS

Touch Controls

The Soundwave A1 earbuds feature intuitive touch controls for managing audio playback and calls.

Action	Function
Single Tap	Play/Pause music, Answer/End call
Double Tap (Right Earbud)	Next Track
Double Tap (Left Earbud)	Previous Track
Triple Tap	Activate Voice Assistant
Long Press (2 seconds)	Toggle Active Noise Cancellation (ANC) / Transparent Mode / Off
Long Press (during incoming call)	Reject Call

Active Noise Cancellation (ANC)

The Soundwave A1 features 6-microphone Active Noise Cancellation to reduce ambient noise. Long press either earbud to cycle through the following modes:

- **ANC On:** Blocks out most external noise for an immersive listening experience.
- **Transparent Mode:** Allows you to hear your surroundings while still enjoying your audio, useful for awareness in busy environments.
- **ANC Off:** Standard audio playback without noise cancellation.

Your browser does not support the video tag.

Video: Demonstrates the Active Noise Cancellation feature of the Soundwave A1 earbuds, showing users enjoying immersive sound in various environments and highlighting the long-lasting battery life.

MAINTENANCE

Cleaning

Regular cleaning helps maintain the performance and longevity of your earbuds.

- Gently wipe the earbuds and charging case with a soft, dry, lint-free cloth.
- Remove ear tips and clean them with mild soap and water if necessary. Ensure they are completely dry before reattaching.
- Use a dry cotton swab to carefully clean the charging contacts on both the earbuds and inside the case.

Water Resistance

The Soundwave A1 earbuds are IPX5 water-resistant, meaning they can withstand splashes and sweat. They are not designed for submersion in water. Avoid exposing them to strong jets of water or prolonged immersion.

TROUBLESHOOTING

If you encounter issues with your Soundwave A1 earbuds, try the following solutions:

- **Earbuds not pairing:**
 - Ensure Bluetooth is enabled on your device.
 - Make sure the earbuds are fully charged.
 - Place earbuds back in the case, close the lid, wait a few seconds, then open the lid to re-enter pairing mode.

- Forget "Soundwave A1" from your device's Bluetooth settings and try pairing again.

- **One earbud not working/charging:**

- Ensure the earbud is properly seated in the charging case and the charging contacts are clean.
- Check the battery level of the charging case.
- Try resetting the earbuds (refer to specific reset instructions if available in the full manual, otherwise, a general suggestion is to place them in the case and hold a button for 10 seconds if one exists).

- **Poor sound quality:**

- Ensure the ear tips provide a good seal in your ear. Try different sizes.
- Clean any debris from the earbud speakers.
- Move closer to your connected device to avoid interference.

- **Active Noise Cancellation not effective:**

- Ensure ANC is activated (long press touch control).
- Verify that the ear tips create a proper seal in your ear canal.

SPECIFICATIONS

Feature	Detail
Model Name	SOUNDWAVE A1 V2
Connectivity Technology	Wireless, Bluetooth
Wireless Communication Technology	Bluetooth
Bluetooth Version	5.3
Noise Control	Active Noise Cancellation (6-mic)
Control Method	Touch Control
Water Resistance Level	IPX5 Water-Resistant
Total Playtime (with case)	Up to 40 Hours
Fast Charging	15 minutes charge for up to 5 hours playtime
Carrying Case Battery Capacity	500 Milliamp Hours
Material	Plastic
Item Weight	2 Ounces
Color	Rose
Ear Placement	In Ear
Form Factor	In Ear
Compatible Devices	iOS and Android devices (wide range listed in product data)

IMPORTANT SAFETY INFORMATION

- Do not disassemble or modify the product.
- Keep away from extreme temperatures and direct sunlight.
- Avoid dropping or subjecting the earbuds to strong impacts.
- Do not use abrasive cleaners or harsh chemicals.
- Dispose of batteries according to local regulations.
- Prolonged listening at high volumes can cause hearing damage.