

SnapFresh GT03-1072LI

SnapFresh 2-in-1 Cordless Grass & Hedge Trimmer User Manual

Model: GT03-1072LI

1. INTRODUCTION

Thank you for choosing the SnapFresh 2-in-1 Cordless Grass & Hedge Trimmer. This versatile tool is designed for efficient and convenient maintenance of your garden, offering both grass trimming and hedge pruning capabilities in a single, lightweight device. Please read this manual carefully before operation to ensure safe and optimal performance.

Figure 1: SnapFresh 2-in-1 Cordless Grass & Hedge Trimmer with accessories.

2. SAFETY INSTRUCTIONS

Always observe basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and personal injury.

- **Read the Manual:** Familiarize yourself with all instructions and warnings before use.
- **Personal Protective Equipment:** Always wear safety glasses, gloves, and sturdy footwear.
- **Keep Area Clear:** Ensure the work area is free of debris, children, and pets.
- **Avoid Wet Conditions:** Do not operate the trimmer in wet grass or damp conditions.
- **Blade Safety:** Keep hands and feet away from blades. Blades remain sharp after use.
- **Triple Safety Protection:** The tool features a triple safety lock system. Insert the safety lock, press the safety switch, and then press the ON/OFF switch to operate. This prevents accidental startup.

Figure 2: Triple Safety Protection System.

3. PRODUCT OVERVIEW

The SnapFresh 2-in-1 trimmer is designed for ease of use and versatility. It comes with two interchangeable blades: a grass shear blade and a hedge trimmer blade.

- **Lightweight Design:** Weighing approximately 1.36 lbs (0.62 kg), this tool is comfortable for single-handed operation.

- **Powerful Motor:** Delivers up to 1100 RPM for efficient cutting.
- **Integrated Battery:** Features a 7.2V 1500mAh lithium-ion battery for cordless convenience.

Figure 3: Lightweight design for easy handling.

4. SETUP AND BLADE INSTALLATION

The SnapFresh trimmer allows for quick and tool-free blade changes.

1. **Select Blade:** Choose either the 83mm wide grass shear blade or the 140mm long hedge trimmer blade based on your task.
2. **Release Button:** Press the blade release button located on the top of the trimmer.
3. **Insert Blade:** Align the chosen blade with the slot and push it firmly into position until it clicks securely.
4. **Verify:** Gently pull on the blade to ensure it is locked in place before operation.

Figure 4: Quick and Secure Blade Change.

5. OPERATING INSTRUCTIONS

Once the correct blade is installed and secured, you can begin operation.

1. **Power On:** Engage the triple safety protection system as described in Section 2.
2. **Grass Trimming:** For grass, hold the trimmer with the grass shear blade parallel to the ground and move it steadily across the area to be trimmed.
3. **Hedge Trimming:** For hedges, hold the trimmer with the hedge trimmer blade at the desired angle and move it smoothly along the hedge.
4. **Cutting Capacity:** The trimmer can cut branches and stems up to 8mm (0.31 inches) in diameter. Do not attempt to cut thicker material.
5. **Battery Indicator:** Monitor the battery indicator lights to know the remaining charge.
6. **Power Off:** Release the ON/OFF switch to stop the blades. Always engage the safety lock when not in use.

Figure 5: 2-in-1 Cutting Modes (Grass and Hedge).

Figure 6: Maximum Cutting Thickness.

6. MAINTENANCE

Regular maintenance ensures the longevity and performance of your trimmer.

- **Cleaning:** After each use, remove the blade and clean it thoroughly with a brush to remove grass and debris. Wipe the main unit with a damp cloth.
- **Blade Care:** Apply a light coat of machine oil to the blades after cleaning to prevent rust and ensure smooth operation. Store blades in a dry place.
- **Charging:** Recharge the battery when the indicator shows low power. Use only the provided charger. A full charge provides approximately 60 minutes of runtime.

- **Storage:** Store the trimmer and its accessories in a dry, secure place, out of reach of children.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Trimmer does not start	Battery is low or depleted. Safety lock not engaged. Blade not properly installed.	Charge the battery. Ensure triple safety system is correctly activated. Reinstall blade securely.
Reduced cutting performance	Blades are dull or dirty. Overgrown material.	Clean and lubricate blades. Consider sharpening or replacing blades if severely dull. Do not attempt to cut material exceeding 8mm.
Short operating time	Battery not fully charged. Battery degradation.	Ensure battery is fully charged before use. If battery life significantly decreases, contact customer support for replacement options.

8. SPECIFICATIONS

Feature	Detail
Model Number	GT03-1072LI
Battery Voltage	7.2V
Battery Capacity	1500mAh Lithium-ion
No-load Speed	1100 RPM
Grass Shear Blade Width	83 mm (3.25 inches)
Hedge Trimmer Blade Length	140 mm (5.5 inches)
Max. Cutting Thickness	8 mm (0.31 inches)
Operating Time	Approx. 60 minutes
Product Dimensions	30.48 x 10.16 x 10.16 cm (12 x 4 x 4 inches)
Product Weight	1.13 kg (2.49 lbs)

9. WARRANTY AND SUPPORT

SnapFresh products are manufactured to high-quality standards. For warranty information, technical support, or replacement parts, please contact SnapFresh customer service through your retailer or the official SnapFresh website. Please retain your proof of purchase for warranty claims.