

BONLICHT 3-3950-6SP-SN

BONLICHT Transitional 6-Light Glass Track Lighting Kit

Model: 3-3950-6SP-SN (Brushed Nickel)

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before installation and use. Retain this manual for future reference.

- **WARNING:** Risk of electric shock. Disconnect power at the circuit breaker or fuse box before installation or servicing.
- All wiring must be in accordance with national and local electrical codes. If you are unsure about wiring, consult a qualified electrician.
- Do not install this fixture in wet locations. For indoor use only.
- Ensure the fixture is securely mounted to a structural part of the ceiling or wall.
- Use only E26 base bulbs, maximum 60W per light source. Do not exceed the recommended wattage.
- Allow bulbs to cool before touching or replacing.

2. PACKAGE CONTENTS

Verify that all components are present before beginning installation:

- Track Lighting Fixture (with 6 light heads)
- Glass Shades (6 pieces)
- Mounting Hardware Kit (screws, wire nuts, mounting bracket)
- Instruction Manual

Note: Light bulbs are not included.

3. SPECIFICATIONS

Feature	Specification
Brand	BONLICHT
Model Number	3-3950-6SP-SN
Color	Brushed Nickel
Material	Glass, Nickel
Number of Lights	6
Bulb Base	E26
Max Wattage per Bulb	60 Watts
Voltage	120 Volts
Power Source	Hardwired
Installation Type	Flush Mount (Ceiling or Wall)
Special Features	Dimmable (with compatible switch), Adjustable Heads
Item Weight	10.48 pounds
Package Dimensions	37.5 x 10.5 x 7.5 inches

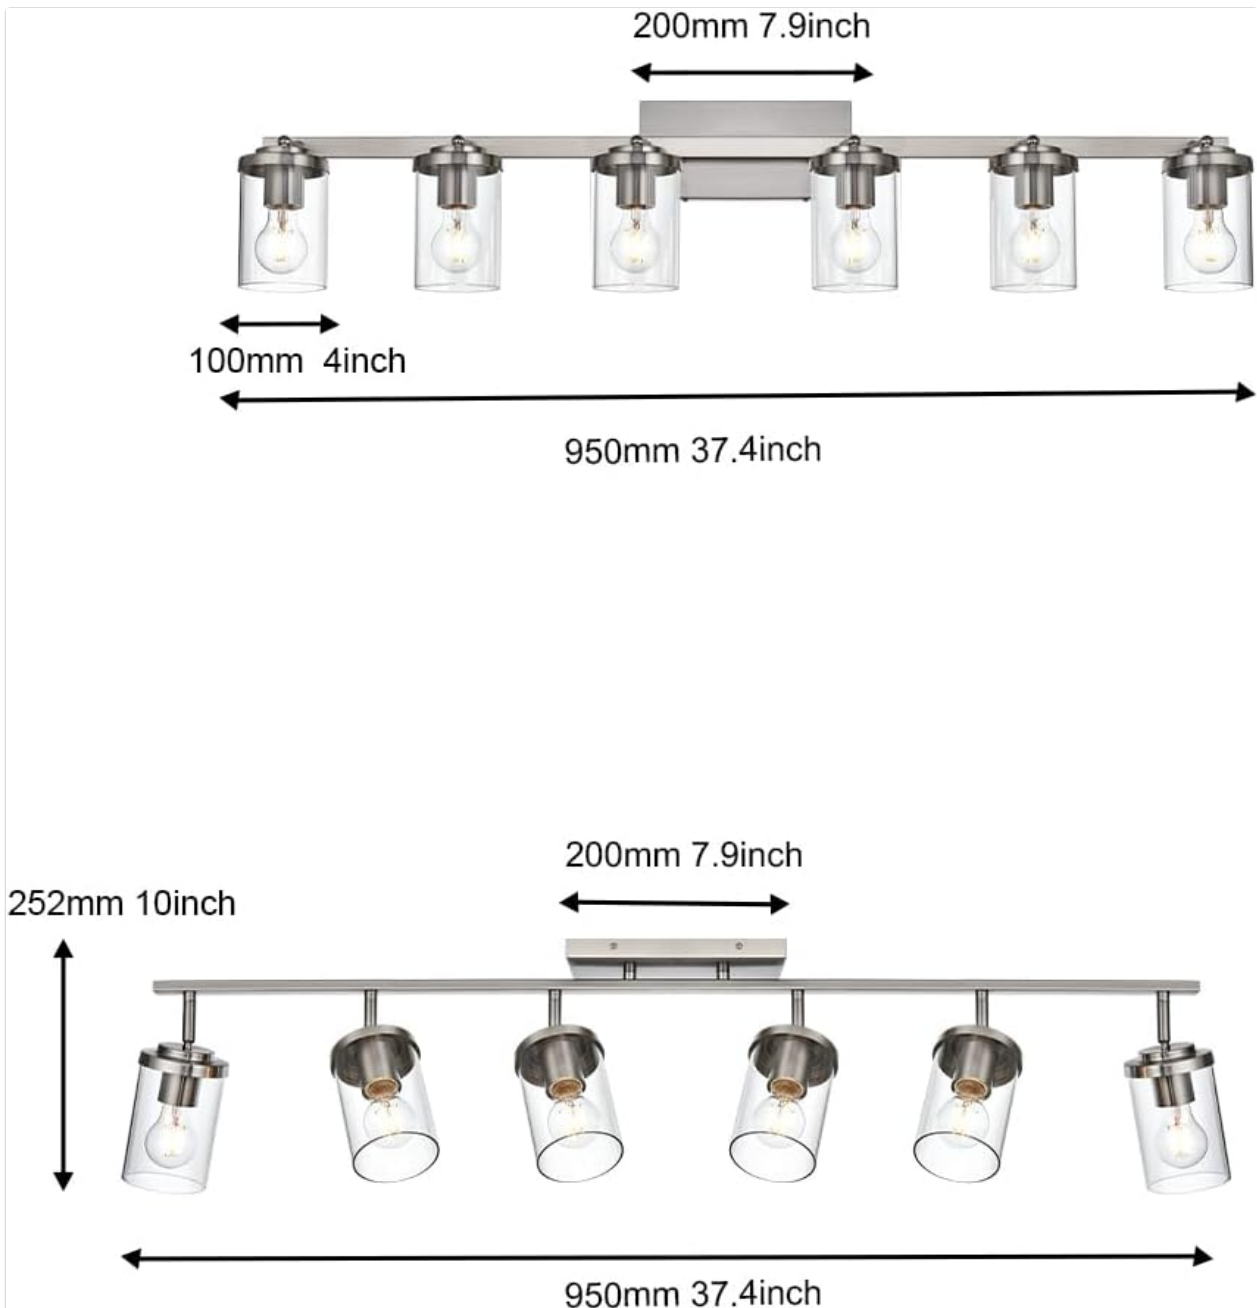


Image: Detailed dimensions of the track lighting fixture, showing a length of 37.4 inches (950mm) and individual light head dimensions.

4. SETUP AND INSTALLATION

Follow these steps for safe and proper installation. It is recommended to have two people for installation.

1. Prepare for Installation:

- Turn off the electrical power at the main fuse box or circuit breaker.
- Carefully unpack all components and inspect for any damage.

2. Attach Mounting Bracket:

- Secure the mounting bracket to the junction box in the ceiling or wall using the provided screws. Ensure it is firmly attached.

3. Wire the Fixture:

- Connect the fixture's black wire to the house's black (live) wire.

- Connect the fixture's white wire to the house's white (neutral) wire.
- Connect the fixture's ground wire to the house's ground wire (or ground screw on the mounting bracket).
- Secure all connections with wire nuts.

4. Mount the Fixture:

- Carefully tuck all wires into the junction box.
- Align the fixture base with the mounting bracket and secure it with the provided screws.

5. Install Glass Shades and Bulbs:

- Screw the glass shades onto each light head.
- Insert E26 base bulbs (not included) into each socket. Do not overtighten.

6. Restore Power:

- Turn the electrical power back on at the circuit breaker.

Bulb Type

Max wattage:60W



VINTAGE FILAMENT



CFL



INCANDESCENT



HALOGEN





BASE:E26
Voltage :110V-240V
Light bulb is not included



Rotate 90°



Rotate 350°

Image: Illustration of compatible E26 bulb types (Vintage Filament, CFL, Incandescent, Halogen) and diagrams demonstrating the 90-degree rotation and 350-degree swivel capability of the light heads.

5. OPERATING INSTRUCTIONS

Once installed, operating your BONLICHT track lighting kit is straightforward:

- **Power On/Off:** Use your standard wall switch to turn the fixture on or off.
- **Adjusting Light Heads:** Each light head can be rotated 90 degrees vertically and swiveled 350 degrees horizontally. Gently adjust the heads to direct light where needed.
- **Dimming Function:** If you have installed dimmable E26 bulbs and connected the fixture to a compatible dimmer switch (sold separately), you can adjust the light intensity.



Image: Close-up diagram illustrating the rotational and swivel capabilities of the individual light heads for directional lighting.

6. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your lighting fixture.

- **Cleaning:** To clean the fixture, ensure power is off. Wipe with a soft, dry cloth. Do not use abrasive cleaners or solvents, as they may damage the finish or glass.
- **Bulb Replacement:**
 - Turn off power at the circuit breaker.
 - Allow the old bulb to cool completely before touching.
 - Carefully unscrew the old bulb and replace it with a new E26 base bulb (max 60W).
 - Restore power.
- **Glass Shade Care:** The glass shades can be removed for cleaning. Wash with mild soap and water, rinse thoroughly, and dry completely before reattaching.

7. TROUBLESHOOTING

If you encounter issues with your lighting fixture, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Light does not turn on	No power to the fixture Loose wiring connection Faulty bulb	Check circuit breaker/fuse. Ensure wall switch is on. Turn off power and check all wire connections. Replace bulb with a known working one.
Lights flicker	Loose bulb Incompatible dimmer switch Loose wiring	Tighten bulbs. Ensure dimmer switch is compatible with LED/incandescent bulbs. Turn off power and check wiring connections.
Bulbs burn out quickly	Incorrect wattage bulb Poor quality bulbs Voltage fluctuations	Ensure bulbs do not exceed 60W. Use high-quality bulbs. Consult an electrician if voltage issues are suspected.

8. WARRANTY AND SUPPORT

For warranty information or technical support, please contact BONLICHT customer service directly. Refer to the product packaging or the BONLICHT official website for contact details.

You can also visit the [BONLICHT Store on Amazon](#) for additional product information.