

Devoko B0CX54Y529

Devoko 33 Gallon Outdoor Trash Can

MODEL: B0CX54Y529

User Instruction Manual

INTRODUCTION

Thank you for choosing the Devoko 33 Gallon Outdoor Trash Can. This manual provides essential information for the safe and efficient assembly, operation, and maintenance of your new outdoor trash can. Please read these instructions thoroughly before use and retain them for future reference.

PRODUCT FEATURES

- **Smart Dual Lid Design:** Features an innovative dual lid that conceals trash bags for a tidy appearance. The outer lid opens and closes easily with one hand and helps contain odors. The inner lid stabilizes trash bags securely in place.
- **Sturdy and Weatherproof Construction:** Manufactured from recycled resin, ensuring the trash can is waterproof, fade-resistant, and weather-resistant for long-lasting outdoor use.
- **Internal Rounded Finish:** Designed with rounded and polished internal reinforcements to prevent trash bags from snagging or tearing during removal.
- **Generous 33 Gallon Capacity:** Offers ample space for waste, compatible with standard 30-33 gallon trash bags, facilitating convenient emptying and replacement.
- **Versatile Outdoor Use:** Ideal for various outdoor settings including patios, poolsides, porches, gardens, backyards, and decks.
- **Easy, Tool-Free Installation:** Designed for quick and straightforward assembly, requiring no screws or tools. Panels snap together in approximately 10 minutes.



Image: The Devoko 33 Gallon Outdoor Trash Can showcasing its high-quality resin material, lightweight cover, waterproof design, and recessed handles for easy handling.

ASSEMBLY INSTRUCTIONS

Follow these steps for quick and easy assembly. No tools are required.

1. Unpack all components and ensure all parts are present.
2. Connect the side panels by aligning the tabs and slots, then pressing firmly until they snap into place.
3. Attach the bottom panel to the assembled sides, ensuring a secure fit.
4. Assemble the lid components, including the inner and outer lid sections, as per the detailed user manual provided in the packaging.
5. Secure the assembled lid to the main body of the trash can.

Easy to Install Trash Bags

Outside Garbage Bins compatible with 30-33 gallon trash bags



Lift the trash bag holder

1



Put in the trash bag

2



Fixing trash bag

3



Lower the holder

4

Image: A visual guide demonstrating the four steps to easily install trash bags: lifting the holder, placing the bag, fixing it, and lowering the holder.

Assembly Video Guide

Your browser does not support the video tag.

Video: This official seller video provides a step-by-step guide on how to assemble the 33 Gallon Outdoor Trash Can, demonstrating the snap-together panel installation.

OPERATING INSTRUCTIONS

- **Inserting Trash Bags:** Lift the outer lid. Then, lift the inner lid/bag holder. Drape a 30-33 gallon trash bag over the inner lid, ensuring the edges are secured. Lower the inner lid to hold the bag in place.
- **Disposing of Waste:** Simply lift the outer lid to access the opening and dispose of your waste. The dual lid design helps to keep odors contained.
- **Emptying the Trash Can:** Lift both the outer and inner lids. Carefully remove the full trash bag, ensuring not to snag it on the rounded internal edges. Replace with a new bag as described above.

MAINTENANCE

- **Cleaning:** The resin material is easy to clean. Wipe down the exterior with a damp cloth and mild soap. For deeper cleaning, the interior can be rinsed with water. Ensure the pull-out drain piece at the bottom is clear for proper drainage.
- **Weather Protection:** While the trash can is weather-resistant, prolonged exposure to extreme conditions may affect its appearance over time. Regular cleaning and occasional inspection are recommended.
- **Odor Control:** The dual lid design helps to minimize odors. For persistent odors, clean the interior thoroughly and consider using odor-absorbing products inside the trash bag.

TROUBLESHOOTING

- **Trash Bags Tearing:** Ensure you are using 30-33 gallon trash bags. The internal rounded finish is designed to prevent tearing, but overfilling or using undersized bags can still cause issues.
- **Lid Not Closing Properly:** Check for any obstructions around the lid hinges or the rim of the trash can. Ensure the inner lid is correctly seated before closing the outer lid.
- **Unstable Unit:** Verify that all panels are securely snapped into place during assembly. Ensure the trash can is placed on a flat, stable surface.

SPECIFICATIONS

Feature	Detail
Brand	Devoko
Model	B0CX54Y529
Capacity	33 Gallons (compatible with 30-33 gallon bags)
Color	Black
Material	Recycled Resin
Product Dimensions	16"L x 16"W x 32"H
Item Weight	7.7 Pounds
Opening Mechanism	Manual-Lift Dual Lid
Special Feature	Fade Resistant, Waterproof, Weather-Resistant

SAFETY INFORMATION

- Keep out of reach of small children to prevent accidental entrapment or injury.
- Do not place hot ashes or flammable materials directly into the trash can.
- Ensure the lid is properly closed to prevent pests and odors.
- Place the trash can on a level surface to prevent tipping.

WARRANTY & SUPPORT

For warranty information or customer support, please refer to the contact details provided with your purchase or visit the official Devoko website. Please have your model number (B0CX54Y529) ready when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question