

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

› [GLEM GAS](#) /

› GLEM GAS Oven Gasket 018752 - 135 cm Total Length Installation Manual

GLEM GAS 018752



GLEM GAS Oven Gasket 018752

Original Replacement Part - 135 cm Total Length

1. INTRODUCTION

This manual provides essential information for the safe and correct installation, use, and maintenance of your new GLEM GAS original oven gasket, model 018752. This gasket is designed as a direct replacement for GLEM GAS ovens, ensuring a proper seal for optimal oven performance and energy efficiency. Please read these instructions carefully before proceeding with installation.



Image 1.1: GLEM GAS Oven Gasket (Model 018752). This image shows the full length of the black rubber gasket, designed to seal three sides of an oven door.

2. SAFETY INFORMATION

Always prioritize safety when working with electrical appliances. Failure to follow these safety guidelines may result in injury or damage to the appliance.

- **Disconnect Power:** Before attempting any installation or maintenance, ensure the oven is completely disconnected from the main power supply. Turn off the circuit breaker or unplug the appliance.
- **Allow Cooling:** Ensure the oven has cooled down completely before handling any internal components, including the gasket.
- **Wear Protective Gear:** Consider wearing gloves to protect your hands during installation.
- **Professional Assistance:** If you are unsure about any step, consult a qualified technician.
- **Original Parts:** Use only original replacement parts to ensure compatibility and safety.

3. PACKAGE CONTENTS

Verify that all components are present and undamaged upon opening the package.

- 1x GLEM GAS Oven Gasket (Model 018752)

4. SPECIFICATIONS

Key technical details for the GLEM GAS Oven Gasket 018752.

Feature	Detail
Manufacturer	GLEM GAS
Item Model Number	018752
Brand (Seller)	ROXY AB
Product Dimensions	1350P x 10I x 10H mm (135 cm total length)
Material	High-temperature resistant rubber



Image 4.1: Example GLEM GAS Product Label. This label indicates the oven model (e.g., AL6S11W) and other technical details, which can help confirm compatibility with the gasket.

5. INSTALLATION INSTRUCTIONS

Follow these steps carefully to replace your oven gasket.

1. **Prepare the Oven:** Ensure the oven is completely cool and disconnected from the power supply. Open the oven door fully.
2. **Remove the Old Gasket:** Gently pull the old gasket away from the oven frame. Most oven gaskets are held in place by small clips or hooks that fit into holes around the oven cavity. Note how the old gasket was attached to assist with the new installation.
3. **Clean the Gasket Channel:** With the old gasket removed, clean the channel or groove around the oven frame where the gasket sits. Remove any food debris, grease, or residue to ensure a clean surface for the new gasket.
4. **Install the New Gasket:**
 - Start by aligning one corner of the new gasket with a corresponding hole in the oven frame.
 - Carefully push the gasket's clips or hooks into the holes around the oven frame. Work your way around the entire perimeter, ensuring each clip is securely seated.
 - Ensure the gasket is evenly stretched and fits snugly without any gaps or twists. The 135 cm length is designed for three sides of the oven door opening.



Image 5.1: Gasket Clip Detail. This image highlights the metal clip mechanism used to secure the gasket to the oven

frame.

5. **Test the Seal:** Once the gasket is fully installed, gently close the oven door. The door should close firmly and the gasket should create a tight seal around the oven cavity. You can perform a simple paper test: place a piece of paper between the door and the oven frame, then close the door. If you can easily pull the paper out, the seal may not be tight enough.
6. **Reconnect Power:** Reconnect the oven to the main power supply.

6. MAINTENANCE

Proper maintenance extends the life of your oven gasket and ensures optimal oven performance.

- **Regular Cleaning:** Periodically clean the gasket with a damp cloth and mild detergent. Avoid abrasive cleaners or harsh chemicals, as these can damage the rubber material.
- **Inspect for Damage:** Regularly inspect the gasket for any signs of wear, tears, cracks, or hardening. A damaged gasket can lead to heat loss and reduced oven efficiency.
- **Avoid Obstructions:** Ensure no food debris or objects are caught between the oven door and the gasket when closing the door.

7. TROUBLESHOOTING

If you encounter issues after installing the new gasket, consider the following:

- **Oven Door Not Sealing Properly:**
 - Check if the gasket is fully seated in all clips/hooks around the oven frame.
 - Ensure the gasket is not twisted or pinched.
 - Verify that the oven door hinges are functioning correctly and not preventing a full close.
- **Heat Escaping from Oven:** This is a primary symptom of a poor seal. Re-check the installation steps, especially ensuring the gasket is flush against the oven frame.
- **Gasket Appears Too Long or Short:** Double-check the model number of your oven and compare it with the specifications for gasket 018752. While this gasket is 135 cm, specific oven models may require different lengths or configurations.

8. WARRANTY AND SUPPORT

This GLEM GAS original replacement part is manufactured to high standards. For specific warranty information, please refer to the documentation provided with your original oven appliance or contact the manufacturer directly. For assistance with installation or troubleshooting, please reach out to customer support.



Image 8.1: Customer Support. For further assistance, please contact our support team.

For inquiries regarding this specific part, you may contact the seller, ROXY AB, through your purchase platform.