



Manuals.plus /

- › Peski /
- › Peski Karaoke Machine User Manual

## Peski K-51

# Peski Karaoke Machine User Manual

Model: K-51 | Brand: Peski

## INTRODUCTION

---

Thank you for choosing the Peski Portable Bluetooth Mini Karaoke Machine. This compact and versatile system is designed to bring joy and entertainment to your home parties, family gatherings, and outdoor events. Featuring astonishing sound, long battery life, Bluetooth 5.0 TWS technology, magic voice effects, and colorful lights, it's perfect for all ages. This manual provides detailed instructions for setup, operation, and maintenance to ensure you get the most out of your new karaoke machine.

## WHAT'S IN THE BOX

---

# What's In The Package



Charging Cable x2  
User Manual x1  
Wireless Mic x2  
Mini Karoike Machine x1

*Image: All components included in the Peski Karaoke Machine package.*

- Mini Karaoke Machine x1
- Wireless Microphone x2
- USB Cable x2
- User Manual x1

## PRODUCT OVERVIEW

---

### Main Unit (Speaker)



*Image: The Peski Mini Karaoke Machine speaker, showcasing its compact design and vibrant LED light ring.*

The main unit features a professional tuning grade speaker with subwoofers and tweeters for clear, powerful stereo sound. It includes a dynamic colorful LED light show that can sync with your music.

### **Control Panel & Ports**



Image: Detailed diagram showing the control buttons on both the speaker and the wireless microphones.



Image: Diagram illustrating the various input and output ports on the back of the speaker unit, including USB, Micro SD, Headphone, and Type-C charging port.

The speaker features intuitive controls for volume, play mode, echo, power, and lights. It also includes multiple input options: TF card slot, USB port, AUX input, and a Type-C charging port.

## Wireless Microphones

The system comes with two wireless microphones that automatically pair with the speaker. Each microphone has controls for power, volume, and magic voice effects. They are also rechargeable via USB-C.

# 5 Magic Voice Effects

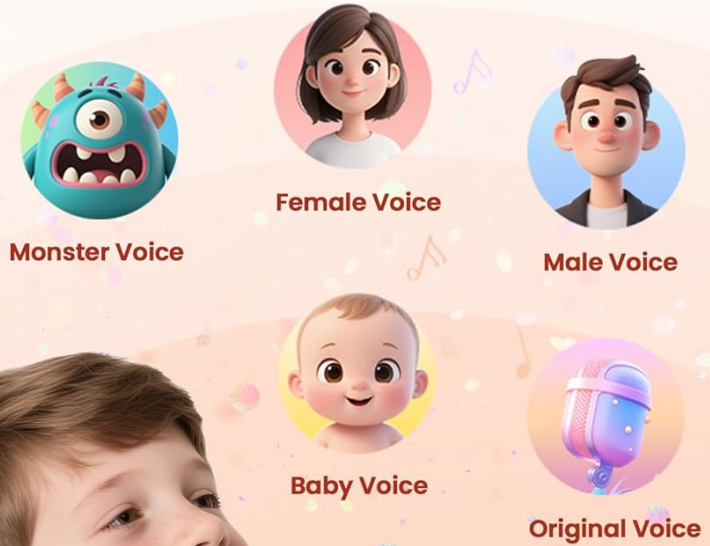


Image: Two children holding microphones, with illustrations of the five magic voice effects: Monster, Baby, Female, Male, and Original/Accompaniment.

## SETUP

### 1. Charging the Devices

Before first use, fully charge the karaoke machine speaker and both wireless microphones. Use the provided USB cables for charging.

- **Speaker:** Connect the Type-C USB cable to the speaker's charging port and a compatible USB power adapter (not included). The charging indicator light will show charging status.
- **Microphones:** Connect the USB cables to the charging port on the bottom of each microphone and a compatible USB power adapter.

*Note: The speaker can provide 6-10 hours of playtime on a 2-3 hour charge. Playtime may vary based on volume and light usage.*

# Up to 10H Playtime

Non-stop music on the road



*Image: Visual representation of the speaker's battery life (6-10 hours playtime) and charging time (2-3 hours for 1500mAh battery).*

## 2. Bluetooth Pairing

1. Power on the karaoke machine speaker by pressing the ON/OFF button.
2. Power on the wireless microphones. They will automatically connect to the speaker.
3. Enable Bluetooth on your smartphone, tablet, or other compatible device.
4. Search for "K-51" (or similar product name) in the Bluetooth device list and select it to pair.
5. Once paired, you will hear a confirmation sound from the speaker. You can now play music from your device through the karaoke machine.

*The Bluetooth 5.0 technology ensures stable transmission up to 50 feet without obstacles.*

# Connect & Wide Compatibility

UP to 50FT Wireless Range



Image: Illustration of the speaker's Bluetooth 5.0 connectivity, showing a 50-foot wireless range and compatibility with various devices and music/karaoke applications like Starmaker, Spotify, Sing Karaoke, YouTube, and Smule.

### 3. Other Connection Methods

- **TF Card:** Insert a TF (Micro SD) card into the designated slot on the speaker. The machine will automatically switch to TF card playback mode.
- **USB:** Insert a USB drive into the USB port on the speaker. The machine will automatically switch to USB playback mode.
- **AUX Input:** Connect an external audio device (e.g., TV, PC) to the AUX input port using a 3.5mm audio cable (not included).

## OPERATING INSTRUCTIONS

### Speaker Controls:

- **ON/OFF (7):** Press to power on/off the speaker.
- **Vol - / Previous (1):** Short press for previous track, long press to decrease speaker volume.
- **Play Mode (2):** Press to switch between Bluetooth, TF card, USB, and AUX modes.

- **Vol + / Next (3):** Short press for next track, long press to increase speaker volume.
- **ECHO (4):** Press to adjust the echo effect level.
- **ON/OFF-PLAY/PAUSE (5):** Press to play or pause music.
- **LIGHTS (6):** Press to cycle through different colorful disco light effects or turn them off.

### Microphone Controls:

- **Microphone VOL + (8):** Press to increase microphone volume (5 levels).
- **Microphone VOL - (9):** Press to decrease microphone volume (5 levels).
- **Magic Sounds (10 - Short Press):** Short press to cycle through 5 magic voice effects: monster, baby, female, male, original/accompaniment.
- **Remove/Restore Music Vocals (10 - Long Press):** Long press to remove or restore the vocals from the playing music, turning it into an accompaniment track.

### Using Two Microphones:

The two wireless microphones automatically pair with the speaker and can be used simultaneously for duets or group performances.

## MAINTENANCE

---

- Keep the device dry. Do not expose it to water or excessive humidity.
- Clean the surface with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Store in a cool, dry place away from direct sunlight and extreme temperatures.
- Avoid dropping or subjecting the device to strong impacts.
- When not in use for extended periods, charge the battery periodically to maintain its lifespan.

## TROUBLESHOOTING

---

Problem	Possible Cause	Solution
No sound from speaker.	Speaker is off; Volume is too low; Not paired via Bluetooth; Incorrect input mode.	Ensure speaker is on; Increase speaker volume; Re-pair Bluetooth; Switch to correct input mode (Bluetooth, TF, USB, AUX).
Microphone not working.	Microphone is off; Microphone battery is low; Microphone volume is too low.	Power on microphone; Charge microphone; Increase microphone volume.
Bluetooth connection unstable.	Device too far from speaker; Obstacles between devices; Interference.	Move device closer to speaker (within 50ft); Remove obstacles; Avoid strong electromagnetic interference.
Lights not working.	Lights feature is off.	Press the LIGHTS button (6) on the speaker to activate or change light modes.

## SPECIFICATIONS

---

Feature	Detail
Model Number	K-51
Brand	Peski
Power Source	Battery Powered
Connectivity Technology	Bluetooth 5.0
Number of Channels	2 (for 2 microphones)
Speaker Count	1
Item Weight	1.26 pounds
Product Dimensions (L x W x H)	5.71 x 3.94 x 4.53 inches
Compatible Devices	Laptop, Television, Tablet, Headphone, Smartphone
Magic Voice Effects	5 (Monster, Baby, Female, Male, Original/Accompaniment)
Light Effects	Dynamic Colorful Disco Lights

## WARRANTY AND SUPPORT

---

Peski provides every customer with a **LIFETIME AFTERSALES** and **NO REASON REPLACEMENT** service. If you encounter any issues during the use of your karaoke machine, please do not hesitate to contact our customer support. We are available to assist you and will resolve any issues within 24 hours.

For support, please refer to the contact information provided in your product packaging or visit the official Peski store on Amazon: [Peski Store](#)