

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [FOHERE](#) /

› [FOHERE 2-in-1 Omelette and Waffle Maker Instruction Manual](#)

## FOHERE B054

# FOHERE 2-in-1 Omelette and Waffle Maker Instruction Manual

Model: B054

## 1. INTRODUCTION

---

Thank you for choosing the FOHERE 2-in-1 Omelette and Waffle Maker. This versatile appliance is designed to prepare delicious omelets and Belgian waffles simultaneously, saving you time and effort. With its 180° flip design, adjustable temperature control, and non-stick plates, you can enjoy perfectly cooked breakfast items with ease. Please read this manual thoroughly before first use to ensure safe and optimal operation.

## 2 in 1 Waffle Omelet Maker

Two-layer baking tray, waffles and Omelet are baked at the same time



Omelet Plate



Waffle Plate



Image: The FOHERE 2-in-1 Waffle Omelet Maker with its distinct omelet and waffle plates, ready for simultaneous cooking.

## 2. IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical hazards, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.

- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off," then remove plug from wall outlet.
- Do not use appliance for other than intended use.

### 3. PRODUCT OVERVIEW

The FOHERE 2-in-1 Omelette and Waffle Maker is designed for convenience and efficiency. It features two independent cooking plates, one for waffles and one for omelets, allowing you to prepare both simultaneously. The 180° rotating system ensures even batter distribution and cooking.

#### Key Components:

- **Waffle Plate:** Non-stick surface for Belgian waffles.
- **Omelet Plate:** Non-stick surface with a divider for two omelets.
- **180° Rotating System:** For even cooking and browning.
- **Adjustable Temperature Control Knob:** To select desired browning level.
- **Power Control Knob:** To select between Waffle, Omelet, or ALL (both).
- **Indicator Lights:** Red for preheating, Green for ready.
- **Cool-Touch Handles:** For safe handling during operation.
- **Removable Drip Tray:** Catches excess batter for easy cleanup.
- **Cord Wrap:** For convenient storage.



**FOHERE : Cord Wrap for Standing More Stable**

The power cord can be wrapped around the bottom housing for storage, and keep a more stable stance



**Others<sup>1</sup> : No Cord Wrap Design**

Messy countertops make cleaning difficult



**Others<sup>2</sup> : Unreasonable Cord Wrap Design**

The space for wrapping the cord is too small and the machine cannot stand stably

## Cord Wrap for Standing More Stable

Image: Detailed view of the FOHERE 2-in-1 Omelette and Waffle Maker, highlighting its non-stick waffle plate, non-stick omelet plate, extended handle, removable drip tray, temperature control knob, power control knob, working light, wire storage, and non-slip feet.

Your browser does not support the video tag.

Video: An overview of the FOHERE 2-IN-1 Omelette Waffle Maker, demonstrating its dual functionality and ease of use for preparing both waffles and omelets.

## 4. SETUP AND FIRST USE

---

### Unpacking:

1. Carefully remove the appliance and all packaging materials.
2. Remove any promotional labels or stickers.
3. Wipe down the exterior of the appliance with a damp cloth.

### Before First Use:

1. Clean the non-stick cooking plates with a damp cloth or sponge. Do not use abrasive cleaners or scouring pads.
2. Dry thoroughly.
3. Lightly grease the cooking plates with a small amount of cooking oil or butter.
4. Plug the appliance into a standard electrical outlet. The red indicator light will illuminate, indicating the unit is preheating.
5. Allow the appliance to preheat until the green indicator light illuminates, signaling it is ready for use. This may take 2-3 minutes.
6. For the first use, a slight odor or smoke may be present as manufacturing residues burn off. This is normal and will dissipate.

## 5. OPERATING INSTRUCTIONS

---

### General Operation:

1. Ensure the appliance is plugged in and preheated (green light on).
2. Use the Power Control Knob to select your desired cooking mode: "Waff" for waffles, "Ome" for omelets, or "ALL" for both simultaneously.
3. Adjust the Temperature Control Knob to your preferred browning level (Min to Max).

### Making Waffles:

1. Once preheated, open the waffle plate.
2. Pour the waffle batter onto the center of the waffle plate. Do not overfill.
3. Close the waffle plate and secure the handle lock.
4. Rotate the unit 180° using the cool-touch handle to ensure even batter distribution and cooking.
5. Cook for approximately 3-4 minutes, or until the green indicator light illuminates again, signaling the waffle is ready. Cooking time may vary based on batter consistency and desired crispness.
6. Carefully open the plate and remove the waffle using heat-resistant tongs or a non-metallic utensil.

### Making Omelets:

1. Once preheated, open the omelet plate.
2. Pour your prepared egg mixture into the omelet plate sections.
3. Add your desired fillings (cheese, vegetables, cooked meats) to the egg mixture.
4. Close the omelet plate and secure the handle lock.
5. Cook for approximately 3-4 minutes, or until the green indicator light illuminates again.
6. Carefully open the plate and remove the omelets using a non-metallic utensil.



## WAFFLES Recommended Recipe

450 ml	/	flour
240 ml	/	milk
2	/	tbsp melted butter
2	/	eggs
5	/	tsp dry yeast
2	/	tbsp sugar
1/4	/	tsp salt (options)

### DIRECTIONS

- Stir the eggs until frothy and melt the butter.
- Egg, butter, milk, sugar mix and stir.
- Mix the flour and dry yeast into the previously stirred liquid.
- Ferment for 15-30 minutes.

Image: A visual guide illustrating the simple steps for using the FOHERE 2-in-1 Omelette and Waffle Maker, including preheating, pouring batter, rotating, adding egg mixture, waiting, and enjoying both waffles and omelets.

## 6. RECOMMENDED RECIPES

### Classic Waffles:

- **Ingredients:** 450 ml flour, 240 ml milk, 2 tbsp melted butter, 2 eggs, 5 tsp dry yeast, 2 tbsp sugar, 1/4 tsp salt (optional).
- **Directions:**
  - a. Stir the eggs until frothy and melt the butter.
  - b. Combine egg, butter, milk, and sugar, then stir.
  - c. Mix the flour and dry yeast into the previously stirred liquid.
  - d. Allow to ferment for 15-30 minutes before cooking.

### Simple Omelet:

- **Ingredients:** 2 eggs, 1 tbsp melted butter, 1/4 tsp salt, shredded cheese/diced ham/herbs/greens (options).
- **Directions:**
  - a. Combine the eggs and salt, beating rapidly for 15 seconds until the egg whites and yolks are fully combined.
  - b. Add your desired toppings to the egg mixture (e.g., diced ham, shredded cheese, onions).
  - c. Evenly butter the preheated omelet plate and pour the egg mixture in.



Image: Recommended recipe for a simple omelet, including ingredients and step-by-step directions.



Image: Recommended recipe for classic waffles, including ingredients and step-by-step directions.

## 7. CLEANING AND MAINTENANCE

Proper cleaning and maintenance will extend the life of your FOHERE 2-in-1 Omelette and Waffle Maker.

1. Always unplug the appliance and allow it to cool completely before cleaning.
2. The non-stick interior and the drip tray make cleanup easy. Simply wipe the cooking plates with a damp cloth or sponge. Do not use abrasive materials or metal utensils, as these can damage the non-stick coating.
3. The removable drip tray can be pulled out and washed with warm, soapy water. Rinse thoroughly and dry before reinserting.
4. Wipe the exterior of the appliance with a damp cloth. Do not immerse the appliance in water or any other liquid.
5. No disassembly is required for cleaning.
6. For storage, wrap the power cord around the integrated cord wrap at the base of the unit.

## Non-Stick Plate & Easy To Clean

just wipe Non-Stick Plates  
with a damp cloth.  
Drip tray keeps your desktop clean.

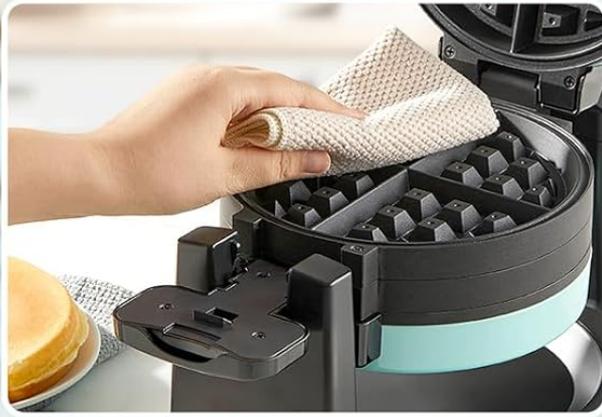


Image: Demonstrating the easy cleaning of the non-stick plates by wiping with a damp cloth.

## ENJOY TWO DIFFERENT FLAVORS IN ONE BAKE!



Omelet Plate



Waffle Plate

Image: The convenient and removable drip tray design, which helps keep countertops clean and is easy to wash.

## 8. TROUBLESHOOTING

If you encounter any issues with your FOHERE 2-in-1 Omelette and Waffle Maker, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in, power outlet malfunction.	Ensure the appliance is securely plugged into a working electrical outlet. Check the circuit breaker.
Food sticks to plates.	Plates not properly greased, non-stick coating worn.	Ensure plates are lightly greased before each use. Avoid using metal utensils that can damage the coating.
Waffles/Omelets are not evenly cooked.	Insufficient batter distribution, incorrect temperature setting, not using 180° flip.	Ensure batter is evenly spread. Adjust temperature. Utilize the 180° flip function for uniform cooking.
Excess batter overflows.	Too much batter poured.	Use the recommended amount of batter. The drip tray will catch minor overflows.

For further assistance or issues not listed here, please contact customer service.

## 9. SPECIFICATIONS

Feature	Detail
Brand	FOHERE
Model Number	B054
Special Feature	Temperature Control, 180° Flip
Color	Mint Green

Feature	Detail
Material	Plastic
Product Dimensions	18.8"D x 8.43"W x 5.12"H
Wattage	1200 watts
Item Weight	4.16 pounds (1.89 Kilograms)
Included Components	Drip tray
Style	Belgian Waffle Maker
Voltage	120 Volts
UPC	762765693834

## User-friendly Design



Image: User-friendly design diagram with product dimensions and features like removable drip tray, cord wrap, and stable base.

## 10. WARRANTY AND CUSTOMER SUPPORT

FOHERE provides **24 months after-sales service** for this product. If you have any questions, concerns, or require assistance, please do not hesitate to contact our friendly customer service team. We are available **24 hours** to provide support and ensure your satisfaction.

Please refer to your purchase documentation or the FOHERE official website for specific contact information.

