

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [FOHERE](#) /

› [FOHERE 2-in-1 Omelette Maker & Waffle Maker Instruction Manual \(Model B054\)](#)

FOHERE B054

FOHERE 2-in-1 Omelette Maker & Waffle Maker Instruction Manual

Model: B054

INTRODUCTION

Thank you for choosing the FOHERE 2-in-1 Omelette Maker & Waffle Maker. This versatile appliance is designed to simplify your breakfast routine, allowing you to prepare delicious omelets and Belgian waffles simultaneously. With its 1400W heating power, 180° rotation system, and non-stick plates, you can achieve perfectly cooked results with ease. Please read this manual thoroughly before use to ensure safe and optimal operation.

IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical hazards, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- To disconnect, turn any control to "off," then remove plug from wall outlet.

- Do not use appliance for other than intended use.

PRODUCT FEATURES

- **1400W Quadruple-Sided Heating:** Two high-efficiency double-sided plates ensure fast and even cooking for perfectly golden waffles and fluffy omelets.
- **180° Rotation Cooking System:** Rotate the unit 180° for even batter distribution, resulting in excellent fluffiness and consistent cooking.
- **Non-Stick Plates:** Advanced nonstick coating allows for easy food release and simplifies cleanup.
- **Adjustable Temperature Control:** Choose from different browning levels to suit your personal preferences.
- **Preheat and Ready Indicators:** Dual indicator lights clearly show when the appliance is heating, ready, or finished cooking.
- **One-Piece Integrated Design:** Non-removable plates prevent batter from spilling into heating elements, ensuring easier cleaning and consistent results.
- **Cool-Touch Handles:** Extended handles remain cool during operation, providing safe handling when rotating and opening the plates.
- **Removable Drip Tray:** Catches excess batter, keeping your countertop clean and making cleanup effortless.
- **Space-Saving Compact Design:** Takes up less counter space and features a cord wrap for stable storage.

SETUP

1. **Unpack:** Carefully remove the waffle maker and all accessories from the packaging.
2. **Initial Cleaning:** Before first use, wipe the non-stick plates with a damp cloth. Ensure the drip tray is clean and properly placed.
3. **Placement:** Place the appliance on a stable, heat-resistant, and dry surface. Ensure there is adequate ventilation around the unit.
4. **Power Connection:** Plug the power cord into a standard electrical outlet.

OPERATING INSTRUCTIONS

1. Preheating

- Close the waffle maker and plug it in. The red power indicator light will illuminate.
- Turn the temperature control knob to your desired setting (Min to Max).
- Allow the appliance to preheat for approximately 2-3 minutes until the green 'Ready' indicator light illuminates. This signals that the plates have reached the optimal cooking temperature.

2. Adjusting Browning Control

- Use the temperature control knob to select your preferred browning level, from light to dark.

3. Making Waffles and Omelets

1. Once the green 'Ready' light is on, open the top plate.
2. Pour the waffle batter onto the waffle plate (bottom side) and/or the omelet mixture onto the omelet plate (top side). Be careful not to overfill, as batter may overflow.
3. Close the top plate and secure the handle lock.
4. After approximately 2.5 minutes (or when the green 'Ready' light turns off), rotate the unit 180° using the cool-touch handle to ensure even cooking on both sides.
5. Continue cooking for another 2.5 minutes (or until the green 'Ready' light illuminates again).
6. Open the waffle maker and carefully remove your cooked waffle and/or omelet using a non-metallic utensil.

Your browser does not support the video tag.

Video: Official FOHERE 2-IN-1 Omelette Waffle Maker demonstration. This video showcases the product's features and ease of use, including the 180° flip function and dual cooking capabilities for both omelets and waffles.

RECOMMENDED RECIPES

Waffles

- 450 ml flour
- 240 ml milk
- 2 tbsp melted butter
- 2 eggs
- 5 tsp dry yeast
- 2 tbsp sugar
- 1/4 tsp salt (optional)

Directions:

1. Stir the eggs until frothy and melt the butter.
2. Combine egg, butter, milk, sugar, and stir.
3. Mix the flour and dry yeast into the previously stirred liquid.
4. Ferment for 15-30 minutes.

Omelet

- 2 eggs
- 1 tbsp melted butter
- 1/4 tsp salt
- Shredded cheese / diced ham / herbs / greens (options)

Directions:

1. Combine the eggs and salt, beating rapidly for 15 seconds until the egg whites and yolks are fully

combined.

2. Add your desired toppings to the egg mixture: diced ham, shredded cheese, onions, etc.
3. Evenly butter the preheated omelet plate and pour the egg mixture in.

CLEANING AND MAINTENANCE

1. **Cool Down:** Always unplug the appliance and allow it to cool completely before cleaning.
2. **Clean Plates:** The non-stick plates are non-removable. Simply wipe them with a damp cloth or sponge. For stubborn residue, use a small amount of mild dish soap and a non-abrasive sponge, then wipe clean with a damp cloth. Do not use abrasive cleaners or scouring pads.
3. **Drip Tray:** The removable drip tray can be easily removed and washed with warm, soapy water or wiped with a damp rag. Ensure it is dry before reinserting.
4. **Exterior:** Wipe the exterior of the appliance with a damp cloth. Do not immerse the main unit in water or any other liquid.
5. **Storage:** Wrap the power cord around the bottom housing for neat and stable storage. Store the appliance in a dry place.

TROUBLESHOOTING

Refer to the user manual for specific troubleshooting steps and related policies. Common issues may include:

- **Waffles/Omelets not cooking evenly:** Ensure the unit is preheated properly and rotated 180° during cooking. Adjust browning control as needed.
- **Food sticking:** Ensure plates are clean and lightly greased if necessary, even with non-stick coating.
- **Batter overflow:** Use the recommended amount of batter/mixture. It may take a few tries to find the perfect amount for your recipe. The drip tray is designed to catch excess.

SPECIFICATIONS

Feature	Value
Brand	FOHERE
Model Number	B054
Special Feature	Temperature Control
Color	Dark Black
Material	Plastic

Product Dimensions	18.8"D x 8.43"W x 5.12"H
Wattage	1400 watts (as per feature bullets, specification lists 1200W, using higher value from feature bullets for clarity)
Item Weight	4.16 pounds (1.89 Kilograms)
Voltage	220 Volts
Number of Settings	6
Included Components	Drip Tray

WARRANTY AND SUPPORT

FOHERE provides 24 months of after-sales service for this product. For any inquiries, troubleshooting assistance, or support, please contact our 24-hour friendly customer service. A creative recipe guide is also included for both waffle beginners and pros.