

Tefal EY905B40

Tefal Easy Fry Dual Zone Digital Air Fryer User Manual

Model: EY905B40

INTRODUCTION

Welcome to the user manual for your new Tefal Easy Fry Dual Zone Digital Air Fryer. This appliance is designed to provide a versatile and efficient cooking experience, allowing you to air fry, roast, bake, grill, dehydrate, and reheat with ease. Featuring two independent cooking zones, you can prepare different dishes simultaneously, optimizing your meal preparation. Please read this manual thoroughly before first use to ensure safe and optimal operation of your appliance.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before use.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- This appliance is for household use only.

PRODUCT OVERVIEW

The Tefal Easy Fry Dual Zone Digital Air Fryer features a sleek design with a digital control panel and two independent cooking drawers.



Figure 1: Front view of the Tefal Easy Fry Dual Zone Digital Air Fryer, showcasing the digital display and dual drawer design.

Key Components:

- **Digital Control Panel:** Intuitive touch controls for temperature, time, and cooking programs.
- **Cooking Drawers:** Two independent drawers, one 5.2L (XL) and one 3.1L, allowing for simultaneous cooking of different items.
- **Crisping Grids:** Removable grids for optimal air circulation and crisping results.
- **Air Vents:** Located at the rear of the appliance for proper airflow.

MORE THAN JUST AN AIR FRYER



Figure 2: The two cooking drawers, highlighting their distinct capacities of 5.2 liters and 3.1 liters, designed for flexible cooking needs.

The appliance utilizes 360° air circulation for efficient and even cooking, ensuring crispy results with minimal oil.



TRUST IN TEFAL

We extensively test our products to give you the best safety & quality appliances.

We provide technical spare parts at a fair price for almost all our products for 15 years after purchase.

*More than 96% of the products marketed by Groupe Seb in Europe in 2021 complied with the 10-year commitment, which was valid until 31 December 2021 and has been replaced by a 15-year commitment at the right price since 1 January 2022. With spare parts that may be derived from alternative technologies.

Figure 3: Illustration of the 360° air circulation technology within the cooking drawers, which promotes even cooking and crisping.

SETUP

1. **Unpacking:** Carefully remove the air fryer and all its components from the packaging. Retain packaging for future storage or transport if needed.
2. **Initial Cleaning:** Before first use, clean the cooking drawers and crisping grids with warm soapy water. Rinse thoroughly and dry completely. Wipe the exterior of the appliance with a damp cloth.
3. **Placement:** Place the appliance on a stable, heat-resistant, and level surface. Ensure there is adequate space (at least 10 cm) around the back and sides for proper ventilation. Do not place it directly against a wall or under cabinets.
4. **Power Connection:** Plug the power cord into a grounded electrical outlet. Ensure the voltage matches the specifications of your appliance (220 Volts).

OPERATING INSTRUCTIONS

Your Tefal Easy Fry Dual Zone Air Fryer offers versatile cooking options with its digital interface and pre-set programs.

Basic Operation:

1. **Power On:** Plug in the appliance. The digital display will illuminate.
2. **Insert Food:** Place food into the desired cooking drawer(s). Ensure not to overfill the drawers to allow for proper air circulation.
3. **Select Zone:** Use the digital controls to select Zone 1 (5.2L) or Zone 2 (3.1L).
4. **Set Temperature and Time:** Adjust the temperature (40°C to 200°C) and cooking time using the +/- buttons.
5. **Start Cooking:** Press the Start/Stop button to begin the cooking cycle.

Using Pre-set Programs (8-in-1):

The air fryer comes with 8 pre-set cooking programs for common dishes.



Figure 4: Visual representation of the 8 pre-set cooking programs, including options for fries, chicken, vegetables, fish, dessert, dehydrate, grill, and manual mode.

1. Select the desired cooking zone.
2. Press the program icon button to cycle through the 8 pre-set options (e.g., Fries, Chicken, Vegetables, Fish, Dessert, Dehydrate, Grill, Manual).
3. Once a program is selected, the default temperature and time will appear. You can adjust these manually if needed.
4. Press Start/Stop to begin.

Dual Zone Cooking and Sync Function:

The dual zone feature allows you to cook two different foods at different temperatures and times. The Sync function ensures both zones finish cooking simultaneously.



Figure 5: Example of dual zone cooking, with a whole roast chicken in the 5.2L drawer and fries in the 3.1L drawer, demonstrating the appliance's capacity for a full meal.

1. Load food into both drawers.
2. Set the desired temperature and time for Zone 1.
3. Set the desired temperature and time for Zone 2.
4. Press the "SYNC" button. The appliance will automatically adjust the start times of each zone so they finish together.
5. Press Start/Stop to begin synchronized cooking.

Note: The smaller 3.1L drawer is ideal for single portions or smaller side dishes, while the 5.2L XL drawer can accommodate larger items like a whole chicken.

MAINTENANCE AND CLEANING

Regular cleaning ensures the longevity and optimal performance of your air fryer.

1. **Unplug and Cool:** Always unplug the appliance from the power outlet and allow it to cool completely before cleaning.
2. **Cleaning Drawers and Grids:** The cooking drawers and crisping grids are dishwasher safe. Alternatively, they can be washed by hand with warm soapy water and a non-abrasive sponge. Rinse thoroughly and dry completely before reinserting into the appliance.

3. **Cleaning Exterior:** Wipe the exterior of the air fryer with a damp cloth. Do not use abrasive cleaners or scouring pads, as they may damage the surface.
4. **Cleaning Interior:** If food residue is stuck inside the heating chamber, gently wipe it with a damp cloth. Do not immerse the main unit in water.

TROUBLESHOOTING

If you encounter issues with your air fryer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet malfunction.	Ensure the power cord is securely plugged into a working electrical outlet.
Food is not cooked evenly.	Overfilled drawer; food not shaken/flipped.	Do not overfill the drawers. Shake or flip food halfway through cooking for even results.
White smoke coming from appliance.	Grease residue from previous use; fatty food.	Clean the drawers and interior thoroughly. For fatty foods, ensure crisping grids are clean and excess fat is drained.
Food not crispy.	Insufficient cooking time/temperature; too much moisture.	Increase cooking time or temperature. Pat food dry before cooking. Use a light coating of oil for crispier results.

SPECIFICATIONS

Detailed technical specifications for the Tefal Easy Fry Dual Zone Digital Air Fryer:

- **Model Number:** EY905B40
- **Capacity:** Total 8.3 Liters (5.2L XL drawer + 3.1L drawer)
- **Power:** 2700 Watts
- **Voltage:** 220 Volts
- **Temperature Range:** 40°C - 200°C
- **Control Method:** Touch Control
- **Special Features:** Automatic Shut-Off, Dual Zone Features, Programmable, Temperature Control, Nonstick Coating
- **Material:** Plastic, Aluminum
- **Product Dimensions:** 16.46"D x 15.83"W x 12.01"H (40 cm D x 42 cm W x 30.6 cm H)
- **Item Weight:** 7.8 Kilograms (17.16 pounds)
- **Dishwasher Safe Parts:** Yes (Drawers and Crisping Grids)



Figure 6: Dimensional diagram of the Tefal Easy Fry Dual Zone Air Fryer, showing its height, width, and depth.

WARRANTY AND SUPPORT

Tefal products are designed for durability and performance.

- **Warranty:** This appliance comes with a manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms and conditions.
- **Spare Parts Availability:** Tefal commits to providing technical spare parts at a fair price for almost all products for 15 years after purchase.
- **Customer Support:** For technical assistance, troubleshooting beyond this manual, or warranty claims, please contact Tefal customer service. Visit the official Tefal website for contact information specific to your region.



Figure 7: Rear view of the appliance, showing the power cord connection and air vents.

© 2024 Tefal. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question