

[Manuals.plus](#) /

> [Andis](#) /

> Andis inCRED Cordless Hair Clipper Kit - 18-Piece Home Set Instruction Manual

Andis 560585

Andis inCRED Cordless Hair Clipper Kit - 18-Piece Home Set

Model: 560585

1. INTRODUCTION

Thank you for choosing the Andis inCRED Cordless Hair Clipper Kit. This 18-piece set is engineered to provide professional-quality haircuts in the comfort of your home. Featuring a powerful, quiet high-speed motor, a durable titanium-coated stainless steel blade, and a long-lasting lithium-ion battery, this clipper offers precision and versatility for various hair cutting styles, including fades and blending.

Please read this instruction manual thoroughly before using your new clipper kit to ensure safe operation and optimal performance. Keep this manual for future reference.

2. IMPORTANT SAFETY INFORMATION

To reduce the risk of electric shock, burns, fire, or injury:

- Always keep blades away from eyes and other sensitive body parts.
- Do not use on infants or other delicate surfaces.
- Keep blades clean and dry to maintain hygiene and performance.
- Always unplug the clipper and allow the blades to stop completely before cleaning, attaching/detaching accessories, or storing the unit.
- Do not immerse the clipper in water or other liquids.
- Do not operate the clipper with a damaged cord or plug.
- Keep the appliance out of reach of children.

3. WHAT'S IN THE BOX

Your Andis inCRED Cordless Hair Clipper Kit includes the following items:

- Andis inCRED Hair Clipper
- Charging Adapter with interchangeable EU/UK/BR/AUS plugs
- Soft Storage Case
- Stainless Steel Scissors
- Barber Comb
- Blade Brush
- Blade Guard
- 10 Attachment Combs: #0 (1/16"), #1 (1/8"), #2 (1/4"), #3 (3/8"), #4 (1/2"), #6 (3/4"), #8 (1")





Image 1: The Andis inCRED Cordless Hair Clipper kit, showing the clipper, various guide combs, oil, and other accessories neatly stored in its soft carrying case.



Image 2: The Andis inCRED clipper displayed with several guide combs and a pair of scissors, highlighting the essential tools for a haircut.

4. SETUP

4.1 Initial Charging

1. Before first use, fully charge the clipper for approximately 90 minutes.
2. Connect the charging adapter to the clipper and plug it into a suitable electrical outlet.
3. The charging indicator light will illuminate to show that the clipper is charging.
4. Once fully charged, the indicator light may change color or turn off, depending on the model.

4.2 Attaching Guide Combs

To attach a guide comb:

1. Ensure the clipper is turned off.
2. Select the desired attachment comb for your preferred hair length.
3. Align the comb with the clipper blade and firmly push it down until it clicks into place.

To remove a guide comb:

1. Ensure the clipper is turned off.
2. Gently pull the comb upwards from the back of the blade until it detaches.



Image 3: The Andis inCRED clipper positioned on a bathroom counter, ready for use, with a detached guide comb nearby.

5. OPERATING INSTRUCTIONS

5.1 General Hair Cutting Tips

- Always start with clean, dry hair.
- For best results, cut hair against the direction of hair growth.
- Use the barber comb to lift hair away from the scalp before cutting.
- Take small, even strokes for a consistent cut.
- Regularly check the hair length as you cut.

5.2 Using the Adjustable Blade

The Andis inCRED clipper features an adjustable blade lever, allowing you to fine-tune cutting lengths without changing guide combs. Move the lever up for a shorter cut and down for a longer cut. This is ideal for blending and creating fades.

5.3 Cordless and Corded Operation

The clipper operates cordlessly for up to 90 minutes on a full charge. For extended use or if the battery is low, you can plug the clipper directly into a power outlet and continue using it in corded mode.



Image 4: A person using the Andis inCRED clipper to trim hair on the side of another person's head, demonstrating its application.



Image 5: An adult using the Andis inCRED clipper to give a child a haircut, illustrating its suitability for home use.

6. MAINTENANCE

6.1 Cleaning the Blades

After each use, it is crucial to clean the blades to ensure optimal performance and longevity:

1. Turn off and unplug the clipper.
2. Use the provided blade brush to remove any loose hair from the blades and the area around them.
3. For a more thorough cleaning, you may carefully detach the blade set (refer to the manufacturer's specific instructions for blade removal if available).

6.2 Oiling the Blades

To maintain cutting efficiency and prevent rust, oil the blades regularly:

1. Apply a few drops of clipper oil (included in the kit) to the teeth and friction points of the blades.
2. Turn the clipper on for a few seconds to allow the oil to distribute evenly.
3. Wipe off any excess oil with a clean, dry cloth.

6.3 Storage

Store the clipper and all accessories in the provided soft storage case in a cool, dry place, away from direct sunlight and moisture.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Clipper does not turn on	Battery is discharged; Power cord not properly connected	Charge the battery; Ensure power cord is securely plugged in
Clipper pulls hair or cuts poorly	Blades are dull, dirty, or not oiled; Hair is not clean/dry	Clean and oil blades; Ensure hair is clean and dry; Consider blade replacement if dull
Excessive noise or vibration	Blades are misaligned or loose; Internal mechanism issue	Check blade alignment; If problem persists, contact customer support
Battery runtime is short	Battery not fully charged; Battery life diminishing	Ensure full charge; Battery may need replacement after extended use

If you encounter issues not listed here or if problems persist, please contact Andis customer support.

8. SPECIFICATIONS

- **Model Number:** 560585
- **Dimensions:** 22.5 x 16.51 x 6.99 cm
- **Weight:** 670 grams
- **Power Source:** Battery Powered (Rechargeable Lithium-ion)
- **Battery Life:** Up to 90 minutes cordless runtime
- **Blade Material:** Titanium-coated stainless steel
- **Special Feature:** Cordless operation, Adjustable blade
- **Included Guide Combs:** 10 (1/16" to 1")
- **Country of Origin:** USA
- **UPC:** 040102004377

9. WARRANTY INFORMATION

The Andis inCRED Cordless Hair Clipper Kit is covered by a **2-year manufacturer's warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use. It does not cover damage resulting from misuse, abuse, accidents, unauthorized service, or normal wear and tear.

Please retain your proof of purchase for warranty claims.

10. CUSTOMER SUPPORT

For further assistance, troubleshooting, or warranty inquiries, please contact Andis customer support through their official website or the retailer where the product was purchased.

Andis Official Website: www.andis.com

11. PRODUCT VIDEOS

No official product videos from the seller were available for embedding in this manual. Please refer to the manufacturer's website for any available video tutorials or demonstrations.

