

Lonzuer Dream

Lonzuer Dream Retro Wooden Portable Wireless Bluetooth Speaker

Model: Dream

INTRODUCTION

Thank you for purchasing the Lonzuer Dream Retro Wooden Portable Wireless Bluetooth Speaker. This manual provides essential information for the safe and efficient operation of your speaker. Please read it thoroughly before use and retain it for future reference.

SAFETY INSTRUCTIONS

- Do not expose the speaker to extreme temperatures, humidity, or direct sunlight.
- Avoid dropping or subjecting the speaker to strong impacts.
- Keep the speaker away from water and other liquids.
- Do not attempt to disassemble or repair the speaker yourself. Contact qualified service personnel.
- Use only the provided power adapter for charging.
- Ensure proper ventilation when operating the speaker.

PACKAGE CONTENTS

Verify that all items are present in the package:

- 1 × Bluetooth Speaker Body
- 1 × Power Adapter
- 1 × AUX Audio Cable

- 1 × User Manual
- 1 × Security Warning

PRODUCT OVERVIEW

The Lonzuer Dream speaker features a vintage retro wooden design with leather wrapping, offering both aesthetic appeal and robust audio performance.



Image: Lonzuer Dream speaker showcasing its retro home decor design.

Controls and Ports



Image: Detailed view of the speaker's top control panel, featuring Power, AUX, Volume, Bass, Treble knobs, and playback buttons.



Image: Rear panel of the speaker, highlighting the DC IN, USB, and TF (SD card) ports.

Product Features Video

Video: This video demonstrates the appearance, material quality, sound capabilities, and basic operation modes of the Lonzuer Dream speaker.

SETUP

Charging the Speaker

Before first use, fully charge the speaker using the provided power adapter. Connect the adapter to the DC 15V charging port on the rear of the speaker and plug it into a power outlet. The 10000mAh battery provides 12-24 hours of playtime depending on volume levels.

Power On/Off

To power on the speaker, toggle the Power switch located on the top control panel. To power off, toggle the switch again.

Bluetooth Pairing

1. Ensure the speaker is powered on and in Bluetooth mode (indicated by a blinking blue LED).
2. On your smart device (phone, tablet, etc.), enable Bluetooth and search for available devices.
3. Select "Dream" from the list of devices to connect. A confirmation sound will indicate successful pairing.

TWS (True Wireless Stereo) Pairing

The Lonzuer Dream speaker supports TWS pairing, allowing two identical speakers to connect wirelessly for a stereo sound experience.

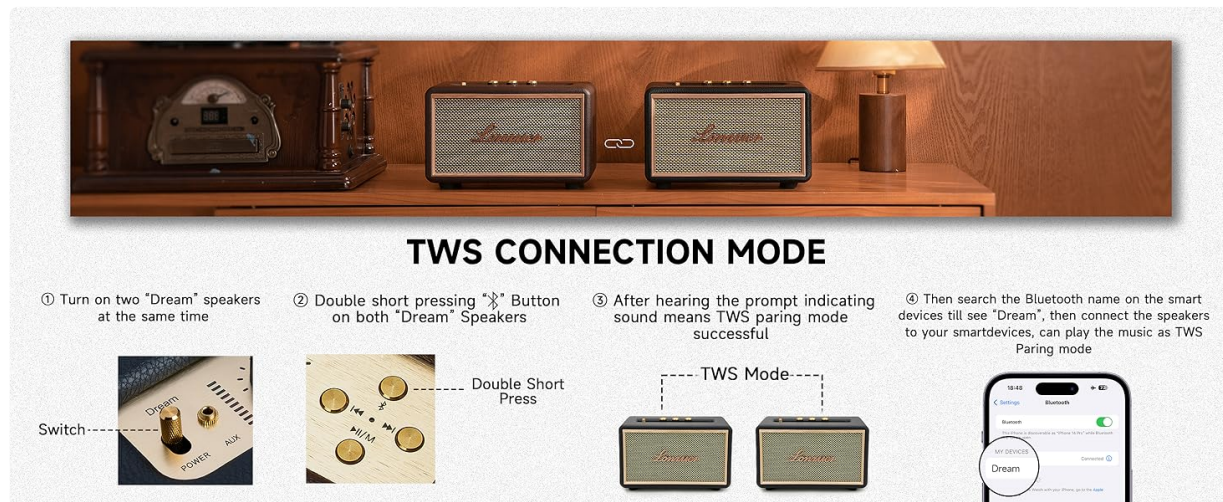


Image: Visual guide for connecting two Lonzuer Dream speakers in TWS mode.

1. Power on both "Dream" speakers simultaneously.
2. Double-click the Bluetooth button (labeled with a Bluetooth icon) on both speakers.
3. After hearing a prompt indicating successful TWS pairing, the speakers are now interconnected.
4. Search for "Dream" in your smart device's Bluetooth settings and connect. Audio will now play in stereo through both speakers.

TWS Pairing Instruction Video

Video: This video provides a step-by-step guide on how to connect two Lonzuer Dream speakers using the TWS feature for true wireless stereo sound.

AUX Input

Connect an external audio device using the provided 3.5mm AUX audio cable to the AUX port on the top panel. The speaker will automatically switch to AUX mode.

SD Card Playback

Insert a TF (Micro SD) card into the TF card slot on the rear panel. The speaker will automatically detect the card and begin playing audio files.

USB Playback

Insert a USB flash drive into the USB port on the rear panel. The speaker will automatically detect the drive and begin playing audio files.

OPERATING INSTRUCTIONS

Volume Control

Rotate the "VOLUME" knob on the top panel clockwise to increase volume and counter-clockwise to decrease it.

Bass and Treble Adjustment

Use the "BASS" and "TREBLE" knobs on the top panel to adjust the low and high frequencies of the audio output according to your preference.

Playback Controls

The top panel includes buttons for playback control:

- **Play/Pause:** Press the Play/Pause button to start or pause audio playback.
- **Previous Track:** Press the Previous Track button to go to the beginning of the current track or the previous track.
- **Next Track:** Press the Next Track button to skip to the next track.

MAINTENANCE

- Clean the speaker with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- When not in use for extended periods, store the speaker in a cool, dry place.
- To prolong battery life, avoid fully discharging the battery frequently. Charge it regularly, even if not in constant use.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not power on	Low battery; Power switch off	Charge the speaker; Ensure power switch is in the ON position.
No sound	Volume too low; Incorrect input mode; Device not connected	Increase volume; Select correct input (Bluetooth, AUX, SD, USB); Re-pair Bluetooth device.
Bluetooth pairing fails	Speaker not in pairing mode; Device too far; Interference	Ensure speaker is in pairing mode; Move device closer; Avoid strong electromagnetic interference.
TWS pairing fails	Speakers not powered on simultaneously; Incorrect button press	Ensure both speakers are powered on at the same time; Double-click the Bluetooth button on both speakers as per instructions.

SPECIFICATIONS

Feature	Detail
Brand	Lonzuer
Model Name	Dream
Output Wattage	80 Watts
Power Source	Battery Powered
Battery Capacity	10000mAh Lithium
Playtime	12-24 Hours (depending on volume)
Bluetooth Version	5.3
Wireless Range	Up to 33 feet
Input Voltage	DC 15V 3A
Connectivity	Bluetooth, USB, SD/TF Card, 3.5mm AUX
Speaker Size	4 Inches
Audio Output Mode	Stereo
Item Dimensions (D x W x H)	5.89"D x 10.2"W x 6.3"H
Item Weight	2.31 Kilograms
Material	Leather, Metal, Plastic, Wood

WARRANTY

The Lonzuer Dream speaker comes with a 2-year warranty from the date of purchase. This warranty covers manufacturing defects and workmanship. Please retain your proof of purchase for warranty claims. The warranty does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear.

SUPPORT

For further assistance, troubleshooting, or warranty inquiries, please contact Lonzuer customer support through the retailer where you purchased the product or visit the official Lonzuer brand store online.

[Visit the Lonzuer Store on Amazon](#)