

yoose N1S

yoose N1S Nose Hair Trimmer Instruction Manual

			Overview	Safety Information	Package		
Contents	Setup	Operation	Maintenance	Troubleshooting	Specifications	Warranty & Support	

1. PRODUCT OVERVIEW

The yoose N1S Nose Hair Trimmer is designed for efficient and comfortable removal of unwanted nose and ear hair. Crafted from a full alloy unibody, it offers a quiet operation and a compact, portable design for convenient use anywhere.

- **Alloy Unibody Construction:** The dense alloy body naturally dampens motor vibration, reducing noise to less than 60dB for a quiet trimming experience.
- **Ultra-Compact and Portable:** Weighing only 99g, its small size makes it ideal for travel and daily carrying.
- **Painless Trimming:** Features a 360° rotating dual-blade system and a rounded arch safety head to prevent scratches and pulling. The 10,000 RPM high-torque motor ensures clean cuts.
- **IPX7 Waterproof:** The trimmer is fully washable under running water for easy cleaning. It can be used wet or dry.
- **USB-C Rechargeable:** Easy charging via any USB-C port. A single full charge provides up to 12 months of regular use (based on 1 minute per week).





Figure 1.1: yoose N1S Nose Hair Trimmer (Black model).

2. SAFETY INFORMATION

Please read all safety instructions before using the yoose N1S Nose Hair Trimmer to ensure safe operation and prevent injury or damage.

- Always fully charge the device before initial use.
- Clean the trimmer after each use to maintain hygiene and performance.
- Avoid submerging the entire trimmer in water for extended periods, despite its IPX7 rating. Rinse only the head and exterior.
- Keep out of reach of children.
- Do not attempt to disassemble or repair the device yourself. Contact customer support for assistance.

- Do not use the trimmer if the blades are damaged or bent, as this may cause injury.

3. PACKAGE CONTENTS

Verify that all items are present in the package upon unboxing:

- 1 x yoose N1S Electric Nose Hair Trimmer
- 1 x Type-C Charging Cable
- 1 x Cleaning Brush
- 1 x User Manual



Figure 3.1: The package includes the trimmer, charging cable, cleaning brush, and user manual.

4. SETUP

4.1 Initial Charging

Before first use, fully charge the trimmer. The device uses a Type-C charging port for convenience.

1. Connect the provided Type-C charging cable to the trimmer's charging port.
2. Plug the other end of the cable into a compatible USB power source (e.g., wall adapter, computer USB port).
3. The indicator light will show charging status (refer to the device's specific light indicators if available, otherwise assume a standard charging light).
4. A full charge typically takes approximately 1 hour and provides up to 100 minutes of run time.

LONG-LASTING BATTERY LIFE

Large capacity battery rejects power anxiety

Charging Time
1H ⚡

Run Time
100 MIN 🔋

Type-C Charging

Figure 4.1: Connect the Type-C cable for charging.

5. OPERATING INSTRUCTIONS

5.1 Trimming Nose Hair

1. Ensure the trimmer is charged and clean.
2. Remove the protective cap from the trimmer head.

3. Press the power button to turn on the device.
4. Gently insert the trimmer head into your nostril, ensuring it does not go too deep.
5. Move the trimmer in a circular motion to effectively cut hairs. The 360° rotating dual-blade system is designed for efficient trimming without pulling.
6. After trimming, press the power button to turn off the device.



DOUBLE-EDGED BLADE

▶ 360° captures and gently removes nose hairs

10000 RPM

HIGH-SPEED MOTOR

Small yet powerful, no tearing of nose hairs

✱ Constant Speed

<60dB <60dB Quiet

Figure 5.1: The dual-edge blade system ensures precise and painless trimming.

5.2 Trimming Ear Hair

1. Follow steps 1-3 from "Trimming Nose Hair".
2. Carefully guide the trimmer head along the outer edges of your ear and into the ear canal opening to trim visible hairs. Do not insert deeply into the ear canal.
3. Move the trimmer gently to cut hairs.
4. After trimming, press the power button to turn off the device.

5.3 Product Demonstration Video

6. MAINTENANCE

6.1 Cleaning the Trimmer

Regular cleaning ensures optimal performance and hygiene. The yoose N1S is IPX7 waterproof, allowing for easy cleaning.

1. Turn off the trimmer before cleaning.
2. Rinse the trimmer head directly under running water. The IPX7 rating means the entire device can be rinsed without disassembly.
3. Use the provided cleaning brush to remove any stubborn hair residue from the blades and inside the trimmer head.
4. Shake off excess water and wipe the trimmer dry with a soft cloth.
5. Replace the protective cap to keep the trimmer head clean and hygienic when not in use.



Figure 6.1: The IPX7 waterproof design allows for easy rinsing under running water.

7. TROUBLESHOOTING

If you encounter issues with your yoose N1S Nose Hair Trimmer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Trimmer does not turn on.	Battery is depleted.	Charge the trimmer fully using the provided USB-C cable.
Trimmer does not cut hair effectively.	Blades are clogged with hair or dull.	Clean the trimmer head thoroughly with the cleaning brush and rinse under water. If blades are dull, contact support for replacement options.
Trimmer pulls hair.	Blades are clogged or battery is low.	Clean the trimmer head and ensure the device is fully charged.
Excessive noise during operation.	Foreign object in the blade area or internal issue.	Turn off and inspect the blade area for any obstructions. If the issue persists, contact customer support.

8. PRODUCT SPECIFICATIONS

Feature	Detail
Model Name	N1S
Product Dimensions	2.76 x 0.9 x 1.59 inches
Item Weight	99 g (3.49 ounces)
Power Source	Battery Powered (Rechargeable Lithium Ion)
Battery Capacity	350 mAh
Battery Average Life	45 minutes (continuous use)
Charging Type	USB-C
Waterproof Rating	IPX7
Blade Material	Alloy Steel, Stainless Steel
Head Type	Rotary, Dual-Edge Blade
Additional Features	Detachable Head, Low Noise (<60dB), Travel Size

9. WARRANTY AND SUPPORT

9.1 Manufacturer Warranty

yoose offers a 30-day unconditional return policy. Products with performance issues within 1 year of purchase will be replaced at no charge rather than repaired. This warranty covers manufacturing defects and performance failures under normal use.

9.2 Customer Support

For any questions, concerns, or warranty claims, please contact the seller, YOOSE Official, directly through your purchase platform. Provide your order number and a detailed description of the issue for prompt assistance.

© 2026 yoose. All rights reserved. This manual is for informational purposes only.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question