

Manuals.plus /

› AMERLIFE /

› AMERLIFE 4-Piece Farmhouse Table Set User Manual - Model CCS002

## AMERLIFE CCS002

# AMERLIFE 4-Piece Farmhouse Table Set User Manual

Model: CCS002

## 1. INTRODUCTION

Thank you for choosing the AMERLIFE 4-Piece Farmhouse Table Set. This set includes a TV stand, a coffee table, and two end tables, designed to complement your living space. This manual provides essential information for the safe assembly, operation, and maintenance of your new furniture set. Please read these instructions carefully before assembly and retain them for future reference.



Image 1.1: The complete AMERLIFE 4-Piece Farmhouse Table Set in a living room setting. The set includes a TV stand, a coffee table, and two end tables, all featuring a dark oak finish.

## 2. SAFETY INFORMATION

---

- **Read All Instructions:** Ensure you understand all assembly steps and safety warnings before beginning.
- **Adult Assembly Required:** This product requires adult assembly. Keep small parts away from children.
- **Use Correct Tools:** Use only the tools specified in the assembly guide.
- **Proper Placement:** Place the furniture on a flat, stable surface. Avoid placing heavy objects on top of the furniture that exceed its weight capacity.
- **Electrical Safety (for End Tables):** The end tables include integrated electrical outlets and USB ports. Ensure the power cord is not pinched or damaged. Do not overload the outlets. Disconnect from power before cleaning or if any damage is observed.
- **Tip-Over Prevention:** For the TV stand, consider using wall anchor kits (not included) to prevent accidental tip-over, especially in households with children.

## 3. PACKAGE CONTENTS

---

Upon opening the package, verify that all components are present and undamaged. If any parts are missing or damaged, please contact customer support.

### Included Items:

- 1 x TV Stand with Sliding Barn Doors
- 1 x Coffee Table
- 2 x End Tables with Charging Station and USB Ports
- Assembly Hardware Kit (screws, dowels, cam locks, etc.)
- Assembly Instructions (separate document, not part of this manual)

## 4. ASSEMBLY INSTRUCTIONS

---

This section provides general guidelines for assembling your AMERLIFE furniture set. Detailed, step-by-step instructions with diagrams are included in a separate document within your product packaging. Please refer to that document for specific assembly procedures for each piece.

### General Assembly Guidelines:

1. **Unpack and Identify:** Carefully unpack all components and hardware. Lay them out on a clean, soft surface (e.g., a blanket or cardboard) to prevent scratches. Identify each part using the provided parts list.
2. **Gather Tools:** Ensure you have the necessary tools, typically a Phillips head screwdriver and possibly a hammer.
3. **Follow Step-by-Step:** Adhere strictly to the numbered steps in the included assembly manual. Do not skip steps.
4. **Do Not Overtighten:** Tighten screws firmly, but do not overtighten, as this can damage the engineered wood.

5. **Two-Person Assembly:** For larger items like the TV stand, two people are recommended for safer and easier assembly.
6. **Check Stability:** Once assembled, gently shake each piece to ensure it is stable and all connections are secure.



## Details



Smoothy Rails



Cable Management



Adjustable Feet

Image 4.1: Detailed view of the TV stand's features, including smooth sliding rails for the barn doors, a cable management cutout in the back panel, and adjustable feet for stability on uneven surfaces.



## Details



Sturdy Structure



Retro X-Shape



Wood Grain Surface

Image 4.2: Detailed view of the coffee table, highlighting its sturdy construction, decorative X-shaped side supports, and the textured wood grain surface.

## 5. OPERATING INSTRUCTIONS

### 5.1 TV Stand

- **Sliding Barn Doors:** The TV stand features two sliding barn doors. Gently slide the doors along the top rail to access or conceal the central shelves.
- **Cable Management:** Utilize the round cut-outs in the back panel to route and organize cables from electronic devices, maintaining a tidy appearance.
- **Adjustable Shelves:** The internal shelves may be adjustable to accommodate various media devices or storage items. Refer to the assembly manual for specific adjustment instructions.

### 5.2 End Tables with Charging Station

- **Power Connection:** Plug the 4.9 ft power cord from the end table into a standard 120V AC wall outlet.
- **AC Outlets:** The end table is equipped with two 120V/12A standard AC outlets. Use these for powering lamps, laptops, or other small appliances.

- **USB Ports:** Two 5V/2A USB ports are provided for charging mobile phones, tablets, and other USB-powered devices.
- **Door Access:** The end tables feature a small barn door that slides to reveal a storage compartment.



Image 5.1: A close-up of one of the end tables, showcasing the integrated charging station with two AC outlets and two USB ports, along with its 4.9-foot power cord. A tablet is shown charging on the tabletop.

## 6. MAINTENANCE

- **Cleaning:** Wipe the furniture surfaces with a dry, soft cloth. Avoid using harsh chemicals, abrasive cleaners, or excessive moisture, as these can damage the finish.
- **Spills:** Immediately blot any spills with a clean, dry cloth.
- **Sunlight Exposure:** Avoid prolonged exposure to direct sunlight to prevent fading or discoloration.
- **Heat and Moisture:** Do not place hot items directly on the surface. Use coasters or protective pads. Protect from excessive moisture.
- **Hardware Check:** Periodically check and tighten all assembly hardware to ensure the furniture remains stable and secure.

## 7. TROUBLESHOOTING

## 7.1 General Issues

- **Wobbly Furniture:** Ensure all screws and fasteners are securely tightened. Check if the furniture is on an even surface; use the adjustable feet on the TV stand if applicable.
- **Scratches/Dents:** Minor scratches can sometimes be touched up with a furniture repair marker matching the dark oak finish.

## 7.2 Electrical Issues (End Tables)

- **No Power from Outlets/USB:**
  - a. Ensure the end table's power cord is fully plugged into a functional wall outlet.
  - b. Check if the wall outlet itself is working by plugging in another device.
  - c. Avoid overloading the outlets. Unplug some devices and try again.
  - d. Inspect the power cord for any visible damage. If damaged, discontinue use and contact customer support.

## 8. SPECIFICATIONS

Feature	Specification
Brand	AMERLIFE
Model Number	CCS002
Material	Engineered Wood (MDF, Particle Board)
Color	Dark Oak
Overall Item Weight	85.1 pounds
TV Stand Dimensions (L x W x H)	66" x 15.6" x 28"
Coffee Table Dimensions (L x W x H)	40" x 21.6" x 17.8"
End Table Dimensions (L x W x H)	17.4" x 15.4" x 25"
End Table Power Outlets	2 x 120V/12A AC Outlets (ETL-certified)
End Table USB Ports	2 x 5V/2A USB Ports
End Table Power Cord Length	4.9 ft
Product Care Instructions	Wipe with Dry Cloth



Image 8.1: Technical drawing illustrating the dimensions of the TV stand (66" W x 15.6" D x 28" H), coffee table (40" W x 21.6" D x 17.9" H), and end tables (17.4" W x 15.4" D x 25" H).

## 9. WARRANTY AND SUPPORT

This AMERLIFE product comes with a **1-year warranty** from the date of purchase. This warranty covers manufacturing defects under normal use. It does not cover damage resulting from improper assembly, misuse, accidents, or normal wear and tear.

For warranty claims, missing parts, or technical support, please contact AMERLIFE customer service through the retailer where the product was purchased. Please have your model number (CCS002) and proof of purchase available.