

AKCISOT AKCISOT364

AKCISOT 10-Inch Silent Wall Clock User Manual

Model: AKCISOT364

1. INTRODUCTION

Thank you for choosing the AKCISOT 10-Inch Silent Wall Clock. This clock is designed to provide accurate timekeeping with a non-ticking, quiet sweep movement, making it suitable for various indoor environments such as offices, homes, bathrooms, kitchens, bedrooms, schools, and living rooms. This manual provides essential information for the proper setup, operation, and maintenance of your new wall clock.

2. PACKAGE CONTENTS

Please check the package for the following items:

- 1 x AKCISOT 10-Inch Silent Wall Clock
- 1 x Wall Hook

Note: Batteries are not included and must be purchased separately. One AA battery is required.

3. SAFETY INFORMATION

- Keep the clock away from extreme temperatures, direct sunlight, and high humidity.
- Do not expose the clock to water or other liquids.
- Use only the specified battery type (1 x AA).
- Remove batteries if the clock will not be used for an extended period to prevent leakage.
- Dispose of used batteries responsibly according to local regulations.
- Do not attempt to disassemble or repair the clock yourself. Contact customer support if issues arise.
- Keep out of reach of small children to prevent choking hazards from small parts.

4. SETUP

4.1 Battery Installation

1. Locate the battery compartment on the back of the clock.
2. Insert one (1) AA battery, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
3. Close the battery compartment cover securely.

4.2 Setting the Time

1. After installing the battery, locate the time adjustment knob on the back of the clock.
2. Rotate the knob clockwise until the clock hands display the correct time.
3. Ensure the minute and hour hands are properly aligned.

4.3 Mounting the Clock

The AKCISOT wall clock is designed for easy wall mounting.

1. Choose a suitable location on a wall, ensuring it is sturdy enough to hold the clock's weight.
2. Using the provided wall hook, carefully install it into the wall according to its instructions. Ensure it is securely fastened.
3. Hang the clock onto the hook using the hanging slot located on the back of the clock mechanism.
4. Verify the clock is stable and level.

SIZE OPTIONS



8 INCH

12 INCH



10 INCH



Image 1: Front view of the AKCISOT 10-Inch Silent Wall Clock, showing the clear numerals and hands.

5. OPERATING INSTRUCTIONS

Once the battery is installed and the time is set, your AKCISOT wall clock will begin operating automatically. The clock features a silent sweep movement, meaning the second hand moves continuously without a ticking sound, providing a quiet environment.

- The clock is designed for indoor use only.
- It operates continuously as long as the battery has sufficient power.
- No further adjustments are typically needed unless the time needs to be reset (e.g., for daylight saving changes or after battery replacement).

6. MAINTENANCE

6.1 Cleaning

- To clean the clock, gently wipe the surface with a soft, dry cloth.
- Do not use abrasive cleaners, solvents, or chemical sprays, as these may damage the clock's finish or internal components.

6.2 Battery Replacement

- When the clock hands stop moving or the time becomes inaccurate, it is an indication that the battery needs to be replaced.
- Follow the battery installation steps (Section 4.1) to replace the old battery with a new AA battery.
- Remember to reset the time after replacing the battery (Section 4.2).

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Clock not working / Hands not moving	Battery is dead or incorrectly installed.	Replace the battery with a new AA battery, ensuring correct polarity.
Clock runs slow or fast / Inaccurate time	Low battery power or incorrect time setting.	Replace the battery. Reset the time using the adjustment knob.
Loud ticking sound	This clock features a silent sweep movement and should not tick. If ticking occurs, the mechanism may be faulty.	Contact customer support for assistance.

8. SPECIFICATIONS

Copyright Cetificate[®]

Exclusive Design

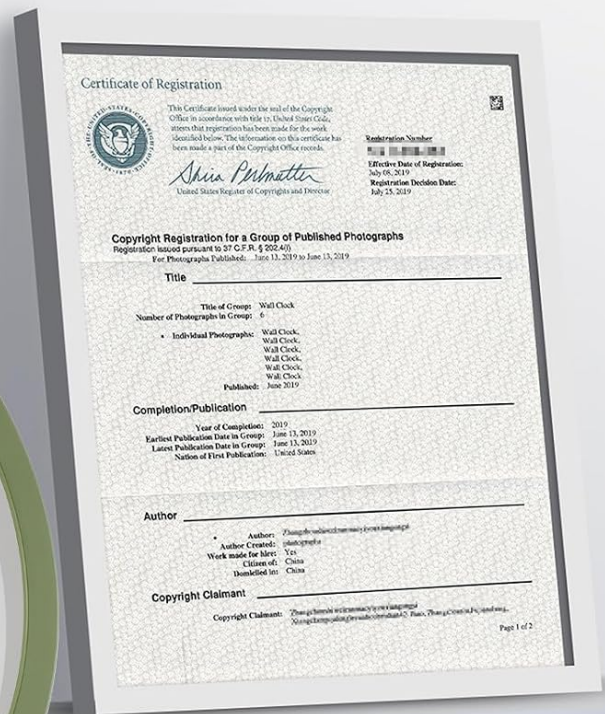


Image 2: This image illustrates various size options for AKCISOT wall clocks. The specific model covered by this manual is the 10-inch version, indicated by the red triangle.

- **Brand:** AKCISOT
- **Model Number:** AKCISOT364
- **Colour:** Olive Green
- **Display Type:** Analogue
- **Style:** Modern
- **Special Feature:** Silent Clock
- **Product Dimensions:** 25.4 cm (Diameter) x 5 cm (Depth)
- **Power Source:** Battery Powered (1 x AA battery, not included)
- **Room Type:** Bathroom, Office, Home, Kitchen, Bedroom, School, Living Room
- **Shape:** Round
- **Indoor/Outdoor Usage:** Indoor
- **Watch Movement:** Quartz

- **Mounting Type:** Wall Mount
- **Material Type:** Plastic (Frame Material)
- **Item Weight:** Approximately 0.88 Pounds (0.4 kg)

9. WARRANTY AND SUPPORT

AKCISOT is committed to providing high-quality products. For any questions, concerns, or issues regarding your AKCISOT 10-Inch Silent Wall Clock, please contact AKCISOT customer support through the retailer's platform or the official AKCISOT website. Please have your model number (AKCISOT364) and purchase information ready when contacting support.

© 2026 AKCISOT. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question