

[Manuals.plus](#) /

› [PSIDE](#) /

› Parkside PHD 135 F5 High-Pressure Cleaner User Manual

PSIDE PARKSIDE® PHD 135 F5

Parkside PHD 135 F5 High-Pressure Cleaner User Manual

Model: PARKSIDE® PHD 135 F5 | Brand: PSIDE

INTRODUCTION

This manual provides essential information for the safe and effective operation, maintenance, and troubleshooting of your Parkside PHD 135 F5 High-Pressure Cleaner. Please read these instructions carefully before first use and keep them for future reference.

IMPORTANT SAFETY INSTRUCTIONS

Always observe basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and personal injury.

- Ensure the power supply matches the specifications on the product label.
- Do not direct the water jet at electrical equipment or the appliance itself.
- Keep children and pets away from the operating area.
- Always disconnect the power plug before cleaning, maintenance, or when the appliance is not in use.
- Wear appropriate personal protective equipment, such as safety glasses, during operation.
- Do not use the appliance if the power cord or other important parts are damaged.
- The pistol grip features a child safety lock; always engage it when not actively spraying.

PRODUCT OVERVIEW

The Parkside PHD 135 F5 is a versatile high-pressure cleaner designed for various outdoor cleaning tasks. It features an energy-saving auto start/stop system, large wheels for mobility, and an integrated detergent tank.



Image: The Parkside PHD 135 F5 High-Pressure Cleaner, showing its compact design, wheels, and the attached high-pressure hose and spray lance.

Key Features:

- Three operating modes: Vario jet, turbo nozzle, and detergent application.
- Easy nozzle change with Quick Connect system.
- Energy-saving auto start/stop system: motor operates only when the pistol grip is pressed.
- Highly mobile with large wheels and a foldable handle.
- 7-meter anti-twist high-pressure hose.
- Integrated 600 ml detergent tank with automatic mixing during low-pressure operation.
- Ergonomic pistol grip with child safety lock.
- Practical holders for cables and accessories.
- Parkside Click system: compatible with common hose systems.

SETUP AND ASSEMBLY

Before first use, assemble the high-pressure cleaner according to the following steps:

1. **Unpack:** Carefully remove all components from the packaging.
2. **Attach Wheels and Handle:** Secure the large wheels and foldable handle to the main unit as indicated in the diagrams (refer to product packaging for visual guide).
3. **Connect High-Pressure Hose:** Attach the 7-meter high-pressure hose to the appliance's high-pressure outlet and the pistol grip. Ensure a secure, anti-twist connection.
4. **Install Nozzle:** Select the desired nozzle (Vario or turbo) and attach it to the lance using the Quick Connect system.
5. **Connect Water Supply:** Connect a garden hose (not included) to the water inlet of the high-pressure cleaner. Ensure the water filter is in place. The Parkside Click system is compatible with common hose systems.
6. **Fill Detergent Tank (Optional):** If using detergent, fill the integrated 600 ml tank with suitable high-pressure cleaner detergent.
7. **Connect Power:** Plug the 5-meter power cable into a suitable electrical outlet.

OPERATING INSTRUCTIONS

Follow these steps for effective and safe operation:

1. **Prepare for Use:** Ensure all connections are secure and the water supply is turned on.
2. **Prime the Pump:** Before switching on, press the pistol grip trigger to allow water to flow through the system and

expel any air. This prevents damage to the pump.

3. **Switch On:** Turn on the main power switch of the high-pressure cleaner. The auto start/stop system will activate the motor only when the trigger is pressed.
4. **Select Nozzle/Mode:**
 - **Vario Jet Nozzle:** Adjust the spray pattern from a concentrated jet to a wide fan by rotating the nozzle. Suitable for general cleaning.
 - **Turbo Nozzle:** Provides a rotating point jet for stubborn dirt. Use with caution on delicate surfaces.
 - **Detergent Application:** Switch to low-pressure mode (usually by rotating the Vario nozzle to the widest setting or a dedicated detergent setting). The integrated detergent tank will automatically mix detergent with the water.
5. **Begin Cleaning:** Direct the spray lance towards the surface to be cleaned, maintaining a safe distance to avoid damage. Always start with a lower pressure or wider spray pattern on unknown surfaces.
6. **Child Safety Lock:** When not actively spraying, engage the child safety lock on the pistol grip to prevent accidental activation.
7. **Shut Down:** After use, turn off the main power switch. Disconnect the power plug. Turn off the water supply. Press the pistol grip trigger to release any remaining pressure in the system.

MAINTENANCE AND STORAGE

Regular maintenance ensures the longevity and optimal performance of your high-pressure cleaner.

- **Cleaning Nozzles:** Use the provided nozzle cleaning needle to clear any blockages in the nozzles.
- **Water Filter:** Regularly check and clean the water filter at the inlet to prevent debris from entering the pump.
- **Detergent Tank:** After using detergent, rinse the detergent tank thoroughly with clean water to prevent residue buildup.
- **General Cleaning:** Wipe down the exterior of the appliance with a damp cloth. Do not use abrasive cleaners.
- **Frost Protection:** In cold climates, ensure all water is drained from the pump and hoses before storage to prevent frost damage. Store the unit in a frost-free environment.
- **Storage:** Utilize the practical holders for cables and accessories. Store the high-pressure cleaner in a dry, secure place, out of reach of children.

TROUBLESHOOTING

This section addresses common issues you might encounter. For problems not listed here, contact qualified service personnel.

Problem	Possible Cause	Solution
No water pressure / Low pressure	Water supply off or restricted Air in the pump Nozzle blocked Water filter dirty	Check water tap and hose connection Prime the pump by pressing trigger with water on Clean nozzle with cleaning needle Clean water filter

Problem	Possible Cause	Solution
Motor does not start	No power supply Thermal overload protection activated Pistol grip not pressed	Check power plug and outlet Allow unit to cool down Press the pistol grip trigger to activate auto start/stop
Detergent not dispensing	Detergent tank empty Not in low-pressure mode Detergent nozzle/line blocked	Refill detergent tank Switch to low-pressure setting on Vario nozzle Clean detergent nozzle/line

TECHNICAL SPECIFICATIONS

Parameter	Value
Model	PARKSIDE® PHD 135 F5
Power Consumption	1800 W
Max. Flow Rate	420 l/h
Working/Rated Pressure	max. 9 MPa (90 bar)
Max. Pressure	13.5 MPa (135 bar)
Detergent Tank Capacity	600 ml
Hose Length	7 meters (anti-twist)
Power Cable Length	approx. 5 meters
Dimensions (L x W x H)	approx. 24.6 x 26 x 77.8 cm
Weight	approx. 7.5 kg
Materials	Plastic, Fiberglass, Aluminum

INCLUDED ACCESSORIES

- 1 x Pistol Grip
- 1 x Lance
- 1 x Vario Standard Nozzle
- 1 x Turbo Nozzle
- 1 x Nozzle Cleaning Needle
- 1 x Quick Connector
- 1 x Water Filter
- 1 x 7-meter High-Pressure Hose

WARRANTY AND SUPPORT

Specific warranty terms and conditions are typically provided with your purchase documentation. Please refer to the warranty card or contact the manufacturer's customer support for detailed information regarding warranty coverage, service, and spare parts. Keep your proof of purchase for any warranty claims.

