

[Manuals.plus](#) /

> [yoose](#) /

> yoose Nose Hair Trimmer User Manual

yoose N1S

yoose Nose Hair Trimmer User Manual

Model: N1S | Brand: yoose

INTRODUCTION

Thank you for choosing the yoose Alloy Rechargeable Nose Hair Trimmer. This device is designed for effective and comfortable removal of unwanted hair from the nose and ears. Its compact, portable design and IPX7 waterproof rating make it ideal for both home use and travel. Please read this manual thoroughly before use to ensure proper operation and maintenance.

WHAT'S IN THE BOX

- 1 x yoose Alloy Nose Hair Trimmer
- 1 x USB-C Charging Cable
- 1 x Cleaning Brush
- 1 x User Manual
- 1 x Silver Card Graffiti Gift Box



Image: All items included in the yoose Nose Hair Trimmer package.

SETUP

Charging the Device

Before initial use, fully charge your yoose Nose Hair Trimmer. The device features a built-in Li-ion battery (350 mAh) and supports USB-C charging for convenience. A full charge provides up to 45 minutes of runtime.

1. Locate the USB-C charging port on the trimmer.
2. Connect the provided USB-C charging cable to the trimmer and a compatible USB power source (e.g., wall adapter, computer USB port).
3. Allow the device to charge completely. The charging indicator light (if present, not specified in input) will typically change or turn off when fully charged.

No Pain & No Pulling

Comfortably takes out unwanted hair



Image: The yoose Nose Hair Trimmer being charged via its USB-C port.

OPERATING INSTRUCTIONS

The yoose Nose Hair Trimmer is designed for painless and efficient trimming of nose and ear hair. It features a one-button design for simple operation.

1. Ensure the device is adequately charged.
2. Remove the protective cap from the trimmer head.
3. Press the power button to turn on the trimmer. The high-speed 10,000 RPM motor will activate the dual-edged blades.
4. Slowly and gently insert the comfortable tapered tip into your nose or ear.
5. Allow the trimmer to operate for at least 60 seconds to effectively trim hairs to the appropriate length. The 360° capture system ensures thorough trimming without pulling.
6. After trimming, press the power button again to turn off the device.
7. Clean the device as described in the Maintenance section.

Note: This trimmer is designed to trim nose hair to the proper length, not to completely remove it, which helps protect the health of your nasal passages.

Charge and Go

1H
Charging

100_{mins}
Battery Life

6_{months}
daily use

USB-C
Convenient Charging

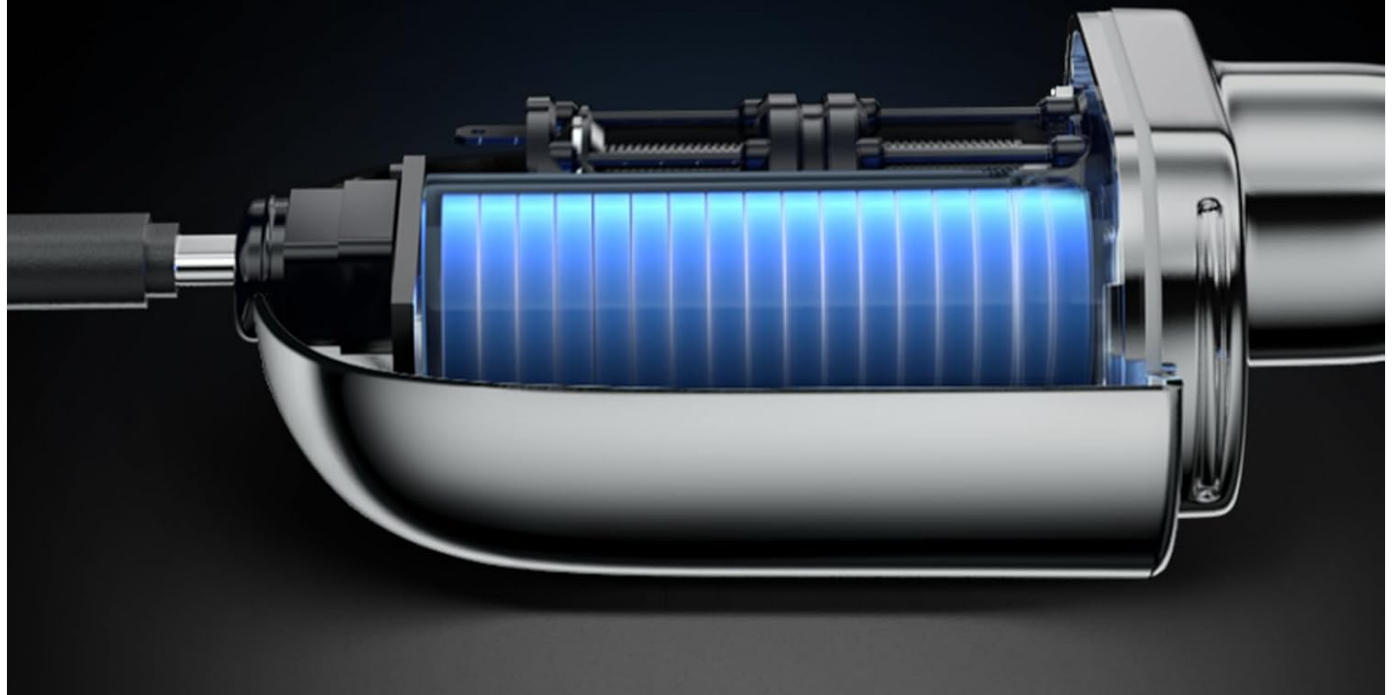 


Image: Demonstrating the comfortable and painless use of the trimmer for nose hair.

Give Love, Get Love



Image: Internal view highlighting the 10,000 RPM motor and dual-edged blade system for precise trimming.

MAINTENANCE

Regular cleaning ensures optimal performance and hygiene of your yoose Nose Hair Trimmer. The device is IPX7 waterproof, allowing for easy cleaning.

1. Ensure the trimmer is turned off before cleaning.
2. Gently twist and detach the cutter head from the main body of the trimmer.
3. Rinse the detached cutter head and the main body under running water to remove any trimmed hairs and debris. You may use the provided cleaning brush for stubborn hairs.
4. Allow both parts to air dry completely before reassembling.
5. Once dry, reattach the cutter head by aligning it and twisting until it clicks securely into place.

Travel Friendly

Fits easily in your pocket or bag

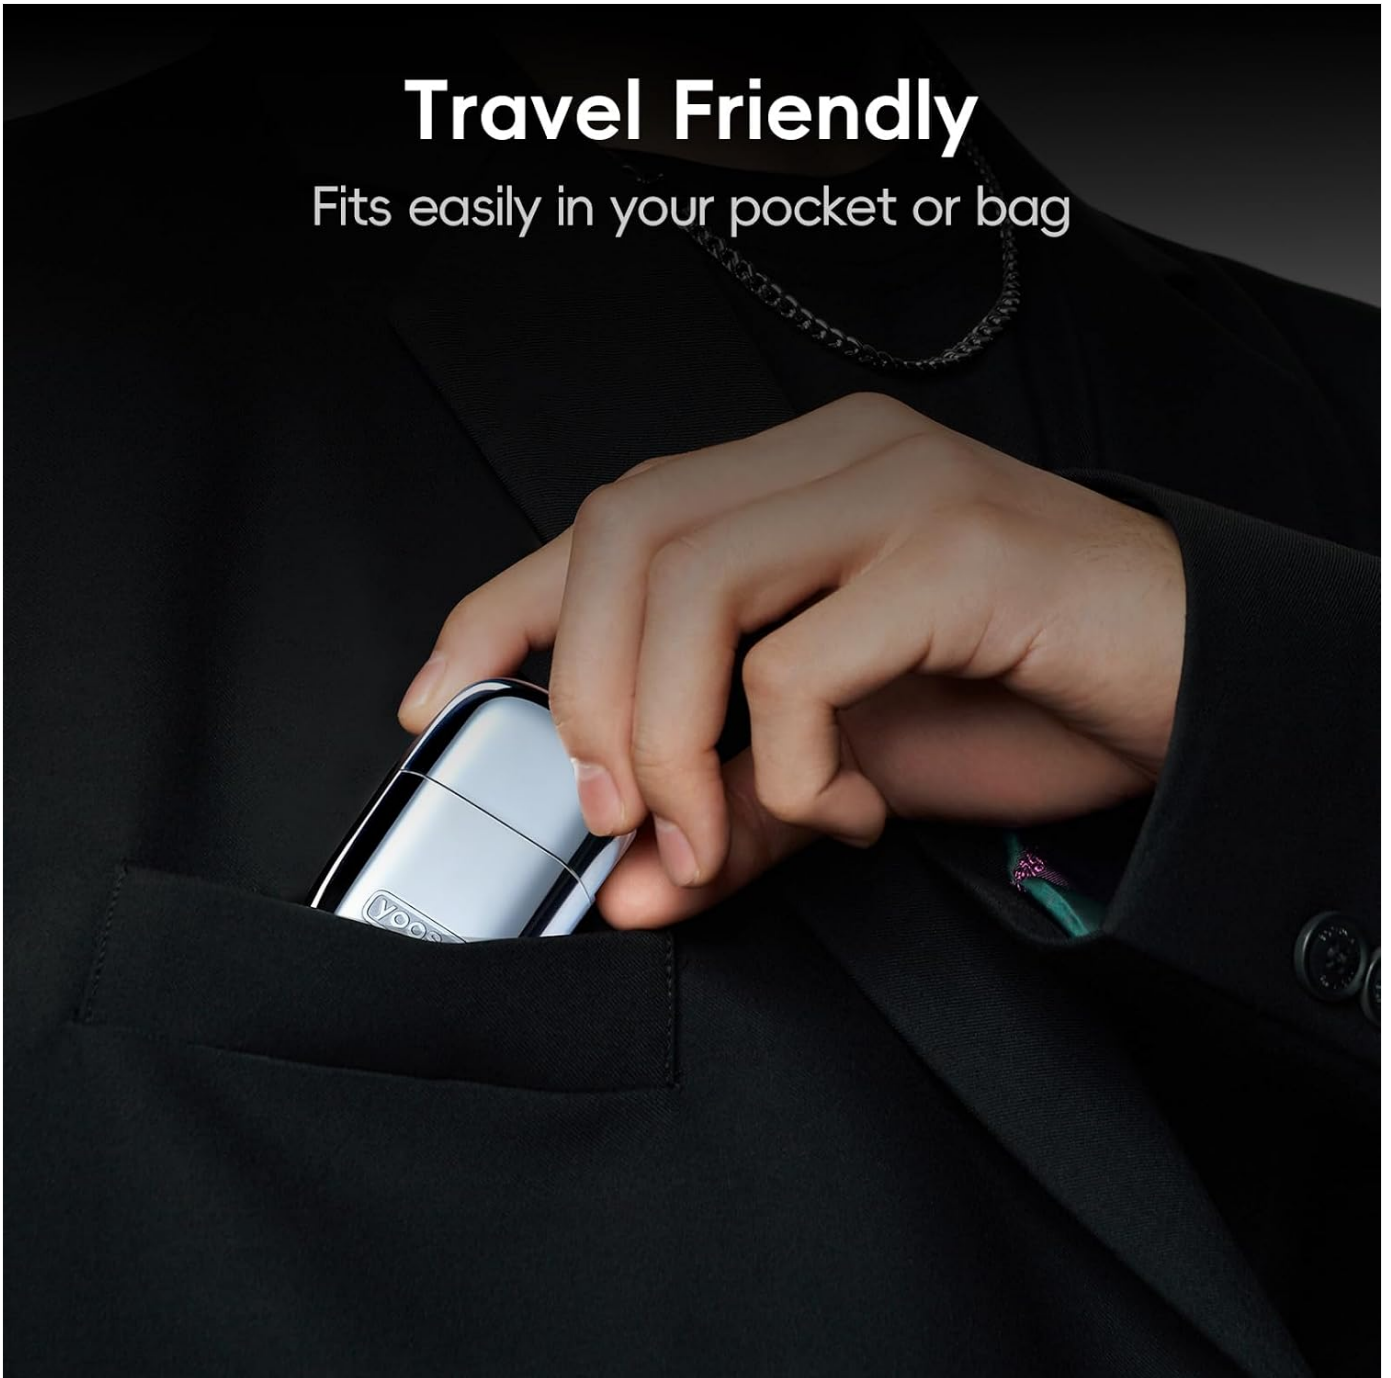 



Image: The trimmer is fully washable and can be rinsed under water for easy cleaning.

Nose Hair Trimmer

Mini & Portable

High-Speed Motor

 10000 RPM
High Speed Motor

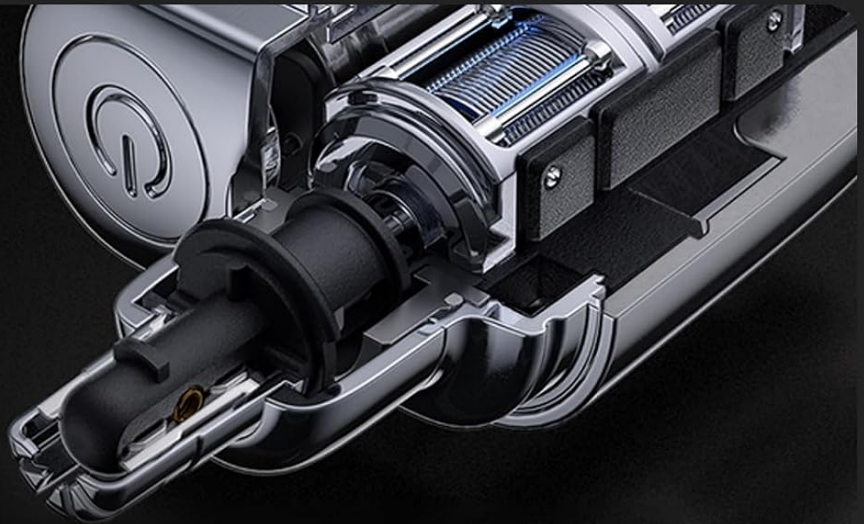

Domed Cutterheads



Dual Edge Blades



Image: Visual guide for detaching the head, rinsing, and reinstalling for thorough cleaning.

SAFETY INFORMATION

- Avoid direct contact with moving blades to prevent cuts or skin irritation.
- Clean the device thoroughly after each use to prevent bacterial growth and maintain hygiene.
- Do not use the trimmer near water or while charging to avoid electrical hazards, unless specifically designed for wet use (this product is IPX7 waterproof, but charging near water is still not recommended).
- Keep out of reach of children.
- Do not disassemble or attempt to repair the device yourself. Contact customer support for assistance.

TROUBLESHOOTING

If you encounter any issues with your yoose Nose Hair Trimmer, please refer to the following common solutions:

Problem	Possible Cause	Solution
Trimmer does not turn on.	Low battery or no charge.	Ensure the device is fully charged using the provided USB-C cable.
Trimmer is not cutting effectively.	Cutter head is clogged with hair or debris.	Clean the cutter head thoroughly as per the Maintenance section. Ensure it is properly reattached.
Device makes unusual noise.	Cutter head not properly attached or internal issue.	Reattach the cutter head securely. If the noise persists, contact customer support.

If the problem persists after attempting these solutions, please contact yoose customer support for further assistance.

SPECIFICATIONS

Model Name	N1S
Product Dimensions	2.78 x 0.9 x 1.6 inches
Weight	3.49 ounces
Battery Type	1 Lithium Ion battery (included)
Battery Capacity	350 mAh
Runtime	Up to 45 minutes (after full charge)
Charging Port	USB-C
Waterproof Rating	IPX7
Motor Speed	10,000 RPM
Recommended Uses	Nose, Ear, Eyebrows
Manufacturer	yoose
Country of Origin	China

WARRANTY & SUPPORT

Your yoose Nose Hair Trimmer comes with a warranty. Please refer to the warranty card included in your product packaging for specific terms and conditions. For product support, technical assistance, or warranty claims, please contact yoose customer service.

You can find more information and contact details on the official yoose store page:[yoose Store](#).

OFFICIAL PRODUCT VIDEOS

There are currently no official product videos provided by the seller for this item. All available videos are from customer reviews.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question