

Candy CA6 N5B3EYTB

Candy C-Bake 600 CA6 N5B3EYTB Multifunction Oven User Manual

Model: CA6 N5B3EYTB (33703818)

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation, installation, and maintenance of your Candy C-Bake 600 CA6 N5B3EYTB multifunction oven. Please read these instructions carefully before using the appliance and retain them for future reference.

The Candy C-Bake 600 oven is designed to offer a connected culinary experience with advanced features like Pyrolytic and Aqualytic cleaning, convection cooking, and Wi-Fi connectivity via the hOn App. It boasts a 78-liter capacity and 13 cooking functions to ensure excellent results.

2. SAFETY INFORMATION

General Safety Warnings:

- This appliance can be used by children aged 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- The appliance and its accessible parts become hot during use. Care should be taken to avoid touching heating elements.
- Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass since they can scratch the surface, which may result in shattering of the glass.
- Ensure the appliance is switched off before replacing the lamp to avoid the possibility of electric shock.
- Do not use a steam cleaner for cleaning.
- The appliance is not intended to be operated by means of an external timer or separate remote-control system.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

Electrical Connection:

- Ensure the voltage indicated on the rating plate corresponds to the mains voltage in your home.
- The appliance must be earthed.
- Do not use adapters, multiple sockets, or extension leads.

3. WHAT'S IN THE BOX

Upon unpacking, please verify that all components are present and undamaged:

- Candy C-Bake 600 CA6 N5B3EYTB Multifunction Pyrolytic Oven
- 1 x Baking Tray
- 2 x Wire Grids
- Power Cable
- Instruction Manual (this document)

If any items are missing or damaged, please contact your retailer or Candy customer service immediately.



Figure 3.1: Oven Interior with Accessories. This image displays the oven cavity, including the provided baking tray and two wire grids.

4. SETUP AND INSTALLATION

Important: Installation of this appliance should be carried out by a qualified technician in accordance with local safety regulations.

4.1. Appliance Dimensions

The oven is designed for built-in installation. Refer to the diagram below for precise measurements.

- **Product Dimensions (H x W x D):** 59.5 cm x 59.5 cm x 54.8 cm
- **Niche Dimensions (H x W x D):** 59 cm x 56 cm x 56 cm

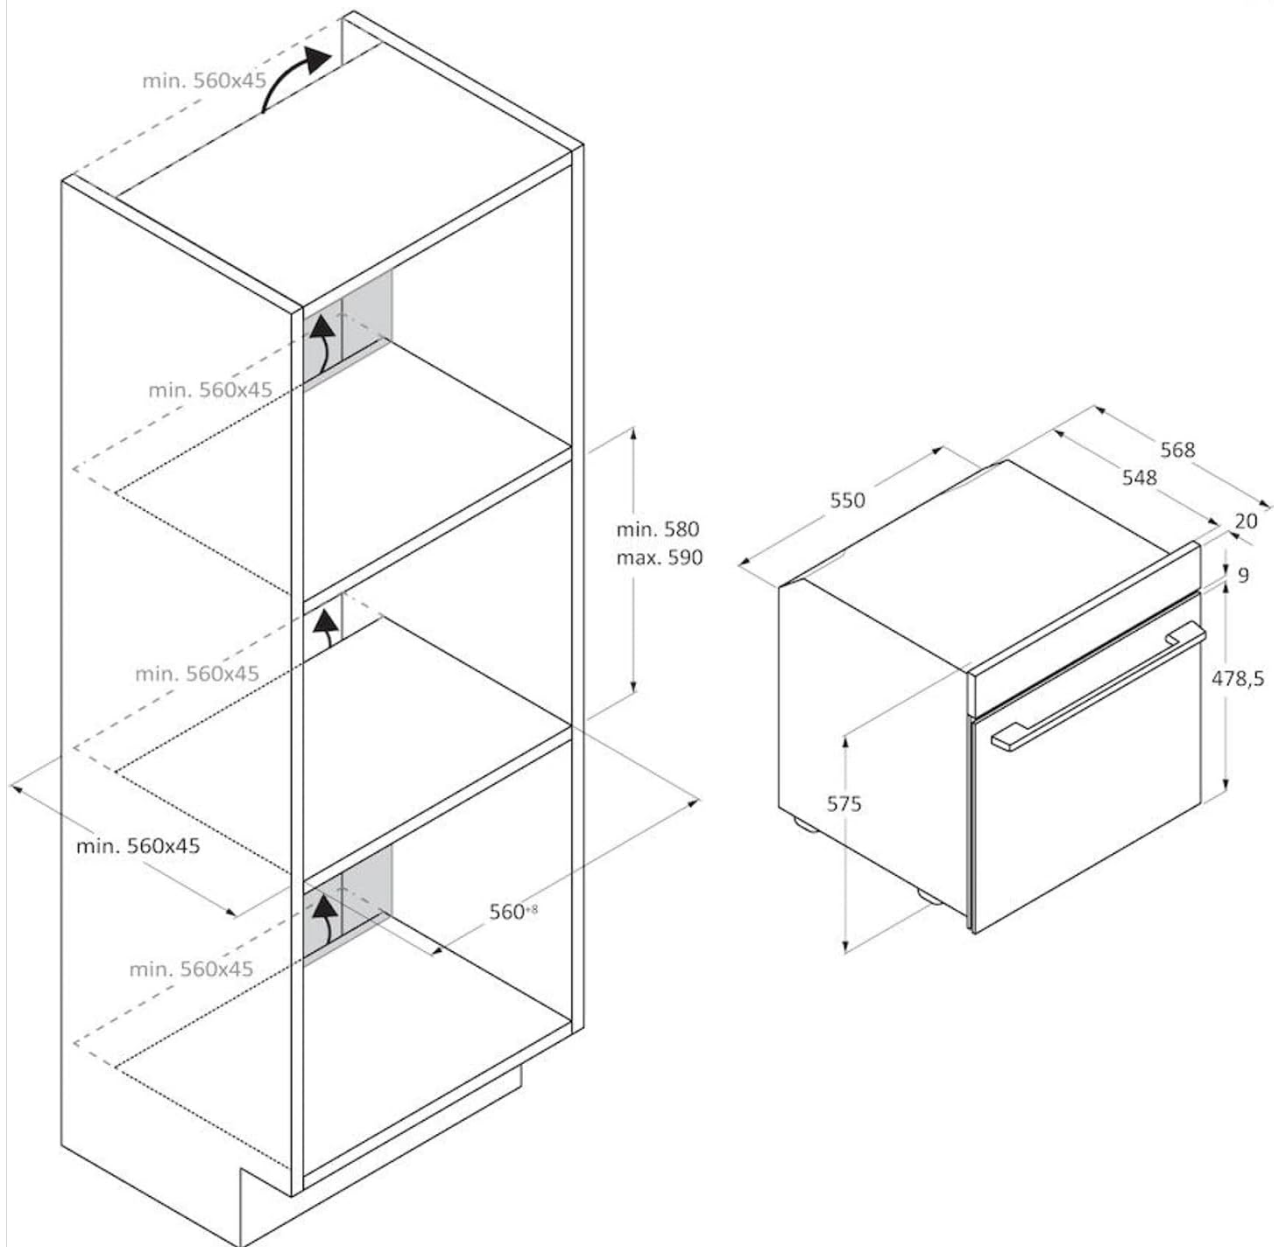


Figure 4.1: Oven and Niche Dimensions. This diagram illustrates the required cabinet opening and the external dimensions of the oven for proper installation.

4.2. Positioning the Oven

Ensure adequate ventilation around the appliance. Do not obstruct ventilation openings. The oven should be placed in a cabinet that can withstand high temperatures.

4.3. Electrical Connection

Connect the oven to a suitable earthed power supply. The power cable is provided. Consult a qualified electrician if you are unsure about the electrical connection.

5. OPERATING INSTRUCTIONS

Your Candy C-Bake 600 oven features intuitive controls and a digital display. Familiarize yourself with the control knobs and display before first use.



Figure 5.1: Oven Control Panel. This image shows the front of the oven, highlighting the two control knobs and the central digital display.

5.1. First Use

1. Remove all packaging materials and accessories from the oven cavity.
2. Clean the oven interior with a damp cloth and mild detergent.
3. Heat the empty oven at maximum temperature for approximately 30 minutes to burn off any manufacturing residues. Ensure the kitchen is well-ventilated during this process.

5.2. Setting the Time

Upon first connection or after a power outage, the display will flash. Use the control knob to set the current time, then confirm.

5.3. Cooking Functions

The oven offers 13 functions, including:

- **Convection:** Ideal for even cooking and baking on multiple levels.
- **Grill:** For browning and grilling.
- **Bottom Heat:** For crisping bases.

- **Easy Steam:** Incorporates steam for healthier and more uniform cooking results.
- Specific programs for various dishes.

To select a function, turn the left control knob to the desired symbol. Adjust the temperature using the right control knob.



Figure 5.2: Cooking in Progress. This image shows the oven interior with the door open, revealing a dish being cooked on a rack, demonstrating the oven's capacity.

5.4. Wi-Fi Connectivity (hOn App)

The oven can be controlled remotely via the hOn App. Follow these steps to connect:

1. Download the hOn App from your smartphone's app store.
2. Create an account or log in.
3. Follow the in-app instructions to pair your oven. This typically involves activating Wi-Fi on the oven and confirming the connection in the app.
4. Once connected, you can remotely control functions, access over 300 recipes, and receive notifications.

6. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the lifespan of your oven. The Candy C-Bake 600 offers two advanced cleaning systems.

6.1. Pyrolytic Cleaning

Pyrolytic cleaning uses extremely high temperatures (up to 470°C) to burn off food residues, turning them into ash that can be easily wiped away.

1. Remove all accessories (trays, grids, side racks) from the oven cavity before starting a pyrolytic cycle.

- 2. Wipe away any large spills or loose debris.
- 3. Select the pyrolytic cleaning function on the control panel.
- 4. The oven door will automatically lock during the cycle and remain locked until the oven has cooled down to a safe temperature.
- 5. Once the cycle is complete and the oven has cooled, wipe away the ash with a damp cloth.

Warning: Ensure the kitchen is well-ventilated during pyrolytic cleaning, as some fumes may be produced.

6.2. Aqualytic Cleaning

Aqualytic cleaning uses steam to soften grease and food residues, making them easier to remove.

- 1. Pour approximately 300 ml of water into the bottom of the oven cavity.
- 2. Select the Aqualytic cleaning function. The oven will heat to approximately 90°C for 30 minutes.
- 3. After the cycle, allow the oven to cool slightly.
- 4. Wipe away softened residues with a damp cloth or sponge.

6.3. Exterior Cleaning

Clean the exterior surfaces with a soft, damp cloth and mild detergent. Avoid abrasive cleaners or solvents that could damage the finish.

7. TROUBLESHOOTING

If you encounter issues with your oven, consult the following table before contacting customer service.

Problem	Possible Cause	Solution
Oven does not heat	No power supply; Incorrect function/temperature setting; Door not closed properly.	Check power connection and circuit breaker; Verify function and temperature settings; Ensure door is fully closed.
Display shows an error code	Internal fault.	Switch off the oven at the mains for a few minutes, then switch it back on. If the error persists, contact customer service.
Uneven cooking	Incorrect rack position; Overcrowding the oven; Door opened too frequently.	Use recommended rack positions; Avoid overcrowding; Minimize opening the door during cooking.
Wi-Fi connection issues	Router issues; Incorrect Wi-Fi password; Oven too far from router.	Restart your router; Re-enter Wi-Fi password in the hOn App; Move oven closer to router or use a Wi-Fi extender.

8. SPECIFICATIONS

Feature	Detail
Brand	Candy
Model	C-Bake 600 CA6 N5B3EYTB
Model Number	33703818

Feature	Detail
Capacity	78 Liters
Power	3300 Watts
Heating Method	Convection
Installation Type	Built-in
Cleaning Functions	Pyrolysis, Aqualysis
Special Features	13 Functions, Wi-Fi Connectivity, Steam Function, Telescopic Guide, 4-Glass Door
Product Dimensions (H x W x D)	59.5 cm x 59.5 cm x 54.8 cm
Niche Dimensions (H x W x D)	59 cm x 56 cm x 56 cm
Weight	32.3 kg
Color	Black
Country of Origin	Turkey

9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your product or visit the official Candy website. Keep your proof of purchase for any warranty claims.

For technical assistance or spare parts, contact Candy customer service. Ensure you have your oven's model number (CA6 N5B3EYTB) and serial number ready when contacting support.