

[Manuals.plus](#) /

› [TROIZO](#) /

› TROIZO Handheld Vacuum Cleaner User Manual

TROIZO VC005

TROIZO Handheld Vacuum Cleaner User Manual

Model: VC005

1. INTRODUCTION

Thank you for choosing the TROIZO Handheld Vacuum Cleaner. This compact and powerful device is designed to provide efficient and convenient cleaning for various environments, including your home, office, and car. With its brushless motor, strong suction, and versatile accessories, it simplifies your cleaning tasks. Please read this manual thoroughly before use to ensure proper operation and maintenance.



Image: The TROIZO Handheld Vacuum Cleaner, showcasing its sleek design, included filters, and various attachments like the crevice tool, brush, and charging cable.

2. SAFETY INSTRUCTIONS

- Read all instructions before using the appliance.
- Do not use the vacuum cleaner near water or wet surfaces.
- Do not pick up flammable or combustible materials, hot ashes, or sharp objects.
- Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not operate the vacuum cleaner if it has been dropped, damaged, left outdoors, or dropped into water.
- Unplug the charger from the outlet when not in use and before cleaning.
- This appliance is for household use only.

3. PACKAGE CONTENTS

Please check the package contents to ensure all items are present and in good condition:

- 1 x Handheld Vacuum Cleaner
- 1 x Small Brush
- 1 x 2-in-1 Crevice Nozzle
- 1 x Hose Connector
- 1 x 30cm Corrugated Hose
- 1 x Type-C Charging Cable
- 1 x Stainless Steel Filter (pre-installed)
- 2 x HEPA Filters (one pre-installed, one spare)
- 1 x User Manual

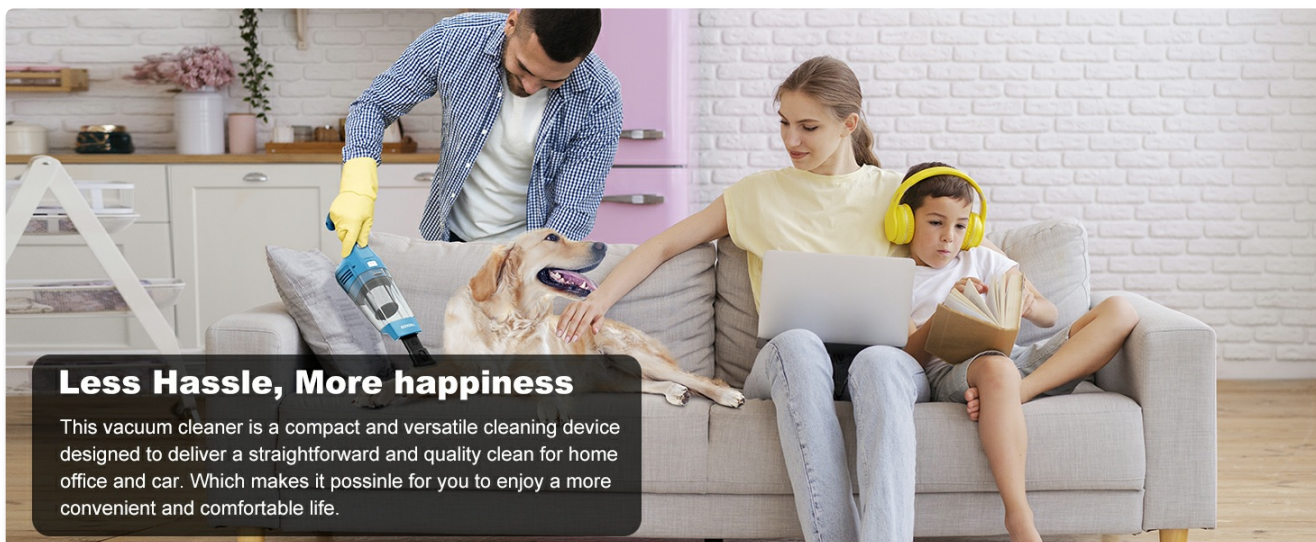 


Image: A visual representation of all items included in the TROIZO Handheld Vacuum Cleaner package, including the main unit, various nozzles, charging cable, and filters.

 
4. PRODUCT OVERVIEW

Familiarize yourself with the main components of your TROIZO Handheld Vacuum Cleaner:

- **Main Unit:** Contains the motor, battery, and control buttons.
- **Dust Cup:** Transparent container for collecting debris.
- **Filter System:** Composed of a stainless steel pre-filter and a HEPA filter for efficient particle capture.
- **Crevice Nozzle:** Ideal for narrow gaps and corners.
- **Brush Nozzle:** Suitable for upholstery, carpets, and keyboards.
- **Long Hose:** Extends reach for difficult-to-access areas.
- **Type-C Charging Port:** For recharging the internal battery.

Multifuntional Accessories

Quik clean & no dead angles to meet your needs

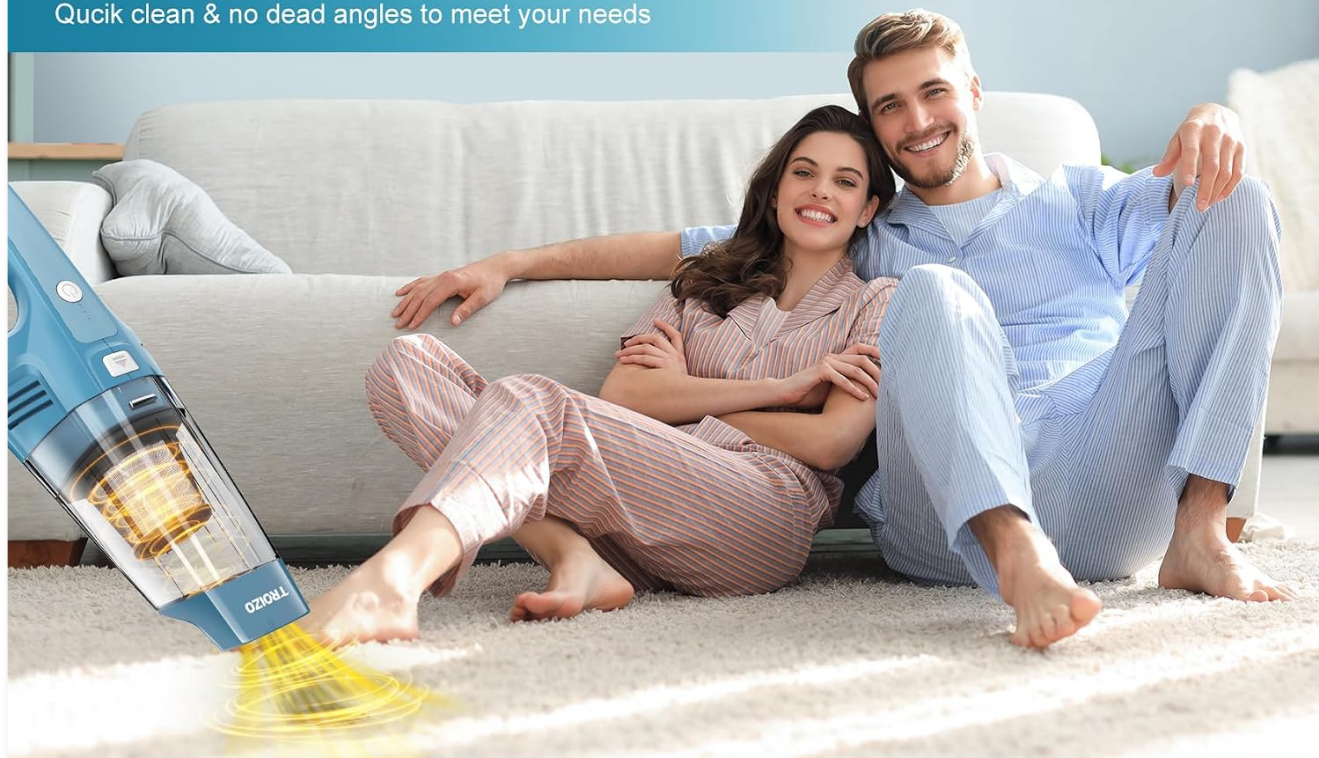

Crevice Nozzle

For sofa, corner and crevice.



Brush Nozzle

For keyboard, carpet and hair.



Long Hose

For hard to reach areas.

Image: An exploded view showing the main components of the vacuum cleaner, including the dust cup, filters, and various attachments, highlighting their functions.

5. SETUP

5.1 Charging the Vacuum Cleaner

Before first use, fully charge the vacuum cleaner. Connect the Type-C charging cable to the charging port on the vacuum and the other end to a compatible 5V USB adapter (not included) or a USB port. The indicator lights will show charging status. A full charge takes approximately 4-4.5 hours.



Image: The handheld vacuum cleaner being charged via its Type-C cable, illustrating the charging process and estimated time.

5.2 Attaching Accessories

To attach an accessory, simply push it firmly onto the suction inlet until it clicks into place. For extended reach with the crevice nozzle, you can connect it to the corrugated hose:

1. Detach the hose connector from the corrugated hose.
2. Connect the two ends of the corrugated hose to the large and small hose connectors.
3. Use the small connector to attach the 2-in-1 crevice nozzle to the hose.
4. Use the big connector to attach the hose assembly to the vacuum's suction inlet.

How to connect the 2 in 1 crevice nozzle with corrugated hose



Image: A step-by-step guide demonstrating how to assemble the 2-in-1 crevice nozzle with the corrugated hose for extended reach and versatile cleaning.

6. OPERATING INSTRUCTIONS

6.1 Powering On/Off and Suction Modes

Press the power button once to turn on the vacuum cleaner in standard suction mode (9000PA, approx. 25 mins runtime). Press it again to switch to max suction mode (14500PA, approx. 13 mins runtime). Press a third time to turn off the device.

Extreme Powerful Suction

Cordless handheld vacuum with 2-speed suction for deep cleaning



Brushless Motor



Max 14500PA

≈13Min



Eco 9000PA

≈25Min



Image: The vacuum cleaner in action, illustrating its powerful suction capabilities for various types of debris like dust, pet hair, and food residue, along with its two suction modes.


6.2 Using Accessories for Different Cleaning Needs

The TROIZO Handheld Vacuum comes with specialized attachments for comprehensive cleaning:

- **Crevice Nozzle:** Perfect for reaching tight spaces such as car seats, sofa corners, and window sills.
- **Brush Nozzle:** Use this attachment for cleaning delicate surfaces, removing pet hair from upholstery, or dusting keyboards.
- **Long Hose:** Provides flexibility to clean hard-to-reach areas like under furniture or deep within car interiors.

Multifuntional Accessories

Quik clean & no dead angles to meet your needs

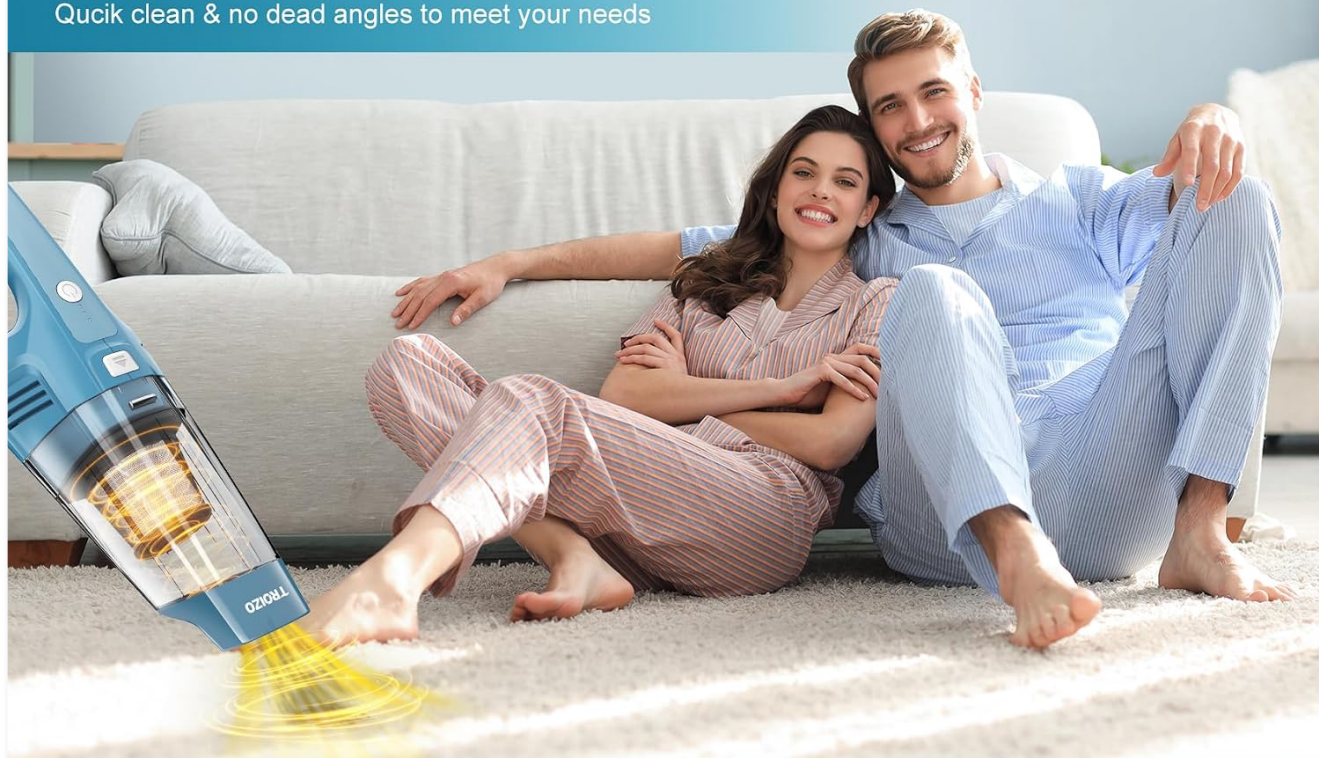

Crevice Nozzle

For sofa, corner and crevice.



Brush Nozzle

For keyboard, carpet and hair.



Long Hose


For hard to reach areas.

Image: The handheld vacuum cleaner shown with its multifunctional accessories, demonstrating their use in different cleaning scenarios like car interiors, keyboards, and hard-to-reach areas.

6.3 Portability and Low Noise Operation

Weighing only 1.37 lbs and operating at less than 85dB, this vacuum cleaner offers a quiet and comfortable cleaning experience, allowing you to clean without disturbing others.

Lightweight & Low Noise

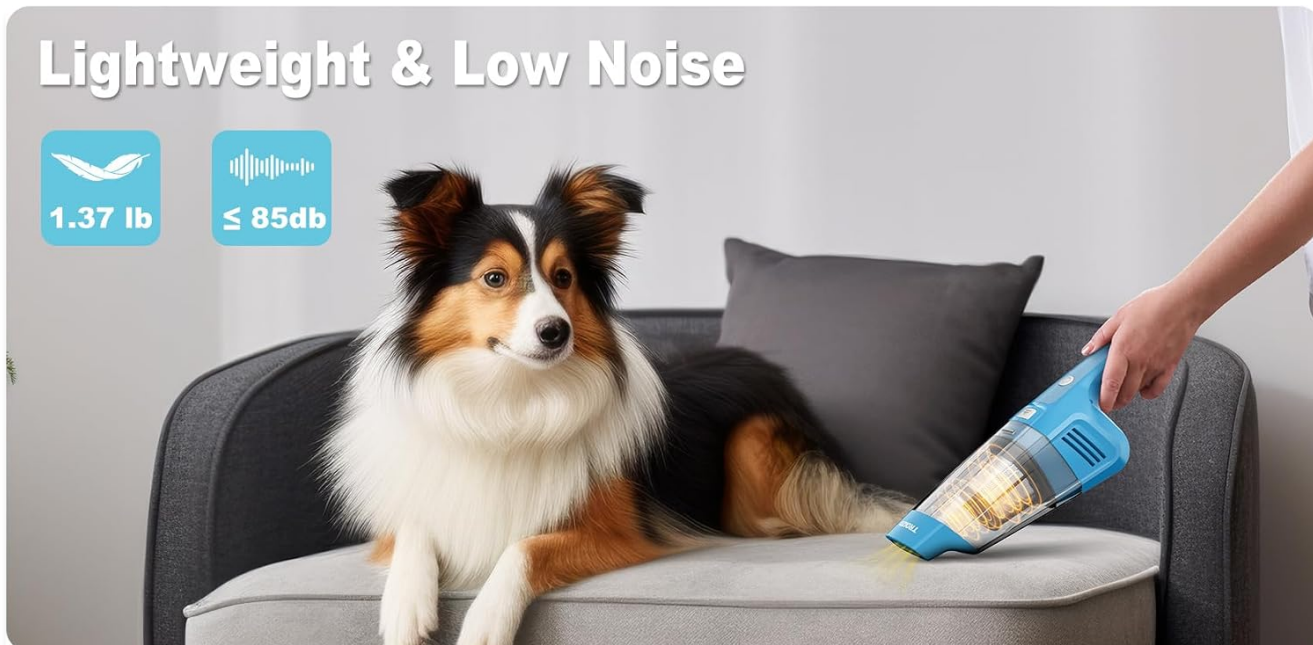

Fast & Easy Charging

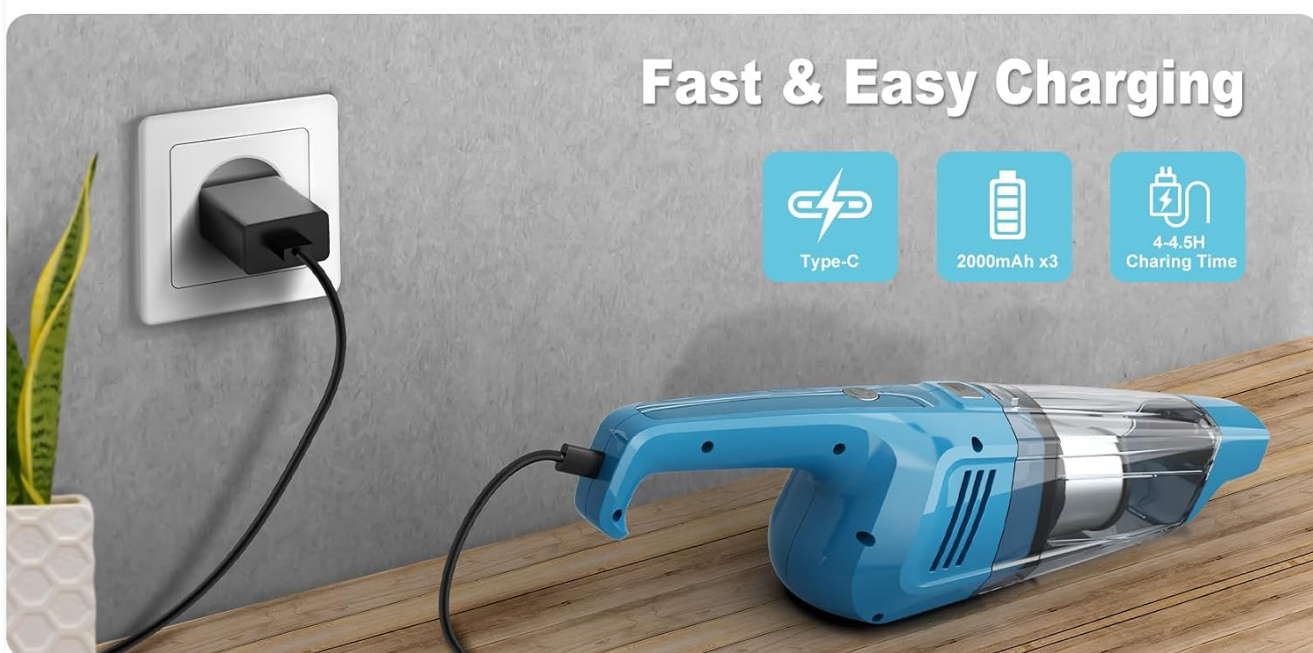


Image: The lightweight vacuum cleaner being used on a sofa next to a dog, emphasizing its low noise level and ease of handling.

7. MAINTENANCE

7.1 Emptying the Dust Cup

To maintain optimal suction and hygiene, empty the 340ml dust cup regularly. Press the release button on the vacuum to detach the dust cup, then simply tip its contents into a trash bin.

7.2 Cleaning the Filters

The vacuum features a dual-layer filtration system (stainless steel pre-filter and HEPA filter) that captures 99.99% of dust particles. Both filters are washable and reusable:

1. Release the dust cup from the main unit.
2. Carefully remove the filter assembly from the dust cup.
3. Unscrew or separate the two filters (stainless steel and HEPA).
4. Wash both filters and the dust cup under running water. Ensure all dust and debris are removed.

5. Allow all components to air dry completely before reassembling. Do not use the vacuum with wet filters.



Image: A visual guide detailing the process of cleaning the vacuum's filters, from detaching the dust cup to washing and air-drying the stainless steel and HEPA filters.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Vacuum does not turn on	Battery is low or depleted.	Charge the vacuum cleaner fully.
Reduced suction power	Dust cup is full.	Empty the dust cup.
Reduced suction power	Filters are clogged.	Clean or replace the filters. Ensure they are completely dry before reinstallation.
Reduced suction power	Nozzle or hose is blocked.	Check and clear any obstructions from the nozzle or hose.
Unusual noise during operation	Debris caught in the motor or fan.	Turn off the vacuum immediately. Check for and remove any foreign objects. If the noise persists, contact customer support.

9. SPECIFICATIONS

Feature	Specification
Brand	TROIZO
Model Name	VC005
Special Feature	Cordless
Filter Type	Stainless Steel Filter, HEPA Filter

Feature	Specification
Capacity	0.34 Liters
Wattage	2000 milliamp_hours
Runtime	25 minutes (Standard), 13 minutes (Max)
Maximum Suction	14500PA
Form Factor	Handheld
Color	Blue
Product Dimensions	14.7"L x 3.7"W x 4.4"H
Battery Type	Lithium Ion (3 included)
Noise Level	80 dB
Control Method	Touch (Push Button)
Connectivity Technology	USB
Item Weight	1.37 pounds

10. WARRANTY AND SUPPORT

TROIZO products are manufactured to the highest quality standards. This product is covered by a limited warranty against defects in materials and workmanship from the date of purchase. Please retain your proof of purchase for warranty claims.

For technical support, troubleshooting assistance, or warranty inquiries, please contact our customer service team. Contact information can typically be found on the product packaging or our official website.