

[Manuals.plus](#) /

› [Roku](#) /

› Roku Select Series 32-Inch 1080p Full HD Smart TV User Manual (Model 32R3B5)

Roku 32R3B5

Roku Select Series 32-Inch 1080p Full HD Smart TV User Manual

Model: 32R3B5

1. INTRODUCTION AND OVERVIEW

This manual provides essential information for setting up, operating, maintaining, and troubleshooting your Roku Select Series 32-Inch 1080p Full HD Smart TV. Designed for a seamless entertainment experience, this TV integrates the intuitive Roku operating system, offering access to a wide range of streaming content and smart features.

The Roku Select Series TV delivers bright, Full HD picture quality and enhanced sound features like auto speech clarity and night mode. Its customizable home screen allows for easy access to streaming apps and inputs, making it suitable for various rooms and uses.

2. WHAT'S IN THE BOX

Carefully unpack your Roku Select Series TV and ensure all components are present:

- Roku Select Series 32" FHD TV
- Roku TV remote with batteries (2 AAA batteries included)
- TV Stands (2 pieces)
- Stand screws (4 pieces)
- User Manual (this document)



App shortcut buttons may vary

Figure 2.1: Contents of the Roku Select Series TV packaging.

3. SETUP

3.1 Attaching the TV Stands

1. Place the TV screen-down on a soft, clean surface to prevent scratches.
2. Align each stand with the corresponding screw holes on the bottom of the TV.
3. Secure each stand using the provided screws. Do not overtighten.

3.2 Initial Power-On and Language Selection

1. Connect the power cord to the TV and then to a power outlet.
2. Press the power button on the remote control or the TV.
3. Once the TV powers on, you will be prompted to select your preferred language. Use the remote to navigate and select 'English'.

Roku Select Series HD TVs



The smart TV that makes sense

Figure 3.1: Initial language selection screen.

3.3 Network Connection

1. The TV will automatically scan for available wireless networks.
2. Select your home Wi-Fi network from the list.
3. Enter your Wi-Fi password using the on-screen keyboard and the remote control.
4. Confirm the connection. The TV will then connect to the internet.

3.4 Roku Account Setup

Follow the on-screen instructions to create or link a Roku account. This is necessary to access streaming channels and features.

4. OPERATING YOUR TV

4.1 Roku Voice Remote

The included Roku Voice Remote allows for easy navigation and voice commands. Familiarize yourself with its buttons:

- **Power Button:** Turns the TV on/off.
- **Directional Pad (D-Pad):** Navigates menus and selects items.
- **OK Button:** Confirms selections.
- **Home Button:** Returns to the Roku Home screen.
- **Back Button:** Goes back to the previous screen.
- **Voice Button:** Press and hold to activate voice commands for searching or controlling playback.
- **Volume Up/Down:** Adjusts TV volume.
- **Mute Button:** Mutes/unmutes TV audio.
- **Instant Replay:** Jumps back a few seconds in video playback.
- **App Shortcut Buttons:** Direct access to popular streaming services (e.g., Netflix, Disney+).


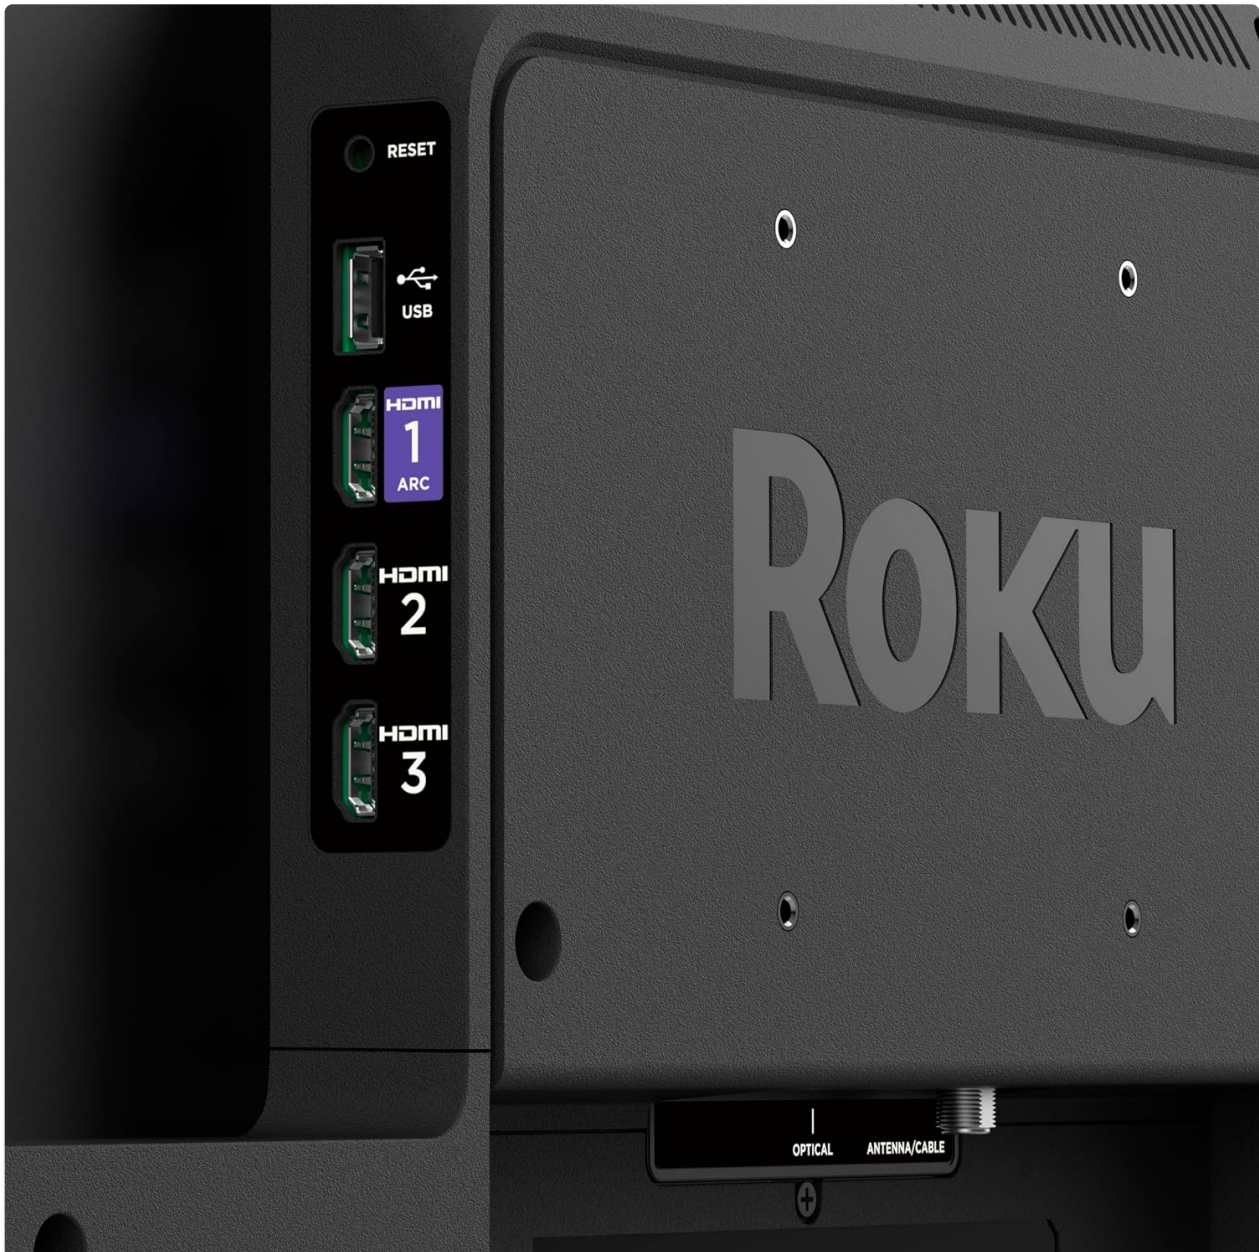 


Figure 4.1: Roku Voice Remote layout and functions.

4.2 Navigating the Home Screen

 The Roku Home screen provides a centralized hub for all your entertainment. You can customize the order of your streaming channels and inputs for quick access.

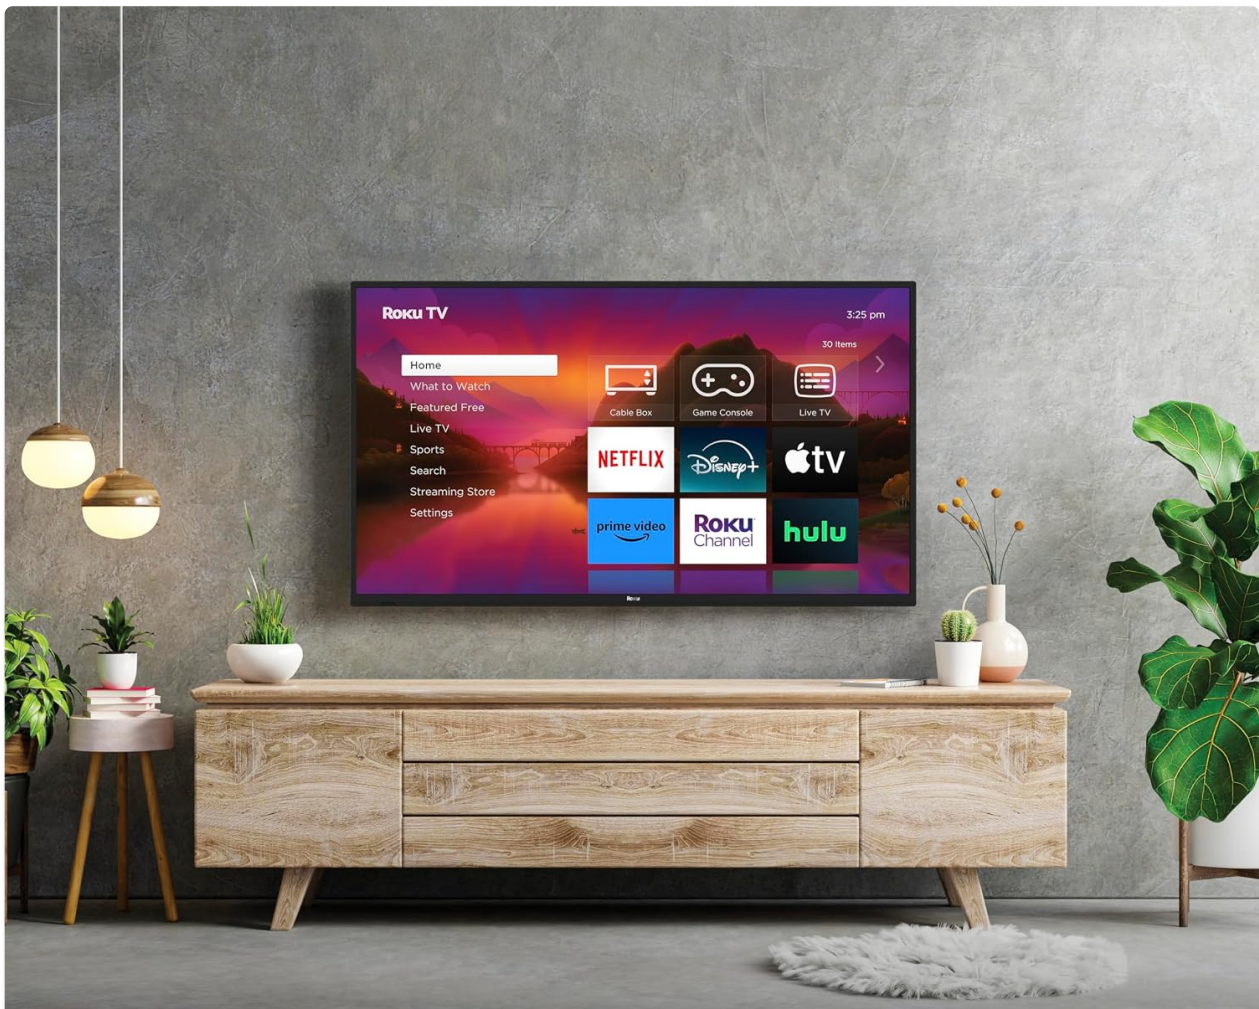

Your favorites front and center

Streaming apps, inputs, and free live TV are all together on the home screen.

Figure 4.2: Customizable Roku Home Screen.

4.3 Adding and Managing Channels

To add new streaming channels:

 
1. From the Home screen, navigate to 'Streaming Channels' or 'Channel Store'.
2. Browse or search for desired channels.
3. Select a channel and choose 'Add channel'. The channel will be added to your Home screen.

4.4 Connecting External Devices


Your Roku TV features multiple input ports for connecting external devices such as gaming consoles, Blu-ray players, or sound systems.

- **HDMI Ports:** Connect devices like gaming consoles (HDMI 1 ARC, HDMI 2, HDMI 3).
- **USB Port:** For media playback from USB drives.
- **Optical Audio Out:** For connecting to soundbars or audio receivers.
- **Antenna/Cable Input:** For connecting an antenna for over-the-air broadcasts.


What's in the box

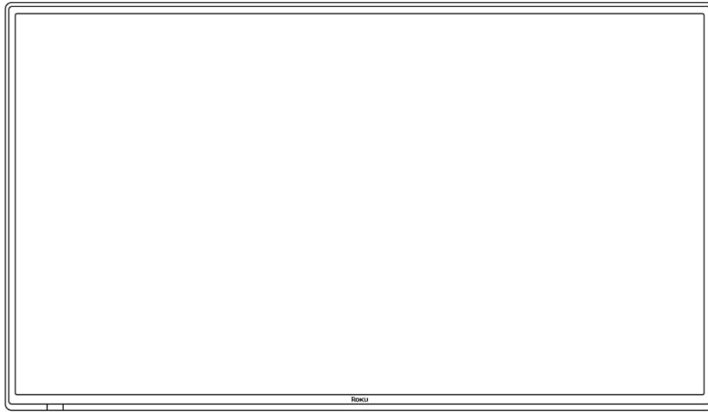


Roku Select Series TV

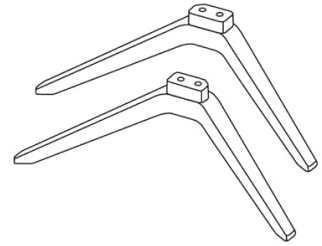 

TV stands

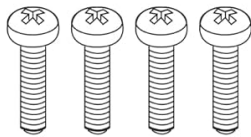 

Stand screws
x 4

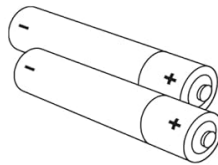 

Pre-installed
AAA batteries
x 2



Roku
Voice Remote

Figure 4.3: Rear view of Roku TV with input ports.

5. MAINTENANCE

5.1 Cleaning the TV Screen

To clean the screen, gently wipe it with a soft, lint-free cloth. For stubborn marks, lightly dampen the cloth with water or a screen-cleaning solution specifically designed for electronics. Avoid using harsh chemicals, abrasive cleaners, or direct spraying onto the screen.

5.2 Cleaning the TV Body

Wipe the TV's exterior with a soft, dry cloth. Do not use liquid cleaners directly on the TV body.

5.3 Remote Control Care

Keep the remote control dry and clean. Replace batteries when necessary (uses 2 AAA batteries). If the remote is unresponsive, ensure there are no obstructions between the remote and the TV's IR sensor.

6. TROUBLESHOOTING

If you encounter issues with your Roku TV, refer to the following common solutions:

Problem	Possible Solution
No Power	Ensure the power cord is securely plugged into both the TV and a working electrical outlet. Try a different outlet.
No Picture/Sound	Check all cable connections (HDMI, antenna). Ensure the correct input source is selected on the TV. Restart the TV and any connected devices.
Remote Not Working	Replace the batteries. Ensure there are no obstructions between the remote and the TV. Re-pair the remote if it's a voice remote (refer to Roku support for specific pairing instructions).
Wi-Fi Connection Issues	Restart your router and modem. Go to the TV's network settings and re-scan for networks, then re-enter your password. Ensure the TV is within range of your Wi-Fi signal.
App Not Loading/Crashing	Restart the app. Restart the TV. Check for system updates in the TV settings. Remove and re-add the problematic channel.

7. SPECIFICATIONS

Key technical specifications for the Roku Select Series 32-Inch 1080p Full HD Smart TV (Model 32R3B5):

- **Screen Size:** 32 Inches
- **Display Technology:** LED
- **Resolution:** 1080p Full HD
- **Refresh Rate:** 60 Hz
- **Operating System:** Roku OS
- **Connectivity Technology:** HDMI (3 ports, 1 ARC), USB (1 port), Wi-Fi, Optical Audio Out, RF (Antenna/Cable)
- **Special Feature:** Voice Remote
- **Audio Output Mode:** Digital
- **Integrated Surround Sound Format:** Dolby Audio
- **Power Consumption:** 58 watts (typical)
- **Dimensions (D x W x H):** 7.6"D x 28.9"W x 19"H
- **Weight:** 11.4 Pounds
- **VESA Mount Standard:** 100 x 100 mm

8. WARRANTY AND SUPPORT

8.1 Manufacturer's Warranty

Your Roku Select Series TV comes with a**1-year limited manufacturer's warranty**. This warranty covers defects in materials and workmanship under normal use. Please retain your proof of purchase for warranty claims.

8.2 Customer Support

For further assistance, technical support, or warranty inquiries, please visit the official Roku support website or contact their customer service. Refer to the Roku website for the most up-to-date contact information and support resources.