

whall KST075AU

WHALL KST075AU 2-Slice Touchscreen Toaster

USER MANUAL

Important Safeguards

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

1. Read all instructions before operating the toaster.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electrical shock, do not immerse cord, plugs, or toaster in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
6. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
7. Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
8. Do not place on or near a hot gas or electric burner, or in a heated oven.
9. Do not use the toaster for other than intended use.
10. Oversize foods, metal foil packages, or utensils must not be inserted in a toaster as they may involve a risk of fire or electric shock.
11. A fire may occur if toasters are covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
12. Do not attempt to dislodge food when the toaster is plugged in.
13. Do not operate unattended.

Product Overview

The WHALL KST075AU is a modern 2-slice touchscreen toaster designed for efficient and versatile toasting. It features wide slots, 6 shade settings, and specialized functions for various bread types, ensuring a perfect toast every time.

Components:

- Toasting Slots (2)
- Touchscreen Control Panel
- Carriage Lever
- Removable Crumb Tray
- Power Cord



This image illustrates the six available shade settings, ranging from light (70 seconds) to dark (230 seconds), allowing users to customize their toast preferences.



Suitable for a variety of bread

Nutritious breakfast, homemade delicious

This image highlights the toaster's versatility, showing it can accommodate various items such as bagels, white bread, gluten-free bread, English muffins, waffles, and pastries.

Setup

1. **Unpacking:** Carefully remove the toaster and all packaging materials from the box. Retain packaging for future storage or transport.
2. **Placement:** Place the toaster on a stable, flat, heat-resistant surface, away from flammable materials like curtains or walls. Ensure adequate ventilation around the appliance.
3. **First Use:** Before toasting food for the first time, operate the toaster without bread on the highest shade setting (6) in a well-ventilated area. This will burn off any manufacturing residues and eliminate odors. A slight smoke or odor is normal during this initial use.
4. **Power Connection:** Plug the power cord into a standard 120V AC electrical outlet.

Operating Instructions

Basic Toasting:

1. Insert one or two slices of bread into the toasting slots. Ensure bread is centered for even toasting.
2. Select your desired shade setting on the touchscreen control panel. The toaster offers 6 shade levels, from light to dark.
3. Press the carriage lever down until it locks into place. The toasting cycle will begin automatically.
4. Once the selected shade is achieved, the toast will automatically pop up, and the toaster will turn off.

Shade Settings:

The WHALL KST075AU offers 6 distinct shade settings, allowing precise control over your toast's browning level. Use lower settings for lighter toast and higher settings for darker, crispier results. Experiment to find your preferred shade.

Special Functions:

- **Bagel Function:** This function toasts the cut side of the bagel while gently warming the outer side. Select the Bagel icon on the touchscreen after inserting your bagel and lowering the lever.
- **Defrost Function:** Ideal for frozen bread, this function thaws and then toasts the bread to your selected shade. Select the Defrost icon on the touchscreen after inserting frozen bread and lowering the lever.
- **Reheat Function:** Use this function to warm up previously toasted bread without further browning. Select the Reheat icon on the touchscreen after inserting toast and lowering the lever.
- **Cancel Function:** To stop the toasting cycle at any time, press the Cancel button on the touchscreen. The carriage will immediately pop up.

Touchscreen Controls:

The intuitive touchscreen interface allows for easy selection of shade settings and special functions. Simply tap the desired icon or adjust the shade level using the dedicated controls.

Maintenance and Cleaning

Regular cleaning and maintenance will ensure the longevity and optimal performance of your toaster.

1. **Always Unplug:** Before cleaning, always unplug the toaster from the electrical outlet and allow it to cool completely.
2. **Exterior Cleaning:** Wipe the exterior of the toaster with a soft, damp cloth. Do not use abrasive cleaners, scouring pads, or harsh chemicals, as these can damage the finish.
3. **Crumb Tray:** The removable crumb tray is located at the bottom of the toaster. Pull it out, discard crumbs, and wipe the tray clean with a damp cloth. Ensure the tray is completely dry before reinserting it into the toaster. Empty the crumb tray regularly to prevent crumb buildup, which can cause fires.
4. **Toasting Slots:** Never insert metal objects into the toasting slots to remove lodged bread. If bread becomes jammed, unplug the toaster and carefully remove the bread after the toaster has cooled.
5. **Storage:** When not in use, store the toaster in a clean, dry place. Ensure the power cord is neatly wrapped and not kinked.

Troubleshooting

If you encounter any issues with your WHALL KST075AU toaster, refer to the following common problems and solutions:

- **Toaster Not Turning On:**
 - Ensure the power cord is securely plugged into a working electrical outlet.
 - Check your household circuit breaker or fuse box.
- **Bread Not Toasting Evenly:**
 - Ensure bread slices are centered in the slots.
 - Clean the crumb tray and check for any lodged food particles in the slots.
- **Smoke Coming from Toaster:**
 - Unplug the toaster immediately.
 - Remove any lodged food particles.
 - Empty and clean the crumb tray thoroughly.
- **Carriage Lever Not Staying Down:**
 - Ensure the toaster is plugged into a live electrical outlet. The lever will not latch if there is no power.
 - Check if any food is obstructing the lever mechanism.

If the problem persists after trying these solutions, please contact customer support.

Specifications

Brand	WHALL
Model	KST075AU
Number of Slices	2
Voltage	120 Volts (AC)
Wattage	850 Watts
Number of Shade Settings	6
UPC	810118482434

Warranty Information

This product comes with a standard manufacturer's warranty. Please refer to the warranty card included in the packaging or visit the official WHALL website for detailed terms and conditions regarding coverage, duration, and claim procedures.

Customer Support

For technical assistance, troubleshooting, or warranty claims, please contact WHALL customer support:

- **Website:** [WHALL Official Store on Amazon](#)
- **Email:** *[Please refer to product packaging or official website for current email address]*
- **Phone:** *[Please refer to product packaging or official website for current phone number]*

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question