

SilverCrest SHBS 3.7 A1

Instruction Manual

SilverCrest SHBS 3.7 A1 Cordless Rechargeable Hair and Beard Trimmer

1. SAFETY INSTRUCTIONS

Please read these safety instructions carefully before using the device. Keep this manual for future reference.

- **DANGER! Risk of electric shock!** Do not attempt to repair the device yourself under any circumstances.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- Do not immerse the device in water or other liquids.
- Only use the provided power adapter for charging.
- Keep the device away from heat sources and direct sunlight.
- Ensure hands are dry before handling the device or power adapter.

2. PRODUCT OVERVIEW AND PACKAGE CONTENTS

The SilverCrest SHBS 3.7 A1 is a versatile cordless hair and beard trimmer designed for personal grooming. It comes with various accessories to help you achieve your desired look.



Image: The SilverCrest SHBS 3.7 A1 trimmer, showing the main unit, three comb attachments, cleaning brush, blade oil, and power adapter.



Image: Close-up of the three comb attachments, a small bottle of blade oil, and a cleaning brush.

Package Contents:

- SilverCrest SHBS 3.7 A1 Trimmer Unit
- 3 x Adjustable Comb Attachments (1-11mm, 12-22mm, 23-33mm)
- Power Adapter
- Cleaning Brush
- Blade Oil
- Instruction Manual (this document)

3. FEATURES

- **Precision Blades:** Equipped with durable stainless steel blades for precise trimming.
- **Adjustable Cutting Lengths:** Three comb attachments provide 33 cutting lengths, ranging from 1mm to 33mm.

- **Cordless Operation:** Powered by a rechargeable lithium-ion battery, offering up to 60 minutes of cordless use.
- **Battery Indicators:** LED indicators display the current battery capacity and charging status.
- **Easy Cleaning:** Features a detachable and washable blade system for convenient maintenance.
- **Ergonomic Design:** Designed with a comfortable grip for secure and easy handling.

4. SETUP

Before first use, ensure the trimmer is fully charged. Unpack all components and check for any damage. Familiarize yourself with the trimmer's parts and accessories.

5. CHARGING THE TRIMMER

The trimmer is powered by a rechargeable lithium-ion battery. For optimal performance, fully charge the device before its first use.



Image: The trimmer connected to its power adapter for charging.



Image: Front view of the trimmer, highlighting the blue and red LED indicators for battery status.

Charging Steps:

1. Ensure the trimmer is switched off.
2. Connect the power adapter to the charging port on the trimmer.
3. Plug the power adapter into a suitable electrical outlet.
4. The LED indicator will show the charging status (refer to the device's specific LED behavior for full/low charge).
5. Once fully charged, disconnect the power adapter from the trimmer and the outlet.

6. ATTACHING AND ADJUSTING COMB ATTACHMENTS

The trimmer comes with three comb attachments to achieve different cutting lengths. The integrated dial allows for fine adjustment within each comb's range.



Image: The trimmer with one of the comb attachments securely installed on the blade head.



Image: Side view of the trimmer, highlighting the rotary dial used to adjust the cutting length.

Steps to Attach and Adjust:

1. Ensure the trimmer is switched off.
2. Select the desired comb attachment based on the general length range you need (e.g., 1-11mm, 12-22mm, 23-33mm).
3. Align the comb attachment with the trimmer head and push it firmly until it clicks into place.
4. Use the rotary dial on the trimmer body to fine-tune the cutting length within the selected comb's range. The numbers on the dial correspond to millimeters.
5. To remove the comb, gently pull it away from the trimmer head.

7. OPERATING INSTRUCTIONS

Follow these steps for effective and safe trimming of hair and beard.



Image: A man demonstrating the use of the trimmer on his beard, holding the device comfortably.

Trimming Hair/Beard:

1. Ensure your hair/beard is clean and dry.
2. Attach the appropriate comb attachment and set the desired cutting length using the dial.
3. Switch on the trimmer.
4. Hold the trimmer with the blades facing the area you wish to trim.
5. Move the trimmer slowly and steadily against the direction of hair growth.
6. For precise edging or detailing, remove the comb attachment and use the bare blades carefully.
7. After use, switch off the trimmer.

8. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your trimmer.

Cleaning Steps:

1. Ensure the trimmer is switched off and disconnected from the power adapter.
2. Remove the comb attachment.
3. Detach the blade head by gently pushing it off the trimmer body (refer to specific instructions in the included manual for exact detachment method).
4. Use the provided cleaning brush to remove any loose hairs from the blades and the trimmer body.
5. The detachable blade head can be rinsed under running water. Ensure it is completely dry before reattaching. **Do not rinse the main trimmer body.**
6. Apply a few drops of the provided blade oil to the blades after every few uses to keep them lubricated and sharp.
7. Reattach the blade head and comb attachment.
8. Store the trimmer in a clean, dry place.

9. TROUBLESHOOTING

If you encounter issues with your trimmer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Trimmer does not turn on.	Battery is depleted.	Charge the trimmer fully.
Trimmer is not cutting effectively.	Blades are clogged with hair or dull.	Clean the blades thoroughly. Apply blade oil. If blades are dull, consider professional sharpening or replacement if available.
Trimmer makes unusual noise.	Lack of lubrication.	Apply blade oil to the blades.
Charging indicator not working.	Power adapter or cable issue.	Check connections. Try a different power outlet.

If the problem persists after trying these solutions, please contact customer support or refer to the warranty information.

10. SPECIFICATIONS

Feature	Detail
Model Number	SHBS 3.7 A1
Power Source	Rechargeable Lithium-ion Battery
Blade Material	Stainless Steel
Cutting Lengths	1mm - 33mm (33 settings with comb attachments)
Cordless Operation Time	Up to 60 minutes
Target Audience	Men
Color	Black

11. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included in your product packaging or visit the manufacturer's official website. Do not attempt to repair the device yourself, as this may void the warranty.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question