

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Braun](#) /

› [Braun MultiServe Coffee Machine KF9170SI & KG7070 Burr Grinder User Manual](#)

Braun KF9170SI & KG7070

Braun MultiServe Coffee Machine KF9170SI & KG7070 Burr Grinder User Manual

Model: KF9170SI (Coffee Machine) & KG7070 (Burr Grinder)

INTRODUCTION

This manual provides detailed instructions for the safe and efficient operation, maintenance, and troubleshooting of your Braun MultiServe Coffee Machine KF9170SI and Braun KG7070 Burr Grinder. Please read all instructions carefully before using the appliances and retain this manual for future reference.

IMPORTANT SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and/or injury to persons. This includes:

- Do not immerse the appliance, plug, or cord in water or other liquids.
- Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Do not use the appliance for other than intended use.

SETUP

Unpacking and Initial Cleaning

Carefully remove all packaging materials from both the coffee machine and the grinder. Wash the carafe, brew basket, water reservoir lid, and grounds container with warm, soapy water. Rinse thoroughly and dry. Wipe the exterior surfaces of both appliances with a damp cloth.

Coffee Machine Assembly

1. Place the coffee machine on a flat, stable surface.
2. Ensure the water reservoir is properly seated.
3. Insert the brew basket into its designated slot.
4. Place the glass carafe on the warming plate.

Grinder Assembly

1. Place the grinder on a flat, stable surface.
2. Ensure the bean hopper is securely attached to the top of the grinder.
3. Ensure the grounds container is correctly inserted into the front of the grinder.

OPERATING THE BRAUN MULTISERVE COFFEE MACHINE KF9170SI

Overview of Controls

The control panel features a digital display, brew size selector, strength selector buttons (Light, Gold, Bold, Over Ice), and function buttons (Auto On, Set, Clock, Clean, Power).



Figure 1: Braun MultiServe Coffee Machine with glass carafe. This image shows the main unit with the water reservoir, brew basket, and glass carafe in place, ready for brewing. The control panel with various buttons and the digital display is visible.

Brewing a Carafe of Coffee

1. Fill the water reservoir with fresh, cold water up to the desired level indicated on the side.
2. Place a paper filter or the permanent filter (if included) into the brew basket.
3. Add the desired amount of ground coffee to the filter. Refer to the coffee-to-water ratio guidelines for best results.
4. Ensure the glass carafe is on the warming plate.
5. Select the desired brew size using the selector dial.
6. Choose your preferred strength (Light, Gold, Bold) by pressing the corresponding button.
7. Press the Power button to start brewing.

Brewing a Single Cup

1. Fill the water reservoir with fresh, cold water for the desired cup size.
2. Place a paper filter or the permanent filter into the brew basket.
3. Add ground coffee.
4. Adjust the cup shelf to accommodate your mug.
5. Select the desired single-cup brew size.
6. Choose your preferred strength.
7. Press the Power button to start brewing.



Figure 2: Braun MultiServe Coffee Machine brewing into a mug. This image illustrates the coffee machine in operation, dispensing coffee directly into a mug placed on the adjustable cup shelf, highlighting its single-serve capability.

Iced Coffee Function

To brew iced coffee, fill the water reservoir to the indicated 'Over Ice' level. Fill your carafe or cup with ice. Select the 'Over Ice' strength setting and your desired brew size. Press the Power button. The machine will brew a concentrated coffee over ice.

Hot Water Function

To dispense hot water for tea or other beverages, ensure the brew basket is empty. Select the hot water icon on the brew size selector. Press the Power button. Hot water will be dispensed from the brew head.

Programmable Features

- **Setting the Clock:** Press the 'Clock' button, then use the 'Set' button to adjust hours and minutes.
- **Auto On:** Press the 'Auto On' button, then use the 'Set' button to program the desired brew time. The machine will automatically start brewing at the set time.



Figure 3: Diagram of Braun ExactBrew Technology and TempSensor System. This image provides a visual explanation of the internal workings of the coffee machine, showing how water is heated and distributed for optimal brewing temperature and consistency.

OPERATING THE BRAUN KG7070 BURR GRINDER

Filling the Bean Hopper

Open the lid of the bean hopper and pour whole coffee beans into the hopper. Do not fill past the 'MAX' line. Close the lid securely.



Figure 4: Braun KG7070 Burr Grinder front view. This image displays the burr grinder from the front, showing the bean hopper on top, the grind setting dial, and the grounds container at the bottom.

Selecting Grind Settings

The grinder offers 9 main grind settings and 6 intermediate options. Rotate the grind setting dial on the side of the grinder to select your desired fineness. Finer settings are suitable for espresso, medium for drip coffee, and coarser for French press.



Figure 5: Braun KG7070 Burr Grinder side view. This image shows the side profile of the burr grinder, highlighting the grind setting dial and the overall compact design.

Grinding Coffee

1. Ensure the grounds container is properly inserted.
2. Select the desired number of cups using the cup selector dial.
3. Press the start button to begin grinding. The grinder will automatically stop once the selected amount is ground.
4. Remove the grounds container and pour the fresh grounds into your coffee machine's filter.



Figure 6: Braun KG7070 Burr Grinder with coffee beans and grounds. This image shows the grinder with whole coffee beans in the hopper and freshly ground coffee in the grounds container, illustrating its function.

MAINTENANCE

Cleaning the Coffee Machine

- **Daily Cleaning:** Wash the carafe, brew basket, and water reservoir lid with warm, soapy water after each use.
- **Exterior:** Wipe the exterior with a damp cloth. Do not use abrasive cleaners.
- **Descaling:** The 'Clean' indicator light will illuminate when descaling is required. Follow the descaling instructions in the full product manual, typically involving a descaling solution or vinegar solution.

Cleaning the Burr Grinder

- **Grounds Container:** Empty and wash the grounds container after each use.
- **Burrs:** Periodically remove the upper burr and clean both burrs with the provided cleaning brush to remove coffee residue.
- **Bean Hopper:** Wipe the inside of the bean hopper with a dry cloth to remove oil residue.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Coffee machine not brewing.	No water in reservoir; machine not plugged in; brew cycle not initiated.	Fill water reservoir; ensure power cord is securely plugged in; press the Power button.
Coffee is too weak/strong.	Incorrect coffee-to-water ratio; incorrect strength setting.	Adjust coffee amount; select a different strength setting (Light, Gold, Bold).
Grinder not operating.	Not plugged in; bean hopper or grounds container not properly seated; no beans.	Ensure power cord is plugged in; check that hopper and container are correctly installed; add coffee beans.
Grinder produces inconsistent grind.	Burrs are dirty or worn.	Clean the burrs thoroughly. If problem persists, contact customer support.
'Clean' light illuminated on coffee machine.	Machine requires descaling.	Perform a descaling cycle as per the full product manual.

SPECIFICATIONS

Feature	Braun MultiServe Coffee Machine KF9170SI	Braun KG7070 Burr Grinder
Brand	Braun	Braun
Model Number	KF9170SI	KG7070
Material	Stainless Steel	Stainless Steel
Special Feature	Programmable, Multi-serve, Iced Coffee, Hot Water	9 Main Grind Settings, 6 Intermediate Options, Overheat Protection
Operation Mode	Fully Automatic	Automatic
Included Components	Glass Carafe	Grounds Container, Bean Hopper

WARRANTY AND SUPPORT

For detailed warranty information and customer support, please refer to the warranty card included with your product or visit the official Braun website. Keep your purchase receipt as proof of purchase for warranty claims.