

Liebherr FNd 5026

User Manual for Liebherr FNd 5026 Freezer

Model: FNd 5026 | Brand: Liebherr

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your new Liebherr FNd 5026 freestanding freezer. Please read these instructions carefully before installation and use, and keep them for future reference. This appliance is designed for freezing fresh food and long-term storage of frozen food.

2. SAFETY INFORMATION

- Ensure the appliance is properly earthed before use.
- Do not damage the refrigerant circuit. If damage occurs, avoid open flames and sources of ignition, and ventilate the room thoroughly.
- Do not use electrical appliances inside the freezer compartments unless they are of the type recommended by the manufacturer.
- Keep ventilation openings clear of obstruction.
- This appliance can be used by children aged 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children should be supervised to ensure that they do not play with the appliance.
- Disconnect the appliance from the mains power supply before performing any maintenance or cleaning.

3. SETUP AND INSTALLATION

3.1 Unpacking

Carefully remove all packaging materials. Inspect the freezer for any damage that may have occurred during transit. Report any damage to your supplier immediately.

3.2 Placement

Place the freezer on a firm, level surface. Ensure adequate ventilation around the appliance. Avoid placing it in direct sunlight or

near heat sources such as ovens or radiators. The freezer is a freestanding unit, meaning it is designed to stand alone and not be built into cabinetry.



Figure 1: Exterior view of the Liebherr FNd 5026 freezer. This image shows the appliance's white finish and its overall freestanding design, suitable for placement in various kitchen or utility room settings.

3.3 Initial Power-On

After placing the freezer, wait at least 4 hours before plugging it into the mains power supply. This allows the refrigerant to settle. Once plugged in, the freezer will begin to cool. The door hinge orientation is on the right side.



Figure 2: Interior view of the Liebherr FNd 5026 freezer, showcasing its six transparent drawers filled with various frozen food items. This illustrates the practical storage capacity and organization within the unit.

4. OPERATING INSTRUCTIONS

4.1 Control Panel

The control panel, typically located at the top of the appliance, allows you to adjust the temperature and activate special functions. Refer to the display for current temperature readings and status indicators.

4.2 Temperature Setting

Use the control buttons to set your desired freezing temperature. The recommended temperature for long-term storage of frozen food is -18°C (0°F) or colder. Allow several hours for the freezer to reach the newly set temperature.

4.3 Food Storage

The freezer is equipped with 6 drawers for organized storage. Ensure food is properly packaged to prevent freezer burn and odor transfer. Do not overload the drawers, allowing for proper air circulation. For optimal freezing, place fresh food in the upper compartments first.

5. MAINTENANCE

5.1 Cleaning

Before cleaning, always unplug the freezer from the power supply. Clean the interior and exterior surfaces regularly with a soft cloth and a mild detergent solution. Avoid abrasive cleaners or solvents. Ensure no water enters the electrical components.

5.2 Defrosting

If ice builds up to a thickness of 5mm or more, defrost the freezer. Unplug the appliance, remove all food, and leave the door open. Place towels at the bottom to absorb melting ice. Once defrosted, clean and dry the interior thoroughly before plugging it back in and returning food.

6. TROUBLESHOOTING

- **Freezer not cooling:** Check if the power cord is securely plugged in. Verify the circuit breaker. Ensure the temperature setting is correct.
- **Unusual noises:** Minor noises are normal during operation. If loud or persistent, check if the appliance is level or if anything is touching the back.
- **Excessive ice build-up:** Ensure the door seal is intact and the door is closing properly. Avoid leaving the door open for extended periods.
- **Display error:** Refer to the specific error codes in the full manufacturer's manual or contact customer service.

If the problem persists after attempting these solutions, please contact Liebherr customer service.

7. SPECIFICATIONS

Feature	Specification
Brand	Liebherr
Model Name	FNd 5026
Product Model Number	FND5026
Product Dimensions (W x D x H)	59.7 x 67.5 x 165.5 cm
Product Weight	39 kg
Installation Type	Freestanding
Door Hinge Orientation	Right
Number of Shelves/Drawers	6
Voltage	230 Volts
Door Material Type	Stainless Steel
Compliance	CE

8. WARRANTY AND SUPPORT

Your Liebherr freezer comes with a manufacturer's warranty. Please refer to the warranty card included with your appliance for specific terms and conditions. For technical support, spare parts, or service inquiries, please contact your local Liebherr service center or the retailer from whom you purchased the appliance. Always have your model number (FNd 5026) and serial number ready when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question