

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [BLACK+DECKER](#) /
- › [BLACK+DECKER Crisp 'N Bake Air Fryer Toaster Oven Combo Instruction Manual](#)

BLACK+DECKER TO62D5-1SD

BLACK+DECKER Crisp 'N Bake Air Fryer Toaster Oven Combo

Model: TO62D5-1SD

Brand: BLACK+DECKER

INTRODUCTION AND OVERVIEW

The BLACK+DECKER Crisp 'N Bake Air Fryer Toaster Oven Combo is a versatile kitchen appliance designed to simplify your cooking experience. It combines the functionalities of an air fryer and a toaster oven, offering 12 cooking functions to prepare a wide variety of meals.

Key features include premium French doors with stainless-steel accents, a compact design that fits easily on countertops, and convection technology for faster cooking and crispy results without excessive oil.



Figure 1: Front view of the BLACK+DECKER Crisp 'N Bake Air Fryer Toaster Oven Combo.

Product Overview Video

Your browser does not support the video tag.

Video 1: Official product overview showcasing the features and design of the BLACK+DECKER Crisp 'N Bake Air Fryer Toaster Oven.

COMPONENTS AND WHAT'S INCLUDED

Your BLACK+DECKER Crisp 'N Bake Air Fryer Toaster Oven Combo comes with the following accessories:

- Air Fry Basket
- Bake Pan
- Crumb Tray
- Rack



**Air Fry with
Convection
Technology**

**Deep Fried Taste
Without the Fat™**

Figure 2: Internal view of the oven showing the air fry basket and bake pan in position.



Countertop Air Frying

Figure 3: Another internal view highlighting the different rack positions and included accessories.

SETUP

Before first use, ensure all packaging materials are removed from the appliance. Place the oven on a stable, heat-resistant surface with adequate clearance from walls and other appliances for proper ventilation. Plug the power cord into a grounded electrical outlet.

It is recommended to run the oven empty for about 10-15 minutes on a high setting (e.g., 400°F / 200°C) to burn off any manufacturing oils and odors. Ensure the area is well-ventilated during this initial use.

OPERATING INSTRUCTIONS

Control Panel and Functions

The oven features an intuitive digital control panel with a selection dial and cooking indicator. The knob lights up red when actively cooking and blue during standby or pause, providing clear visual feedback.



Large Capacity

Figure 4: Detailed view of the digital control panel showing cooking functions and temperature display.

The 12 versatile cooking functions include:

- Convection Baking
- Bake
- Pizza
- Broil
- Air Fry
- Fries
- Reheat
- Toast
- Bagel
- Keep Warm
- Roast
- Snacks

Setting Temperature and Timer

To operate, turn the selection dial to choose your desired cooking function. The display will show the default temperature for that function. You can adjust the temperature by rotating the dial. Press the timer button to set the cooking duration, up to 60 minutes. Once settings are selected, press the 'Start/Pause' button to begin cooking.

Rack Positions and Capacity

The oven offers multiple rack positions to accommodate different food items and cooking methods. The large capacity allows you to cook a 12-inch family-size pizza or up to 6 slices of toast simultaneously.



Figure 5: Example of cooking multiple items using different rack positions.

COOKING GUIDE: INTERNAL TEMPERATURE MEAT CHART

Use this chart and a food thermometer to ensure that meat, poultry, seafood, and other cooked foods reach a safe minimum internal temperature.

*For maximum food safety, the U.S. Department of Agriculture recommends 165°F / 74°C for all poultry; 160°F / 71°C for ground beef, lamb, and pork; and 145°F / 63°C, with a 3-minute resting period, for all other types of beef, lamb, and pork. Also review the

COOKING CHART

Internal Temperature Meat Chart

Use this chart and a food thermometer to ensure that meat, poultry, seafood, and other cooked foods reach a safe minimum internal temperature.

*For maximum food safety, the U.S. Department of Agriculture recommends 165° F/74° C for all poultry; 160° F/71° C for ground beef, lamb, and pork; and 145° F/63° C, with a 3-minute resting period, for all other types of beef, lamb, and pork. Also review the USDA Food Safety Standards.

| Food | Type | Internal Temperature* |
|------------------|---------------------------------|-----------------------|
| Beef & Veal | Ground | 160° F (71° C) |
| | Steaks, roasts: medium | 145° F (63° C) |
| | Steaks, roasts: rare | 125° F (52° C) |
| Chicken & Turkey | Breasts | 165° F (74° C) |
| | Ground, stuffed | 165° F (74° C) |
| | Whole bird, legs, thighs, wings | 165° F (74° C) |
| Fish & Shellfish | Any type | 145° F (63° C) |
| Lamb | Ground | 160° F (71° C) |
| | Steaks, roasts: medium | 140° F (60° C) |
| | Steaks, roasts: rare | 130° F (55° C) |
| Pork | Chops, ground, ribs, roasts | 160° F (71° C) |
| | Fully cooked ham | 140° F (60° C) |

Figure 6: Recommended internal temperatures for safe cooking of various food types.

MAINTENANCE AND CLEANING

Regular cleaning will help maintain the performance and longevity of your oven. The included accessories, such as the Air Fry Basket, Bake Pan, Crumb Tray, and Rack, are dishwasher-safe for convenient cleanup. The removable crumb tray located at the bottom of the oven makes it easy to collect and dispose of food crumbs, ensuring a tidy cooking environment.

TROUBLESHOOTING

If you encounter any issues with your BLACK+DECKER Crisp 'N Bake Air Fryer Toaster Oven Combo, please refer to the following common troubleshooting tips:

- **Appliance not turning on:** Ensure the power cord is securely plugged into a working electrical outlet. Check your household circuit breaker.
- **Food not cooking evenly:** Ensure food is arranged in a single layer in the air fry basket or on the bake pan. For best results, shake or flip food halfway through cooking. Ensure the correct rack position is used for the selected function.
- **Excessive smoke:** This may be due to grease buildup. Ensure the crumb tray and accessories are clean before each use. Avoid using excessive oil when air frying.
- **Digital display not working:** Unplug the unit from the power outlet, wait for a few minutes, then plug it back in. If the issue persists, contact customer support.

For more detailed troubleshooting or issues not listed here, please contact BLACK+DECKER customer support.

SPECIFICATIONS

| Feature | Detail |
|--------------------|--|
| Brand | BLACK+DECKER |
| Model Name | Crisp 'N Bake French Door Air Fry Toaster Oven |
| Item Model Number | TO62D5-1SD |
| Color | Stainless Steel |
| Product Dimensions | 15.1"D x 14.6"W x 12.5"H |
| Item Weight | 19.41 pounds |
| Power Source | Electric |
| Temperature Range | Up to 450°F |
| Control Type | Knob Control |
| Door Style | French Door |
| UPC | 050875002920 |

WARRANTY AND SUPPORT

This BLACK+DECKER product comes with a manufacturer's warranty. For specific warranty details, including coverage period and terms, please refer to the warranty card included in your product packaging or visit the official BLACK+DECKER website.

Optional protection plans are available for extended coverage:

- 3-Year Protection Plan
- 4-Year Protection Plan
- Complete Protect (monthly subscription)

For technical assistance, troubleshooting, or to inquire about replacement parts, please contact BLACK+DECKER customer support through their official website or the contact information provided in your product manual.