

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Epsilon](#) /

> [Epsilon Portable Blender User Manual](#)

## Epsilon EK-2204 (GRN-400)

# Epsilon Portable Blender User Manual

Model: EK-2204 (GRN-400)

## 1. INTRODUCTION

---

Thank you for choosing the Epsilon Portable Blender. This personal blender is designed for convenience and efficiency, allowing you to prepare delicious shakes and smoothies on the go. Featuring a powerful 400W motor and a durable 4-blade assembly, it's perfect for a busy lifestyle. Please read this manual thoroughly before first use to ensure safe operation and optimal performance of your new appliance. Keep this manual for future reference.

## 2. WHAT'S IN THE BOX

---

Carefully unpack all components and check against the list below. If any items are missing or damaged, please contact Epsilon customer support.

# What's In The Box

- 1 Motor Base
- 2 24 oz. Blending Cup
- 3 Flip-Top Lid
- 4 User Manual



Image: All components of the Epsilon Portable Blender, including the motor base, 24 oz. blending cup, blade assembly, and flip-top lid, along with the user manual.

- **Motor Base:** Contains the 400W motor and control knob.
- **24 oz. Blending Cup:** BPA-free PCTG material with measurement markings.
- **4-Blade Assembly:** Stainless steel blades for efficient blending.
- **Flip-Top Lid:** For easy portability and drinking.
- **User Manual:** This instruction guide.

## 3. IMPORTANT SAFETY INFORMATION

---

Please read and understand all safety instructions before using the appliance. Failure to follow these instructions may result in electric shock, fire, or serious injury.

### 3.1 General Safety Precautions

- Always unplug the blender from the power outlet when not in use, before assembling or disassembling parts, and before cleaning.
- Do not immerse the motor base in water or any other liquid. Clean with a damp cloth only.

- Keep hands and utensils out of the blending cup while blending to prevent personal injury and damage to the blender.
- Never blend hot liquids. Allow hot ingredients to cool before blending.
- Do not operate the blender with damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not use attachments not recommended or sold by the manufacturer.

### **3.2 Electrical Safety**

- Ensure the voltage indicated on the appliance corresponds to your local mains voltage before connecting the appliance.
- Do not let the power cord hang over the edge of a table or counter, or touch hot surfaces.
- Avoid pulling the power cord to unplug the appliance. Always grasp the plug and pull to disconnect.

### **3.3 Overheat and Overload Protection**

The Epsilon Portable Blender is equipped with built-in overheat and overload protection features to ensure safe and reliable operation. If the motor overheats or is overloaded (e.g., by blending too many hard ingredients), the blender will automatically shut off to prevent damage.

# Built for Safety, Made to Last

BPA-free, food-grade material with **overheat and overload protection** for worry-free use.

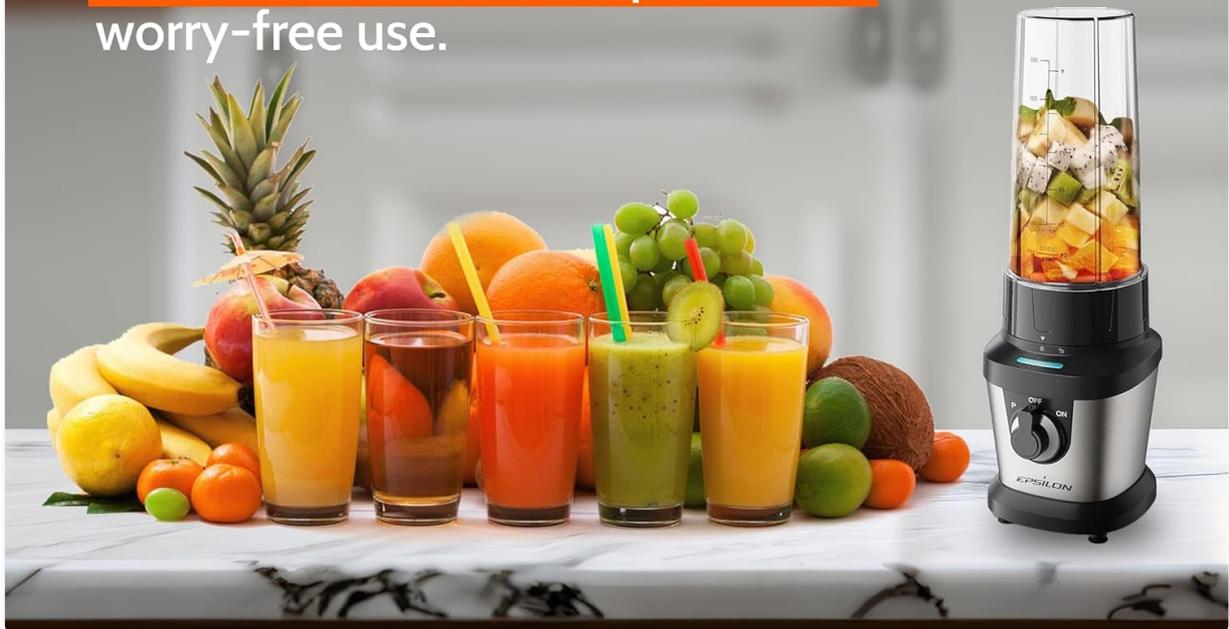


Image: The Epsilon Portable Blender shown alongside various blended beverages, highlighting its robust design and integrated safety features like overheat and overload protection.

If the blender stops unexpectedly, unplug it and allow it to cool down for at least 15-20 minutes before attempting to use it again. Reduce the load or add more liquid if overloading was the cause.

## 4. SETUP

---

### 4.1 Unpacking

- Remove all packaging materials from the blender and its components.
- Wash the blending cup, blade assembly, and flip-top lid with warm, soapy water before first use. Rinse thoroughly and dry. Do not wash the motor base.

### 4.2 Assembly

Follow these steps to assemble your Epsilon Portable Blender:



Image: The Epsilon Portable Blender showing both assembled and disassembled states, illustrating how the blending cup and blade assembly connect to the motor base.

1. Place the motor base on a clean, dry, and stable surface. Ensure the blender is unplugged.
2. Add your desired ingredients into the 24 oz. blending cup. Do not exceed the MAX fill line.
3. Screw the 4-blade assembly firmly onto the open end of the blending cup until it is securely tightened.
4. Invert the blending cup with the attached blade assembly and align the tabs on the cup with the slots on the motor base.
5. Press down and twist the blending cup clockwise until it locks into place. You should hear a click.

## 5. OPERATING INSTRUCTIONS

---

### 5.1 Before First Use

- Ensure all components are clean and properly assembled as described in the Setup section.
- Plug the power cord into a standard electrical outlet. The integrated LED light on the motor base will illuminate.

### 5.2 Blending

The Epsilon Portable Blender features simple knob control for operation.

# Compact & Powerful Smoothie Blender



Image: The Epsilon Portable Blender actively blending fruits and liquids into a smoothie, demonstrating its compact and powerful design.

1. With the blending cup securely locked onto the motor base, turn the control knob from 'OFF' to 'ON'.
2. The blender will start operating immediately. Blend until your desired consistency is achieved. For best results, blend in short bursts (10-20 seconds) rather than continuously.
3. Once blending is complete, turn the control knob back to 'OFF'.
4. Unplug the blender from the power outlet.
5. Twist the blending cup counter-clockwise to unlock and lift it off the motor base.
6. Unscrew the blade assembly from the blending cup.
7. Attach the flip-top lid to the blending cup for on-the-go enjoyment.

## 5.3 Tips for Best Results

- Always add liquids first, then soft ingredients, followed by harder ingredients (like ice or frozen fruit).
- Do not overfill the blending cup. Ensure ingredients are below the MAX fill line.
- For thicker mixtures, you may need to pulse the blender or shake the cup gently to redistribute ingredients.

- Avoid blending extremely hard ingredients like coffee beans, grains, or hard spices, as this may damage the blades or motor.
- Do not run the blender continuously for more than 60 seconds to prevent overheating. Allow a short break between blending cycles.

## 6. CLEANING AND MAINTENANCE

---

Proper cleaning and maintenance will extend the life of your Epsilon Portable Blender.

### 6.1 Cleaning the Blender

1. Always unplug the blender before cleaning.
2. Separate the blending cup, blade assembly, and flip-top lid from the motor base.
3. Wash the blending cup, blade assembly, and flip-top lid with warm, soapy water. These parts are also dishwasher-safe (top rack recommended). Use caution when handling the blade assembly as the blades are sharp.
4. Wipe the motor base with a damp cloth. Never immerse the motor base in water or any other liquid.
5. Dry all parts thoroughly before reassembling or storing.

### 6.2 Storage

Store the blender in a cool, dry place. Ensure all parts are clean and dry before storage. You can store the blending cup assembled on the motor base or separately.

## 7. TROUBLESHOOTING

---

If you encounter any issues with your Epsilon Portable Blender, please refer to the table below for common problems and solutions.

Problem	Possible Cause	Solution
Blender does not turn on.	Not plugged in; Power outlet not working; Blending cup not properly locked; Overheat protection activated.	Ensure blender is securely plugged in. Test outlet with another appliance. Twist cup clockwise until it clicks into place. Unplug and let cool for 15-20 minutes.
Motor stops during blending.	Overload protection activated; Too many ingredients; Ingredients too hard; Not enough liquid.	Unplug and let cool. Reduce ingredient quantity. Add more liquid. Cut hard ingredients into smaller pieces.
Ingredients not blending smoothly.	Not enough liquid; Ingredients too large; Air pocket around blades.	Add more liquid. Cut ingredients into smaller pieces. Pulse the blender or gently shake the cup to dislodge ingredients.

Problem	Possible Cause	Solution
Leakage from the blending cup.	Blade assembly not tightened; Gasket missing or improperly seated; Overfilled cup.	Ensure blade assembly is securely tightened. Check that the gasket is properly in place. Do not exceed the MAX fill line.

## 8. PRODUCT SPECIFICATIONS

Detailed specifications for the Epsilon Portable Blender (Model EK-2204 GRN-400):

Feature	Specification
Model Number	EK-2204 (GRN-400)
Brand	Epsilon
Power	400W
Capacity	24 Fluid Ounces (approx. 700 ml)
Blade Material	Stainless Steel
Bottle Material	PCTG (BPA Free)
Color	Black
Product Dimensions (D x W x H)	5" x 4.5" x 14" (12.7 cm x 11.4 cm x 35.6 cm)
Item Weight	3 pounds (approx. 1.36 kg)
Special Features	Food Grade, Integrated LED Light, Knob control (ON/OFF), Lightweight, Overheat & Overload Protection
UPC	709483066038

## 9. WARRANTY AND SUPPORT

### 9.1 Limited Warranty

The Epsilon Portable Blender (Model EK-2204 GRN-400) comes with a **1 Year Limited Warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use. It does not cover damage resulting from misuse, accident, alteration, neglect, unauthorized repair, or commercial use. Please retain your proof of purchase for warranty claims.

### 9.2 Customer Support

For technical assistance, warranty claims, or any questions regarding your Epsilon Portable Blender, please contact our customer support team:


- **Website:** Visit the official Epsilon website for FAQs and support resources.
- **Email:** [Insert Customer Support Email Here - if available, otherwise omit]
- **Phone:** [Insert Customer Support Phone Number Here - if available, otherwise omit]

Please have your model number (EK-2204 GRN-400) and proof of purchase ready when contacting support.

© 2025 Epsilon. All rights reserved.

## Related Documents - EK-2204 (GRN-400)

	<p><a href="#">Fostering Affinity Through Smarter Loyalty Programs: Consumer Insights</a></p> <p>A research report by Epsilon Pulse exploring what attracts consumers to enroll in and engage with loyalty programs, detailing consumer preferences, motivations, and behaviors to help marketers build stronger connections and drive retention.</p>
	<p><a href="#">AI in Marketing: Leadership and Impact in Europe - Epsilon Report</a></p> <p>Epsilon's comprehensive report on AI adoption in marketing across the UK, France, and Germany. It details current leadership stages, observed gains, persistent challenges, and strategic approaches for leveraging AI effectively in the European market.</p>
	<p><a href="#">EPSILON Professional Stage Lighting Catalog 2015</a></p> <p>Explore the 2015 EPSILON catalog featuring a comprehensive range of professional stage lighting solutions. Discover high-performance LED intelligent lighting, wash lights, COB LED series, wireless and battery-operated fixtures, outdoor lighting, stage lighting packages, and effect lighting designed for venues, events, and entertainment.</p>
	<p><a href="#">Posiflex Mercury EK Series Kiosk User Manual</a></p> <p>This user manual provides detailed information on the Posiflex Mercury EK Series Kiosks, including product features, specifications, installation procedures, and peripheral options for models EK-15xx, EK-16xx, EK-21xx, and EK-24xx.</p>
	<p><a href="#">NutriBullet Turbo™ Personal Blender User Guide</a></p> <p>Comprehensive user guide for the NutriBullet Turbo™ Personal Blender (Model NB-400), covering important safeguards, assembly, operation, troubleshooting, care, maintenance, and warranty information.</p>

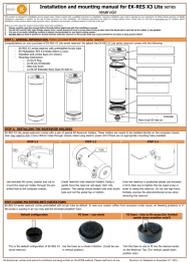

## [EK-RES X3 Lite Series Reservoir Installation and Mounting Manual](#)

Comprehensive guide for installing and mounting the EK-RES X3 Lite series reservoir, including general information, step-by-step installation instructions, and recommended configurations.