#### Manuals+

Q & A | Deep Search | Upload

#### manuals.plus /

- CORE /
- > CORE 10 Person Instant Cabin Tent with LED Lights Instruction Manual

# **CORE 10 Person Lighted with Awning**

# CORE 10 Person Instant Cabin Tent with LED Lights Instruction Manual

Model: 10 Person Lighted with Awning

Brand: CORE

#### 1. INTRODUCTION AND OVERVIEW

This manual provides detailed instructions for the setup, operation, maintenance, and care of your CORE 10 Person Instant Cabin Tent with LED Lights. This tent features an instant hub technology for quick setup, integrated LED lighting, and H20 Block Technology for weather protection.



Image 1.1: The CORE 10 Person Instant Cabin Tent fully assembled.

# 2. SAFETY INFORMATION

- Keep all flame and heat sources away from this tent fabric. The tent is made of flame-resistant fabric, but it is not fireproof.
- Do not use fuel-burning devices inside the tent. Ensure adequate ventilation to prevent carbon monoxide poisoning.
- Avoid setting up the tent under trees during storms or lightning.

- Secure the tent properly with all stakes and guylines to prevent collapse in windy conditions.
- Keep children away from the tent during setup and takedown to prevent injury from poles or stakes.

#### 3. PACKAGE CONTENTS

Verify that all components are present before beginning setup:

- Tent body with pre-attached poles
- · Rainfly with attached guylines
- · Room divider
- Battery compartment (requires 4D batteries, not included)
- Tent stakes
- · Carry bag



Image 3.1: All included components of the tent.

# 4. SETUP INSTRUCTIONS

The CORE Instant Cabin Tent is designed for a quick and easy setup, typically within 2 minutes.

- 1. **Unfold the Tent:** Lay the tent body flat on your chosen campsite, ensuring the floor is spread out evenly.
- 2. Extend Poles: Extend the pre-attached poles until they are fully straight.
- 3. Lock Poles into Place: Lift the center hub and extend each leg of the tent until the poles click and lock into their upright position. This forms the tent's frame.

- 4. **Attach Rainfly:** Drape the rainfly over the tent. Secure it by attaching the buckles or clips on the rainfly to the corresponding points on the tent body. Extend and stake out the attached guylines for added stability and weather protection.
- 5. **Stake the Tent:** Secure the tent corners and all guylines to the ground using the provided tent stakes. Ensure stakes are angled away from the tent for maximum hold.
- 6. **Optional Room Divider:** If desired, attach the room divider inside the tent to create two separate rooms.

# 5. OPERATING INSTRUCTIONS

### 5.1. Built-in LED Lighting System

The tent features integrated LED lights within the ceiling poles, controlled by a wall-mounted switch.

- 1. **Install Batteries:** Open the battery compartment (located near the light switch) and insert 4D batteries (not included), ensuring correct polarity.
- 2. **Locate Switch:** The wall-mounted light switch is accessible from both the inside and outside of the tent
- 3. **Select Mode:** Press the switch to cycle through the three lighting modes **High** (brightest illumination), **Low** (reduced brightness), and **Night Light** (soft, ambient glow). The light-diffusing fabric ensures even illumination.

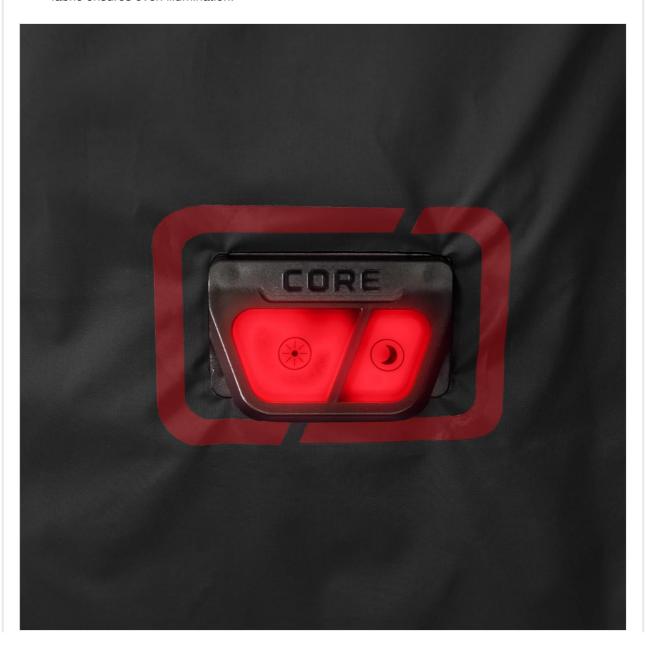




Image 5.2: Tent interior illuminated by LED lights.

# 5.2. Adjustable Ventilation

The tent is equipped with lower air intake vents to draw in cool air and a mesh ceiling to allow hot air to escape, promoting air circulation. Adjust window and door coverings as needed to optimize airflow.

#### 5.3. Room Divider

Utilize the included room divider to create two distinct living or sleeping areas within the tent for added privacy.

#### **5.4. Electrical Cord Access Port**

An electrical cord access port is provided for convenient and safe routing of power cords into the tent. Ensure the port is fully zipped when not in use to maintain weather protection.



Image 5.3: Electrical cord access port.

#### 6. MAINTENANCE AND CARE

- Cleaning: Hand wash the tent fabric with mild soap and water. Do not use harsh detergents, bleach, or machine wash. Rinse thoroughly.
- **Drying:** Always ensure the tent is completely dry before packing it away to prevent mildew and fabric degradation. Air dry in a shaded area.
- **Inspection:** Regularly inspect poles for damage, fabric for tears, and zippers for smooth operation. Repair minor issues promptly to extend the tent's lifespan.
- Stakes: Clean stakes after each use and store them in their designated bag.

#### 7. STORAGE

After cleaning and ensuring the tent is completely dry, fold it neatly and place it into the carry bag. Store the tent in a cool, dry place away from direct sunlight and extreme temperatures. Avoid storing heavy items on top of the tent bag.

# 8. TROUBLESHOOTING

- Tent Not Standing Firmly: Ensure all poles are fully extended and locked into place. Verify that all stakes are securely driven into the ground and guylines are taut.
- **LED Lights Not Working:** Check if 4D batteries are correctly installed in the battery compartment and are not depleted. Ensure the light switch is pressed firmly.
- Water Leakage: Confirm the rainfly is correctly positioned and fully extended over the tent, with all guylines staked out. Check for any tears in the fabric or seam tape.
- Condensation Inside Tent: Increase ventilation by opening lower vents and adjusting window coverings. Ensure the mesh ceiling is clear.

# 9. SPECIFICATIONS

Feature	Specification
Brand	CORE
Model Name	10 Person Lighted with Awning
Product Dimensions (L x W x H)	168" x 120" x 78"
Floor Area	140 Square Feet
Occupancy	10 Person
Assembly Time	2 Minutes (Instant Setup)
Material	Polyester (Tent Body, Floor, Rainfly)
Pole Material Type	Alloy Steel (Pre-Attached)
Water Resistance Technology	1200mm (H20 Block Technology)
Water Resistance Level	Water Resistant
Number of Doors	2
Number of Rooms	2 (with included divider)
Number of Pockets	3
Seasons	3 Season (Spring, Summer, Fall)
Power Source for Lights	4D Batteries (not included)
UPC	810007488608



Image 9.1: Tent dimensions diagram.

# 10. WARRANTY AND SUPPORT

This CORE tent is covered by a **1-Year Limited Warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use.

For warranty claims, technical support, or replacement parts, please contact CORE customer service. Keep your proof of purchase for warranty validation.

For further assistance, please visit the official CORE website or refer to the contact information provided with your purchase documentation.

#### Related Documents - 10 Person Lighted with Awning

	CORE 12 Person Instant Cabin Tent - 18 x 10 Setup and Care Guide  A comprehensive guide for setting up, using, and maintaining the CORE 12 Person Instant Cabin  Tent - 18 x 10. Includes setup instructions, frequently asked questions, warnings, and warranty information.
	CORE 10 Person Performance Instant Tent 40235: Setup Guide, Features & Warranty Discover how to set up, take down, and care for your CORE 10 Person Performance Instant Tent (Model 40235). This guide covers essential setup tips, FAQs, warnings, and warranty information for a great camping experience.
CORE CHARGE WIND 11 III III III III III III III III III	CORE 4 Person Dome Tent - 9x7 Setup and Instructions Comprehensive guide for setting up, taking down, and maintaining the CORE 4 Person Dome Tent (Model No. 40002_RevA). Includes FAQs, warnings, and warranty details for a safe and enjoyable camping experience.
Carl Noval Association for instruction and and a second of the second of	Core 9-Person BlockOut Dome Tent: Setup, Care, and Safety Guide  Detailed instruction manual for the CORE 9-Person BlockOut Dome Tent (Model 40341), covering setup, takedown, care, FAQs, and essential safety warnings for a safe camping experience.

