

LIFEZEAL PE47542

LIFEZEAL 2-Seater Outdoor Garden Swing Instruction Manual

Model: PE47542

INTRODUCTION

Thank you for choosing the LIFEZEAL 2-Seater Outdoor Garden Swing. This swing is designed to provide a comfortable and stylish seating solution for your outdoor space, such as a patio, garden, or balcony. Featuring a durable PE rattan bench, a curved backrest, and acacia wood armrests, it combines aesthetics with practicality. This manual provides essential information for safe assembly, operation, and maintenance of your new garden swing.

Key features include:

- Generous seating space for two persons.
- Elegant PE rattan material.
- High-density seat cushion for comfort.
- Maximum weight capacity of 360 kg.
- Strong suspension ropes for stability.

IMPORTANT SAFETY INFORMATION

Please read and understand all safety warnings and instructions before assembling and using this product. Failure to follow these instructions may result in serious injury.

- **Maximum Weight Capacity:** Do not exceed the maximum weight capacity of 360 kg (793 lbs).
- **Secure Installation:** Ensure the swing is securely hung from a stable and structurally sound support. The hanging point must be capable of safely supporting the swing and its occupants.
- **Clearance:** Ensure adequate clearance around the swing to prevent collisions with walls, furniture, or other objects.
- **Supervision:** Children should always be supervised when using the swing.
- **Weather Conditions:** Avoid using the swing during strong winds, heavy rain, or other severe weather conditions. Store cushions indoors during inclement weather.
- **Regular Inspection:** Periodically inspect all components, including ropes, hooks, and frame, for wear, damage, or loose connections. Replace any damaged parts immediately.
- **Cushion Care:** Keep the seat cushion dry to prolong its lifespan.
- **Assembly:** Assemble the product according to the instructions provided. Do not modify the product in any way.

PACKAGE CONTENTS

Before assembly, please verify that all parts listed below are present and undamaged. If any parts are missing or damaged, contact customer service.

- 1 x Garden Swing (PE Rattan bench with acacia wood armrests)
- 1 x Seat Cushion
- 2 x Suspension Ropes (300 cm each)
- 2 x Reinforced Screw-in Hooks
- 1 x Multilingual User Manual (this document)




Image: Reinforced screw-in hooks and durable 300cm long hanging ropes, essential for safe installation.

SETUP AND ASSEMBLY INSTRUCTIONS

Assembly is required for this product. Please follow these steps carefully. It is recommended to have two people for assembly.

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a clean, soft surface to prevent scratches.
2. **Inspect Parts:** Check all components against the "Package Contents" list to ensure nothing is missing or damaged.
3. **Assemble Swing Frame:** Connect the various parts of the swing frame (if applicable, based on the specific model's design). Ensure all bolts and screws are tightened securely. *(Note: The provided images suggest the main swing body might come largely pre-assembled, focusing on hanging.)*
4. **Attach Suspension Ropes:** Securely attach the 300 cm suspension ropes to the designated attachment points on the swing frame. Ensure the knots are tight and secure.
5. **Install Hanging Hooks:** Identify a suitable, structurally sound overhead support (e.g., a sturdy beam, porch ceiling). Drill pilot holes if necessary and securely install the reinforced screw-in hooks into the support structure. Ensure the hooks are rated for the swing's weight capacity.
6. **Hang the Swing:** Carefully lift the swing and attach the suspension ropes to the installed hooks. Ensure both ropes are evenly tensioned and the swing hangs level.
7. **Adjust Height:** The suitable hanging height from the seat to the ground is recommended to be between 45 cm and 60 cm. The suitable hanging height from the top support to the swing's top is between 210 cm and 225 cm. Adjust the ropes as needed to achieve the desired and safe height.
8. **Place Cushion:** Position the high-density seat cushion on the swing bench. Use the integrated fixing straps to secure the cushion in place, preventing it from slipping.
9. **Final Check:** Before first use, double-check all connections, ropes, and hooks for security and stability. Gently test the swing's movement.

Suitable hanging height is range from 210cm-225cm

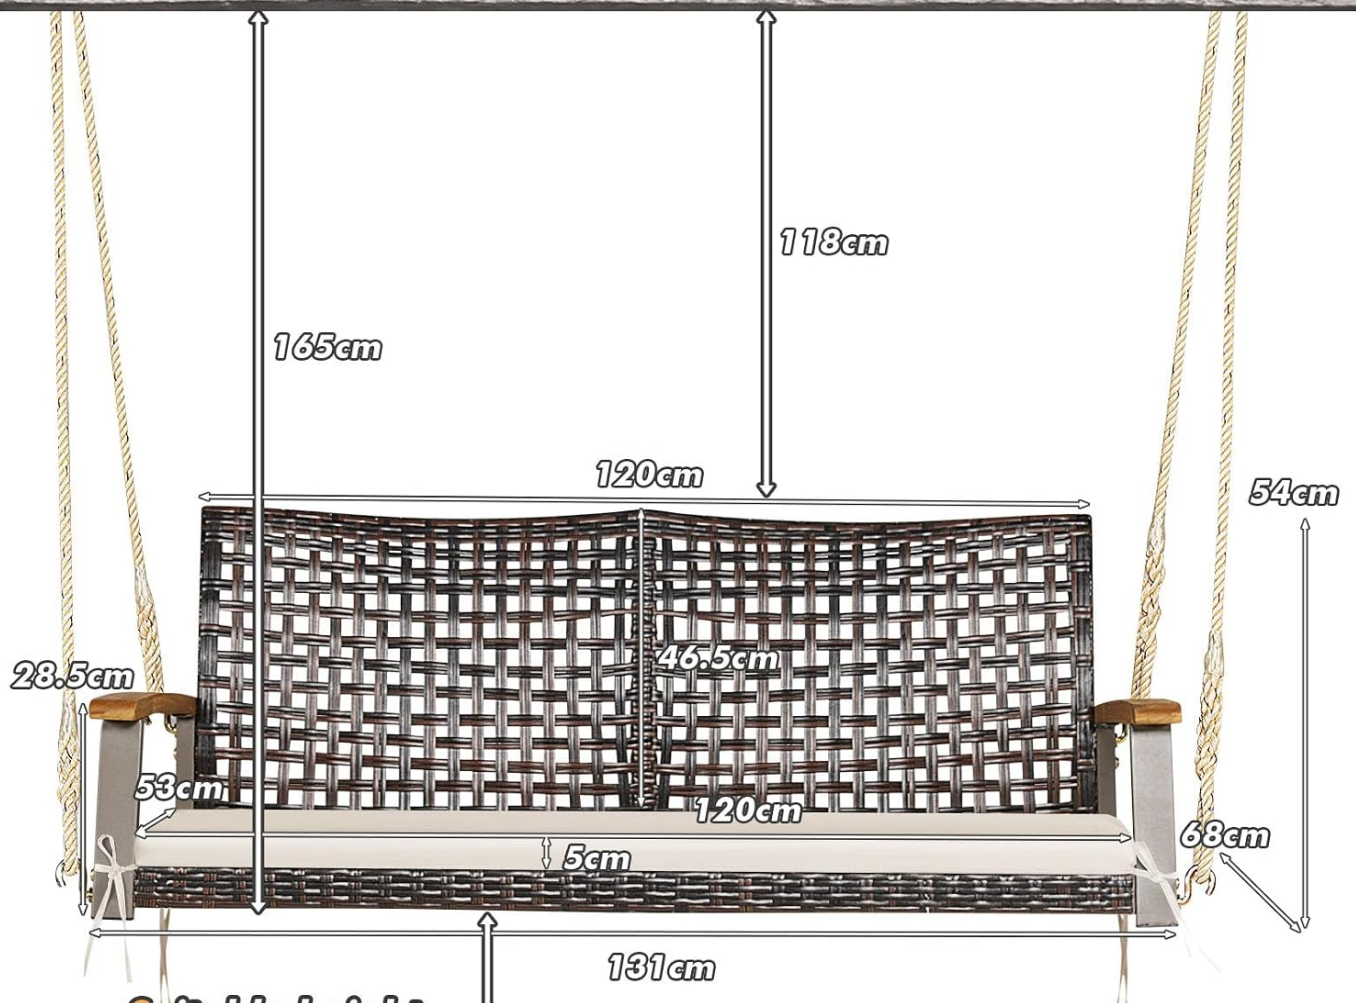

**Suitable height
from seat to
ground: 45cm-60cm**

Note: Please make sure the hanging
place is sturdy enough



Seats up to 2



Hold up to 360kg

Image: Detailed dimensions of the swing, including recommended hanging heights for optimal use.



Image: The assembled LIFEZEAL garden swing in an outdoor setting.

OPERATING INSTRUCTIONS

Using your LIFEZEAL garden swing is straightforward. Follow these guidelines for a safe and enjoyable experience.

- **Seating:** The swing is designed for two persons. Sit gently on the swing, distributing weight evenly.
- **Movement:** Initiate swinging with gentle movements. Avoid excessive or aggressive swinging, which can strain the hanging mechanism.
- **Exiting:** When exiting the swing, allow it to come to a complete stop first.
- **Cushion Comfort:** The high-density cushion provides optimal comfort. Ensure it is properly secured with the fixing straps before use.
- **Placement:** The swing is suitable for various outdoor locations such as front porches, backyards, gardens, patios, and terraces.

Wide Application

Swing anywhere you want



Front Porch



Backyard



Garden

Image: Examples of suitable locations for the garden swing, including a front porch, backyard, and garden.

MAINTENANCE

Proper maintenance will extend the life and appearance of your LIFEZEAL garden swing.

- **Cleaning the Frame:** Wipe the PE rattan and metal frame with a soft, damp cloth. For stubborn dirt, use a mild soap solution and rinse thoroughly. Avoid harsh chemicals or abrasive cleaners.
- **Acacia Wood Armrests:** The acacia wood armrests may require occasional oiling to maintain their appearance and protect them from weathering. Use a suitable outdoor wood oil.
- **Cushion Care:** The cushion cover features a smooth zipper for easy removal and washing. Hand wash or machine wash on a gentle cycle with cold water. Air dry only. Always ensure the cushion is dry before storing or using to prevent mold and mildew.
- **Storage:** During prolonged periods of non-use or severe weather, it is recommended to store the swing indoors or cover it with a protective outdoor furniture cover. Store cushions in a dry place.
- **Hardware:** Periodically check all bolts, screws, and hanging hardware to ensure they remain tight and secure. Tighten as necessary.

Comfortable Seat Cushion



Smooth Zipper

Make the cushion cover easy to remove and wash



High-Density Sponge

Offer endless softness and comfort



Fixing Straps

Keep the cushion in place without slipping

Image: Details of the seat cushion, highlighting the smooth zipper, high-density sponge, and fixing straps for maintenance and comfort.

More Product Details



Curved Acacia Wood Armrests



Well-Woven Mix Brown PE Rattan



Sturdy X-Shaped Structure



Image: Close-up of the swing's construction, including acacia wood armrests and PE rattan, which require specific care.

TROUBLESHOOTING

If you encounter any issues with your garden swing, refer to the following common problems and solutions.

Problem	Possible Cause	Solution
Swing feels unstable or wobbly.	Loose connections or uneven hanging.	Check all bolts, screws, and hanging hooks. Ensure they are securely tightened. Verify that the suspension ropes are of equal length and tension.
Squeaking noise during use.	Friction at hanging points or metal joints.	Apply a silicone-based lubricant to the hanging hooks and any metal-on-metal contact points.

Problem	Possible Cause	Solution
Cushion slips off the bench.	Fixing straps not secured.	Ensure the cushion's fixing straps are properly tied or fastened to the swing frame.
Rattan appears faded or damaged.	Prolonged exposure to sun/weather or physical damage.	While PE rattan is weather-resistant, extreme conditions can cause wear. Consider using a protective cover when not in use. For minor damage, repair kits may be available.

If the problem persists or you encounter an issue not listed here, please contact customer support.

SPECIFICATIONS

Feature	Detail
Model Number	PE47542
Brand	LIFEZEAL
Product Dimensions (L x W x H)	131 cm x 68 cm x 54 cm (51.6" x 26.8" x 21.3")
Seat Depth	68 cm (26.8")
Item Weight	13 kg (28.7 lbs)
Maximum Weight Capacity	360 kg (793 lbs)
Seating Capacity	2 persons
Materials	PE Rattan, Metal, Acacia Wood, Polyester (cushion)
Frame Material	Metal
Suspension Rope Length	300 cm (118")
Recommended Seat Height (from ground)	45 cm - 60 cm (17.7" - 23.6")
Recommended Hanging Height (from support)	210 cm - 225 cm (82.7" - 88.6")
Assembly Required	Yes
Country of Origin	Vietnam

WARRANTY AND CUSTOMER SUPPORT

This product comes with a standard return policy. For specific warranty details, claims, or technical support, please contact the seller directly. The seller for this product is **LIFEZEAL ITALY S.R.L.**. Please retain your proof of purchase for any warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question