

ROBUD WG386

ROBUD Wooden Play Kitchen Set Instruction Manual

Model: WG386

1. INTRODUCTION

This manual provides detailed instructions for the assembly, operation, and maintenance of your ROBUD Wooden Play Kitchen Set. Designed for children aged 3 and up, this playset offers a rich, interactive experience with various kitchen functions, promoting imaginative play and skill development.

2. WHAT'S IN THE BOX

Please verify that all components listed below are present before beginning assembly. If any parts are missing or damaged, please contact customer support.

- Play Kitchen main unit
- Pots and Pans
- Knives (toy)
- Cookware utensils (spatula, spoon, etc.)
- Seasoning bottles (pretend)
- Coffee cups
- Ice cubes (pretend)
- Kebabs (pretend)
- Chicken legs (pretend)
- Various adorable accessories
- Cleaning rag
- Assembly Instructions manual
- Required Hardware (screws, connectors, etc.)

Note: The exact number and type of accessories may vary slightly from the images shown.

3. ASSEMBLY INSTRUCTIONS

The ROBUD Wooden Play Kitchen Set is designed for straightforward assembly. Please follow the included detailed installation instructions carefully. Adult assembly is required.

1. Unpack all components from the box and lay them out on a clean, flat, and spacious surface.
2. Identify all parts and hardware using the provided parts list and diagrams in the separate assembly guide.
3. Follow the step-by-step diagrams and instructions to connect the main kitchen frame and its various sections.
4. Attach functional components such as the sink, stove, oven door, and refrigerator door.
5. Install the retractable barbecue grill and the washing machine unit according to the guide.
6. Ensure all screws and fasteners are securely tightened before use. Do not overtighten, as this may damage the wood.
7. Insert batteries (not included) into the designated compartments for lights and sounds, if applicable. Refer to the specific battery installation section in the separate assembly guide for battery type and polarity.



Image: Fully assembled ROBUD Wooden Play Kitchen Set, showcasing its various features and compact design.

4. OPERATING INSTRUCTIONS

This play kitchen offers a variety of interactive features for an immersive and engaging play experience.

4.1. Interactive Features

- **Stove Knobs:** Rotate the stove knobs to activate authentic kitchen sounds, simulating a realistic cooking experience.
- **Ice Maker:** Place a cup under the ice dispenser and press the lever to dispense pretend ice cubes, mimicking a real refrigerator.
- **Coffee Machine:** Use the included coffee cups with the integrated coffee machine for pretend brewing and serving.
- **Oven:** Open the oven door to place pretend food inside for baking or warming.
- **Washing Machine:** The washing machine features a colorful-bead-rotating drum, adding a realistic element to pretend laundry play.
- **BBQ Grill:** The retractable barbecue grill can be pulled out from the side for grilling activities, complete with pretend kebabs and chicken legs.

- **Sink:** The sink area allows for pretend washing of dishes and accessories, encouraging good hygiene habits.

KID-FRIENDLY DESIGN



- Rounded Edges



- Smooth Surfaces



- Cute Design



- Interactive Knobs

Image: Details of the kitchen's kid-friendly design, highlighting rounded edges and interactive knobs for safe and engaging play.

4.2. Accessory Use

The playset includes various accessories designed to enhance imaginative play and provide a complete kitchen experience:

- Use the pots and cookware on the stove for pretend cooking.
- Pretend to chop food with the included toy knives.
- Season your pretend meals with the seasoning bottles.
- Serve coffee or other beverages in the coffee cups.
- Grill kebabs and chicken legs on the BBQ grill for a complete meal.
- Utilize the provided rag to clean up after play, encouraging neat and tidy habits.

COOKING ACCESSORIES



Image: A selection of the cooking accessories provided with the playset, designed for interactive and imaginative play.

5. MAINTENANCE AND CARE

To ensure the longevity, optimal performance, and safety of your ROBUD Wooden Play Kitchen Set, please follow these care instructions:

- **Cleaning:** Wipe all surfaces with a soft, slightly damp cloth. Avoid using abrasive cleaners, harsh chemicals, or excessive water, as these can damage the wood finish.
- **Storage:** Store the playset in a dry environment away from direct sunlight, high humidity, or extreme temperatures. Prolonged exposure to these conditions can cause warping, cracking, or fading of the wood.
- **Inspection:** Regularly inspect all screws, fasteners, and connections to ensure they remain tight and secure. Tighten any loose components as necessary, but do not overtighten.
- **Damage:** If any part of the play kitchen becomes damaged, broken, or shows signs of significant wear, discontinue use immediately. Contact customer support for replacement parts or repair advice.
- **Battery Replacement:** For features requiring batteries (lights and sounds), replace batteries as needed. Ensure correct polarity (+/-) when inserting new batteries. Dispose of old batteries responsibly according to local regulations.

6. TROUBLESHOOTING

If you encounter any issues with your ROBUD Wooden Play Kitchen Set, please refer to the following common solutions:

Problem	Possible Cause	Solution
Lights/Sounds not working	Dead or improperly installed batteries.	Replace batteries with new ones, ensuring correct polarity (+/-) as indicated in the battery compartment.
Parts feel loose or wobbly	Screws or connectors have loosened over time due to play.	Carefully tighten all visible screws and check connections. Do not overtighten.
Difficulty with retractable grill/washing machine movement	Obstruction in the track or misalignment of the unit.	Check for any small objects blocking the movement path. Ensure the unit is properly aligned within its designated slot.

If the problem persists after attempting these solutions, please contact ROBUD customer support for further assistance.

7. SAFETY INFORMATION

Your child's safety is our top priority. Please adhere to the following safety guidelines to ensure a safe play environment:

- **Age Recommendation:** This product is recommended for children aged 3 years and up. It contains small parts that may pose a choking hazard for children under 3.
- **Adult Supervision:** Adult supervision is highly recommended during play, especially during initial use, to ensure safe interaction with the playset.
- **Assembly:** Assembly must be performed by an adult. Keep all small parts and hardware out of reach of children during the assembly process.
- **Stable Placement:** Always ensure the play kitchen is placed on a stable, flat, and level surface to prevent tipping or instability during play.
- **No Climbing:** Do not allow children to climb on, stand on, or hang from any part of the play kitchen. This product is not designed to support a child's weight.
- **Battery Safety:** Do not mix old and new batteries. Do not mix different types of batteries (e.g., alkaline, standard, rechargeable). Remove exhausted batteries promptly. Remove batteries if the product is not to be used for an extended period.
- **Choking Hazard:** Regularly inspect all accessories and parts for any signs of wear, breakage, or loose pieces that could become small, ingestible objects. Discard or replace damaged parts immediately.

8. SPECIFICATIONS

Detailed specifications for the ROBUD Wooden Play Kitchen Set:

Feature	Detail
Brand	ROBUD
Model Number	WG386
Product Dimensions (L x W x H)	24.8 x 11.6 x 33.7 inches (63 x 29.5 x 85.5 cm)
Expanded Width (with BBQ grill pulled out)	Up to 27.5 inches (70 cm)
Item Weight	30.8 pounds (13.97 kg)
Recommended Age	3 years and up
Main Material	Wood



SLIDE-OUT TRAY

Space-saving Design,
Fits Even in Small Spaces.

Image: Detailed dimensions of the play kitchen, illustrating its compact and expandable design.

9. WARRANTY AND SUPPORT

For warranty information, technical support, or to inquire about replacement parts, please contact ROBUD customer service. Contact details can typically be found on the product packaging, the purchase receipt, or the official ROBUD website.

We are committed to providing high-quality products and excellent customer service. Your satisfaction is important to us.

10. IMPORTANT NOTES

- Keep this instruction manual in a safe place for future reference.
- Product specifications and design are subject to change without prior notice for continuous improvement.