

Manuals.plus /
› ZELENY /
› ZELENY Enhanced Bicycle Chain Lock User Manual

ZELENY ZYBL01

ZELENY Enhanced Bicycle Chain Lock User Manual

Model: ZYBL01 | Brand: ZELENY

1. PRODUCT OVERVIEW

The ZELENY Enhanced Bicycle Chain Lock (Model ZYBL01) is a high-security, keyless combination lock designed to protect your bicycle, motorcycle, scooter, or other valuable items. Its robust construction and advanced features provide reliable anti-theft protection.



Image 1.1: The ZELENY Enhanced Bicycle Chain Lock, featuring a black fabric cover with orange ZELENY branding and a 5-digit combination mechanism.

Key Features:

- **Reinforced Pin and Lock Cylinder:** The pin and lock cylinder are upgraded, made from sturdy zinc alloy, offering superior strength and rust resistance. The pin is die-cast in one piece for increased diameter and elasticity, significantly enhancing security.
- **Upgraded Combination Wheel:** Internal gears are made of galvanized alloy for smooth operation and rust prevention. The outer shell is high-strength ABS, providing impact resistance, wear resistance, and corrosion resistance, protecting internal components.
- **Thick Alloy Steel Chain with Fabric Cover:** The 7mm thick high-strength alloy steel chain is galvanized and rust-protected, making it difficult to cut. The polyamide fabric cover is heat-resistant, corrosion-resistant, and wear-resistant, protecting the chain and preventing scratches on your vehicle's frame.
- **High Security 5-Digit Combination:** Offers 100,000 unique combinations, significantly more secure than 4-digit locks. Keyless design eliminates concerns about lost keys.
- **Wide Range of Applications:** Versatile for securing bicycles, motorcycles, electric scooters, strollers, gates, ladders, lawnmowers, and more. Multiple locks can be linked for extended reach.

2. SETUP: SETTING YOUR COMBINATION

Your ZELENY chain lock comes with a preset combination (usually 00000). Follow these steps to set your personal 5-digit combination:

1. **Open the Lock:** Align the preset combination (e.g., 00000) with the indicator marks on the lock head and pull the pin out to open the lock.
2. **Rotate the Inner Knob:** Inside the lock head, locate a small knob or lever. Rotate this knob 90 degrees clockwise (or as indicated by an arrow) until it clicks into place.
3. **Set Your New Combination:** With the knob rotated, carefully turn each number dial to your desired 5-digit combination. Ensure the numbers are perfectly aligned with the indicator marks. Choose a memorable combination.
4. **Return the Inner Knob:** Rotate the inner knob back 90 degrees counter-clockwise to its original position. This will lock in your new combination.
5. **Test Your Combination:** Scramble the numbers on the dials. Then, enter your new combination and attempt to open the lock. If it opens, your new combination is set. If not, repeat the steps carefully.

Important: Make sure to remember your new combination or write it down in a secure place. There is no master key or reset button if you forget it.

Hochsicheres 5-stelliges Passwort



Image 2.1: Diagram illustrating the internal mechanism of the 5-digit combination lock, highlighting the 100,000 possible combinations and the robust zinc alloy lock cylinder.

3. OPERATING INSTRUCTIONS

3.1 Locking Your Item:

1. Wrap the chain around the item you wish to secure (e.g., bicycle frame, wheel) and a fixed object (e.g., bike rack, pole).
2. Align your personal 5-digit combination on the lock head.
3. Insert the pin end of the chain into the lock head until it clicks securely into place.
4. Scramble the numbers on the dials to secure the lock.

3.2 Unlocking Your Item:

1. Align your personal 5-digit combination with the indicator marks on the lock head.
2. Pull the pin end out of the lock head to release the chain.
3. Remove the chain from your item.



Image 3.1: The ZELENY lock shown in various application scenarios, including securing a bicycle, scooter, motorcycle, stroller, and gate, demonstrating its versatility.

4. MAINTENANCE

Proper maintenance will extend the life and ensure the smooth operation of your ZELENY chain lock.

- **Cleaning:** Periodically wipe down the lock mechanism and chain with a damp cloth to remove dirt and grime. Avoid harsh chemicals that could damage the fabric cover or plastic components.
- **Lubrication:** If the combination dials become stiff or the pin is difficult to insert/remove, apply a small amount of silicone-based lubricant or graphite powder to the moving parts of the lock mechanism. Do not use oil-based lubricants as they can attract dirt.

- **Fabric Cover Care:** The nylon fabric cover is designed to be durable. If it gets wet, allow it to air dry completely before storing the lock to prevent mildew.
- **Storage:** Store the lock in a dry place when not in use to prevent rust and corrosion, especially if exposed to moisture.

5. TROUBLESHOOTING

Problem	Possible Cause	Solution
Cannot open the lock with the correct combination.	Dials not perfectly aligned; combination forgotten or incorrectly entered.	Ensure each number is precisely centered on the indicator mark. Double-check your combination. If forgotten, unfortunately, there is no reset.
Dials are stiff or hard to turn.	Dirt/grime buildup; lack of lubrication.	Clean the dials with a damp cloth. Apply a small amount of silicone lubricant or graphite powder to the dial mechanism.
Pin is difficult to insert or remove.	Internal mechanism friction; misalignment.	Ensure the combination is correctly aligned. Apply silicone lubricant to the pin and inside the lock opening.
Lock appears damaged or tampered with.	Attempted forced entry.	The lock's security features are designed to resist tampering. If significantly damaged, replace the lock immediately.

6. SPECIFICATIONS

Feature	Detail
Brand	ZELENY
Model Number	ZYBL01
Lock Type	5-Digit Combination Chain Lock
Material	Alloy Steel (Chain), Zinc Alloy (Pin/Cylinder), ABS (Combination Wheel Housing), Polyamide (Fabric Cover)
Chain Thickness	7 mm
Product Dimensions (L x W x H)	90 x 4 x 4 cm (35.4 x 1.6 x 1.6 inches)
Item Weight	760 Grams (1.68 lbs)
Color	Black
Special Features	Thick Chain, Large Diameter Combination Wheel, Upgraded Pin

7 mm dickere Kette & Verzinktes Rostschutzmaterial



Image 6.1: Close-up view of the ZELANY chain, demonstrating its 7mm thickness with a digital caliper, emphasizing its robust construction.

Robuster Diebstahlschutz Fahrradschloss



Image 6.2: Visual representation of the ZELENY lock's length (900mm) and weight (800g), providing a clear understanding of its size and heft.

7. WARRANTY AND SUPPORT

ZELENY is committed to providing high-quality products. For any questions, concerns, or support needs regarding your ZYBL01 chain lock, please contact the seller or ZELENY customer service through the platform where you purchased the product. Please refer to the retailer's return policy for details on returns and replacements.

While specific warranty details are not provided, ZELENY products are designed for durability and performance. Should you encounter any manufacturing defects, please reach out to the point of purchase for assistance.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CXJ7M45R>

More documents and user manuals: **<https://manuals.plus/>**