

[manuals.plus](#) /

› [Candy](#) /

› [Candy CHASD4385EBC Mini Refrigerator User Manual](#)

Candy CHASD4385EBC

Candy CHASD4385EBC Mini Refrigerator User Manual

Model: CHASD4385EBC | Brand: Candy

1. INTRODUCTION

This manual provides comprehensive instructions for the safe and efficient use of your Candy CHASD4385EBC mini refrigerator. This compact appliance offers a 90-liter net capacity, an energy efficiency class E rating, and a low noise level of 37 dB, making it suitable for various small spaces. Please read this manual thoroughly before operating the appliance and retain it for future reference.

2. SAFETY INFORMATION

To reduce the risk of fire, electric shock, or injury when using your refrigerator, follow these basic precautions:

- **Electrical Safety:** Ensure the appliance is properly grounded. Do not use extension cords or ungrounded adapters. Unplug the refrigerator before cleaning or performing any maintenance.
- **Ventilation:** Maintain adequate ventilation around the appliance to prevent overheating. Do not block any ventilation openings.
- **Flammable Materials:** Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance. Keep flammable materials and vapors away from the refrigerator.
- **Child Safety:** This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- **Disposal:** Dispose of the appliance according to local regulations for flammable refrigerants and insulation gas.

3. SETUP AND INSTALLATION

Proper installation is crucial for the performance and longevity of your refrigerator.

1. **Unpacking:** Carefully remove all packaging materials. Inspect the appliance for any damage.
2. **Placement:** Place the refrigerator on a firm, level surface away from direct sunlight, heat sources (e.g., stoves, heaters), and moisture. Ensure there is sufficient space around the unit for proper air circulation (at least 10 cm at the back and sides).
3. **Leveling:** Adjust the leveling feet at the bottom of the refrigerator to ensure it is stable and level. This helps prevent vibrations and ensures proper door sealing.

4. **Cleaning:** Before first use, clean the interior and exterior of the refrigerator with a mild detergent and warm water. Rinse and dry thoroughly.
5. **Power Connection:** After placement and cleaning, wait at least 2-4 hours before plugging the refrigerator into a grounded electrical outlet. This allows the refrigerant to settle.
6. **Door Reversal (Optional):** The door hinge is set to the right by default. If you wish to reverse the door opening direction, refer to the detailed instructions provided in the separate door reversal kit (if included) or contact customer support.



Figure 3.1: Exterior view of the Candy CHASD4385EBC mini refrigerator. This image shows the compact design suitable for various placements.

4. OPERATING INSTRUCTIONS

Your Candy mini refrigerator is designed for simple and efficient operation.

1. **Temperature Control:** The refrigerator is equipped with an adjustable thermostat. Locate the thermostat dial inside the refrigerator compartment. Turn the dial to your desired setting. Higher numbers typically indicate colder temperatures. Start with a medium setting (e.g., '3' or '4') and adjust as needed based on ambient temperature and food load.

2. **Food Storage:** Utilize the internal shelves and door bins for organized storage. The refrigerator includes 2 shelves and 1 vegetable drawer, providing flexible storage options for various food items.



Figure 4.1: Interior view of the Candy CHASD4385EBC mini refrigerator, highlighting the adjustable shelves and vegetable drawer for efficient food organization.

No official product videos from the seller were found for this specific model.

5. MAINTENANCE AND CLEANING

Regular maintenance ensures optimal performance and extends the life of your appliance.

- **Cleaning the Interior:** Unplug the refrigerator. Remove all food and removable parts (shelves, drawers). Wash interior surfaces with a solution of mild detergent and warm water. Rinse with clean water and dry thoroughly. Do not use abrasive cleaners or sharp objects.
- **Cleaning the Exterior:** Wipe the exterior with a soft cloth dampened with mild detergent. Dry with a soft, clean cloth.
- **Door Seals:** Regularly check and clean the door seals to ensure they are free of debris and maintain a tight seal.

seal. A poor seal can lead to increased energy consumption.

- **Defrosting:** This mini refrigerator typically requires manual defrosting. When frost builds up to about 5mm (1/4 inch) thick, unplug the unit, remove all food, and allow the frost to melt naturally. Place towels at the bottom to absorb water. Once defrosted, clean and dry the interior before plugging it back in.
- **When Not in Use:** If the refrigerator will not be used for an extended period, unplug it, clean the interior, and leave the door slightly ajar to prevent odors and mold growth.

6. TROUBLESHOOTING

Before contacting customer service, check the following common issues and solutions:

Problem	Possible Cause	Solution
Refrigerator does not operate.	No power; thermostat set to '0' or 'Off'.	Check power supply; adjust thermostat to a colder setting.
Food is not cold enough.	Thermostat setting too warm; door opened too frequently; poor ventilation.	Adjust thermostat to a colder setting; ensure door is closed properly; check ventilation.
Excessive noise.	Refrigerator not level; items vibrating inside.	Adjust leveling feet; rearrange items to prevent contact.
Water on the floor.	Drain hole blocked; excessive frost during defrost.	Clear drain hole; ensure proper defrosting procedure is followed.

7. SPECIFICATIONS

Key technical details for your Candy CHASD4385EBC mini refrigerator:

- **Brand:** Candy
- **Model Number:** CHASD4385EBC
- **Configuration:** Compact without freezer
- **Color:** Black
- **Net Refrigerator Capacity:** 90 Liters
- **Energy Efficiency Class:** E
- **Annual Energy Consumption:** 85 kWh
- **Noise Emission:** 37 dB
- **Climate Class:** Starfish (specific climate class not detailed, often refers to ambient temperature range)
- **Number of Shelves:** 2
- **Number of Vegetable Drawers:** 1
- **Door Hinge:** Right (reversible)
- **Installation Type:** Freestanding
- **Special Feature:** Variable Ventilation
- **Electrical Plug Type:** Type F - 2 pin (German)
- **Weight:** 19.5 kg



Figure 7.1: Energy efficiency label, indicating the Class E rating for the Candy CHASD4385EBC.

8. WARRANTY AND SUPPORT

Your Candy CHASD4385EBC mini refrigerator comes with a standard warranty. For specific details regarding the warranty period and coverage, please refer to the documentation included with your purchase or visit the official Candy website.

- **Returns:** Products are returnable within 14 days of delivery, if requested.
- **Customer Support:** Specialized customer support is available for assistance with product inquiries, troubleshooting, and warranty claims.
- **Defective or Damaged Products:** If you receive a defective or damaged product, please consult the help page on the retailer's website for return and replacement procedures.