

[Manuals.plus](#) /

› [DRAWERHOM](#) /

› DRAWERHOM Dresser TV Stand with Power Outlets and LED Lights User Manual

## DRAWERHOM 11 Dresser

# DRAWERHOM Dresser TV Stand with Power Outlets and LED Lights User Manual

Model: 11 Dresser

## 1. INTRODUCTION

Thank you for choosing the DRAWERHOM Dresser TV Stand. This versatile furniture piece combines ample storage with modern conveniences, including integrated power outlets and customizable LED lighting. Designed to accommodate TVs up to 55 inches, it features 11 fabric drawers, a sturdy metal frame, and a durable wood top. This manual provides essential information for assembly, operation, maintenance, and troubleshooting to ensure safe and optimal use of your product.




*Image 1.1: The DRAWERHOM Dresser TV Stand, showcasing its design with a television placed on the top surface and the central shelf illuminated by purple LED lights.*

## 2. SAFETY INFORMATION

**WARNING:** Always secure the dresser to the wall using the provided anti-tipping device to prevent serious injury from tipping furniture.

- Read all instructions carefully before assembly and use.
- Keep small parts and packaging materials away from children.
- Ensure all connections are secure before placing items on or in the dresser.
- Do not overload drawers. Distribute weight evenly.
- Avoid placing hot items directly on the wood top without protection.

- Do not attempt to modify the product in any way not described in this manual.

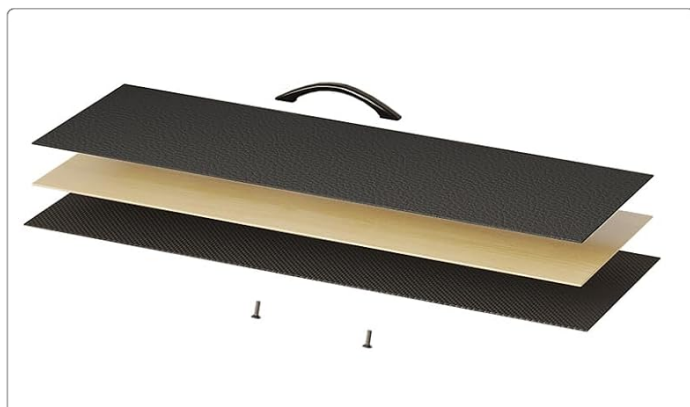

←|| **3 Tiers Construction**

**Adjustable Feet** ||→



←|| **Anti-tip Kit**

*Image 2.1: Illustration of the adjustable feet for leveling and the anti-tip kit, which must be installed to secure the dresser to a wall.*

### 3. PACKAGE CONTENTS

Verify that all components are present before beginning assembly. If any parts are missing or damaged, please contact customer service.

- Metal Frame Components
- Wood Top Panel
- Fabric Drawers (11 units)
- Power Outlet Unit (with USB ports)
- LED Light Strip and Remote Control
- Anti-Tip Kit
- Adjustable Feet
- Assembly Hardware (screws, bolts, Allen wrench)

- Side Storage Pockets (2 units)

## 4. ASSEMBLY INSTRUCTIONS

Assembly is designed to be straightforward. Follow these steps carefully. It is recommended to have a second person assist with certain steps.

### 4.1 Frame Assembly

1. Unpack all components and lay them out on a clean, soft surface to prevent scratches.
2. Assemble the main metal frame structure according to the diagrams in the included detailed instructions. Ensure all connections are finger-tight initially.
3. Attach the adjustable feet to the bottom of the frame. Adjust them to level the dresser on your floor.
4. Once the frame is fully assembled and stable, tighten all screws and bolts securely using the provided Allen wrench.



Image 4.1: Detailed view of the dresser's robust metal frame, highlighting its structural integrity and the quality of the wood top and drawer handles.

### 4.2 Wood Top and Power Unit Installation

1. Carefully place the wood top panel onto the assembled metal frame. Align the pre-drilled holes.
2. Secure the wood top to the frame using the designated screws.
3. Install the power outlet unit into its designated slot on the wood top. Connect the power cord as instructed.

### 4.3 Drawer Assembly and Insertion

1. Unfold each fabric drawer. Insert the rigid bottom panel into the base of each drawer to give it shape and stability.
2. Attach the drawer handles to the front of each fabric drawer.

3. Slide the assembled drawers into their respective slots within the metal frame.
4. Attach the side storage pockets to the designated areas on the frame.



Image 4.2: Step-by-step guide illustrating the simple process of assembling the foldable fabric drawers.

#### 4.4 LED Light Installation

1. Clean the surface where the LED strip will be applied (typically the underside of the top shelf in the open compartment).
2. Peel off the adhesive backing from the LED strip and firmly press it into place.
3. Connect the LED strip to its power source and the control unit.

#### 4.5 Anti-Tip Kit Installation

1. Position the dresser in its final desired location.
2. Follow the specific instructions provided with the anti-tip kit to securely attach the dresser to a wall stud. This step is crucial for safety.

### 5. OPERATING INSTRUCTIONS

#### 5.1 Power Outlets

The built-in power outlet unit provides convenient access to electrical and USB charging ports. Simply plug the dresser's main power cord into a wall outlet. You can then use the integrated AC outlets and USB ports to charge devices or power small electronics.

#### 5.2 LED Lights

The LED lights can be controlled via the included remote control or a compatible smartphone application. Refer to the separate LED light instruction sheet for detailed pairing and operation instructions. Features include:

- On/Off function
- Brightness adjustment
- Color selection (over 60,000 DIY colors)
- Dynamic lighting modes

## 6. MAINTENANCE

- **Cleaning the Wood Top:** Wipe with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners.
- **Cleaning Fabric Drawers:** Spot clean with a mild detergent and a damp cloth. Allow to air dry completely. Do not machine wash.
- **Frame Maintenance:** Periodically check all screws and bolts to ensure they remain tight.
- **Power Unit:** Keep the power outlets and USB ports free from dust and debris.

## 7. TROUBLESHOOTING

| Problem                        | Possible Cause                                               | Solution                                                                                                                                                |
|--------------------------------|--------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------|
| LED lights not turning on.     | Loose connection, remote battery dead, power not supplied.   | Check all cable connections. Replace remote battery. Ensure dresser's main power cord is plugged in.                                                    |
| Power outlets not working.     | Dresser not plugged in, circuit breaker tripped.             | Verify the dresser's main power cord is securely plugged into a functional wall outlet. Check your home's circuit breaker.                              |
| Drawers do not slide smoothly. | Drawer not fully assembled, obstruction, uneven frame.       | Ensure the rigid bottom panel is correctly inserted. Check for any items obstructing the drawer. Verify the dresser is level using the adjustable feet. |
| Dresser feels unstable.        | Loose connections, uneven floor, anti-tip kit not installed. | Tighten all frame screws. Adjust the feet to level the dresser. Install the anti-tip kit as per instructions.                                           |

## 8. SPECIFICATIONS


| Feature                        | Detail                                                                    |
|--------------------------------|---------------------------------------------------------------------------|
| Brand                          | DRAWERHOM                                                                 |
| Model Number                   | 11 Dresser                                                                |
| Product Dimensions (L x W x H) | 45.27 x 13.77 x 32.67 inches                                              |
| Item Weight                    | 43.6 pounds                                                               |
| Material                       | Metal (frame), MDF Board (top), Non-woven Fabric (drawers) with PU Finish |
| Number of Drawers              | 11                                                                        |

| Feature               | Detail                                                                                                                                  |
|-----------------------|-----------------------------------------------------------------------------------------------------------------------------------------|
| Special Features      | Built-in Power Outlets (AC & USB), LED Lights (remote/app control, 60,000+ colors), Side Storage Pockets, Anti-Tip Kit, Adjustable Feet |
| TV Size Compatibility | Up to 55 inches                                                                                                                         |

Super Sturdy And Stable



Thickened Metal Frame

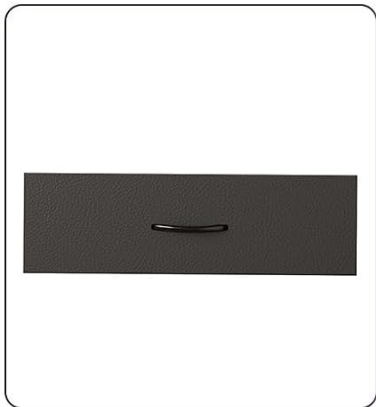

Smooth Aruh Handle



Sturdy Wood Top

Image 8.1: Dimensional drawing of the dresser, providing precise measurements for planning placement and understanding storage capacity.

9. WARRANTY AND CUSTOMER SUPPORT

DRAWERHOM is committed to providing high-quality products and excellent customer service. If you encounter any issues, have questions about assembly, or require assistance with your product, please do not hesitate to contact our customer support team. Refer to your purchase documentation for specific warranty details and contact information.

Your satisfaction is our top priority.

## ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

### Name

Anonymous

### Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

### Question

Example: How do I reset this device or fix this error?

### Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question