

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [WE](#) /

› **WE Radio-Controlled Digital Alarm Clock (Model WEREVDCFBL) User Manual**

WE WEREVDCFBL

WE Radio-Controlled Digital Alarm Clock User Manual

Model: WEREVDCFBL

1. INTRODUCTION

This manual provides detailed instructions for the WE Radio-Controlled Digital Alarm Clock, Model WEREVDCFBL. This device offers precise timekeeping through radio signal synchronization, along with date and indoor temperature display, and a convenient backlight for enhanced visibility. Please read this manual thoroughly before use to ensure proper operation and to maximize the lifespan of your product.

2. PRODUCT OVERVIEW

Familiarize yourself with the components and controls of your alarm clock.



Figure 2.1: Front view of the WE Radio-Controlled Digital Alarm Clock. The display shows the current time, date, day of the week, and temperature.

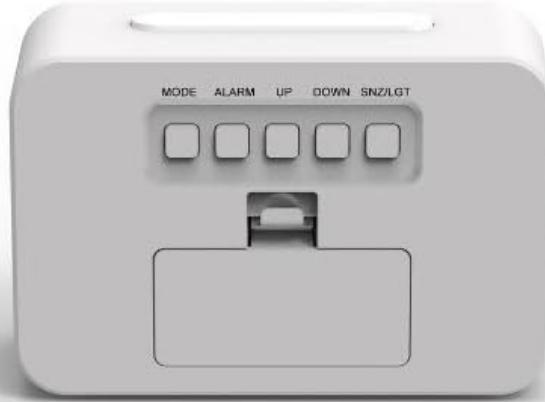


Figure 2.2: Back view of the alarm clock, highlighting the control buttons and the battery compartment. The buttons are used for setting time, alarm, and activating snooze/backlight.

Key Features:

- Radio-controlled time synchronization for automatic and accurate time setting.
- Large, backlit digital display for clear visibility.
- Displays time (AM/PM or 24-hour format).
- Displays date (day, month, day of week).
- Displays indoor temperature (Celsius or Fahrenheit).
- Alarm function with snooze.
- Battery-operated for portability and power outage resilience.

3. SETUP

3.1 Battery Installation

1. Locate the battery compartment on the back of the unit (refer to Figure 2.2).
2. Open the battery compartment cover.
3. Insert the required batteries (e.g., 2x AA, not included) according to the polarity markings (+/-) inside the compartment.
4. Close the battery compartment cover securely.

3.2 Initial Power On

Upon battery insertion, the clock will power on and typically begin searching for the radio control signal. Place the clock near a window for optimal signal reception.

3.3 Radio-Controlled Time Synchronization

The clock will automatically attempt to synchronize with the radio signal (e.g., DCF). This process may take several minutes or up to 24 hours, depending on signal strength and your geographical location. A signal icon will appear on the display when synchronization is successful. If synchronization fails, the time can be set manually.

4. OPERATING INSTRUCTIONS

4.1 Button Functions

- **MODE:** Cycle through display modes (e.g., Time, Alarm setting).
- **ALARM:** Activate/deactivate alarm, enter alarm setting mode.
- **UP:** Increase values, change settings.
- **DOWN:** Decrease values, change settings.
- **SNZ/LGT:** Activate snooze function when alarm sounds, activate backlight for a few seconds.

4.2 Manual Time and Date Setting

If radio synchronization is not desired or unsuccessful:

1. Press and hold the **MODE** button until the time display starts flashing.
2. Use the **UP** or **DOWN** buttons to adjust the hour. Press **MODE** to confirm and move to minutes.
3. Repeat for minutes, year, month, and day.
4. Press **MODE** again to exit the setting mode.

4.3 Alarm Setting

1. Press the **ALARM** button once to view the current alarm time.
2. Press and hold the **ALARM** button until the alarm time starts flashing.
3. Use the **UP** or **DOWN** buttons to set the desired alarm hour. Press **ALARM** to confirm and move to minutes.
4. Use the **UP** or **DOWN** buttons to set the desired alarm minute. Press **ALARM** to confirm and exit alarm setting mode.
5. To activate or deactivate the alarm, press the **ALARM** button once. An alarm icon will appear on the display when the alarm is active.

4.4 Snooze Function

When the alarm sounds, press the **SNZ/LGT** button to activate the snooze function. The alarm will temporarily stop and sound again after a few minutes (snooze duration is typically fixed and cannot be adjusted).

4.5 Backlight Operation

Press the **SNZ/LGT** button to briefly illuminate the display backlight for improved visibility in low-light conditions.

4.6 Temperature Display

The current indoor temperature is continuously displayed on the screen. To switch between Celsius and Fahrenheit, refer to the specific instructions in your product packaging or look for a dedicated switch, often located in the battery compartment.

5. MAINTENANCE

5.1 Cleaning

Wipe the clock with a soft, dry cloth. Do not use abrasive cleaners, solvents, or chemical sprays, as these may damage the display or casing.

5.2 Battery Replacement

Replace batteries when the display dims, the backlight becomes weak, or the clock stops functioning correctly. Ensure correct polarity when inserting new batteries.

6. TROUBLESHOOTING

- **No Display or Dim Display:**

Check battery installation and charge. Replace batteries if necessary. Ensure batteries are inserted with correct polarity.

- **Incorrect Time:**

Ensure the clock is in a location with good radio signal reception, away from electronic interference.

Allow up to 24 hours for automatic synchronization. If radio control is consistently unsuccessful, manually set the time as described in Section 4.2.

- **Alarm Not Sounding:**

Ensure the alarm is activated (check for the alarm icon on the display). Verify that the alarm time is set correctly.

- **Temperature Reading Appears Incorrect:**

Ensure the clock is placed in a stable indoor environment, away from direct sunlight, drafts, or heat sources that could affect temperature readings.

7. SPECIFICATIONS

Feature	Detail
Brand	WE
Model	WEREVDCFBL
Display Type	Digital
Special Features	Temperature Display, Radio-Controlled Time
Power Source	Battery Powered (Batteries not included)
Shape	Rectangular
Usage	Indoor
Frame Material	Plastic
Mounting Type	Tabletop
Alarm Function	Yes

8. WARRANTY AND SUPPORT

Warranty information for the WE Radio-Controlled Digital Alarm Clock is typically provided at the point of purchase or can be found on the manufacturer's official website. For technical support or inquiries, please refer to the contact information provided by your retailer or the manufacturer.

© 2024 WE. All rights reserved.