

Diveblues N607

Diveblues N607 Portable Handheld Turbo Fan

INSTRUCTION MANUAL

Model: N607

Introduction

Thank you for choosing the Diveblues N607 Portable Handheld Turbo Fan. This manual provides essential information for the safe and efficient operation of your new fan. Please read it thoroughly before use and retain it for future reference.

The Diveblues N607 is designed to provide powerful and portable cooling with its advanced turbo air technology and versatile usage modes. It is ideal for various indoor and outdoor activities, ensuring comfort wherever you go.

Key Features

- **Ultimate Cooling Experience:** Advanced 6-blade design and high-speed three-phase brushless motor deliver wind speeds up to 10m/s and 13,500 rpm.
- **5 Gear Turbo Wind:** Adjustable wind speed settings from light breezes to strong winds to meet diverse cooling needs.
- **Extra Long Battery Life:** Built-in 4000mAh battery provides up to 12 hours of operation on a single charge, compatible with USB-C charging.
- **Unique 3-in-1 Design:** Functions as a handheld fan, a desk fan with an adjustable head, and a neck fan using the included lanyard.
- **Portable & Compact:** Ultra-small foldable body design and lightweight (190 grams) for easy portability in pockets or bags.
- **LED Display:** Clear LED screen indicates current wind speed and battery level.

Product Overview

Familiarize yourself with the components of your Diveblues N607 Turbo Fan:



The Diveblues N607 Portable Handheld Turbo Fan, showcasing its compact design and fan head.

3 IN 1 Usage

Neck fan ►

◀ Handheld fan

▲ Desk fan

Illustration of the fan's versatile 3-in-1 usage: as a neck fan, handheld fan, and desk fan.



The LED display on the fan head, showing battery level and current speed setting.



The single gear switch button for easy operation.



The USB-C charging port located on the side of the fan.

Setup

1. **Initial Charge:** Before first use, fully charge the fan using the provided USB-C cable. Connect the cable to the fan's charging port and a compatible USB power source (e.g., wall adapter, power bank, laptop). The LED display will show charging status.
2. **Attach Lanyard (Optional):** If you wish to use the fan as a neck fan, attach the included lanyard to the designated loops on the fan's body. Ensure it is securely fastened.

Operating Instructions

1. **Power On/Off:** Press the power button once to turn the fan on to the lowest speed setting. To turn off the fan, cycle through all speed settings until the fan stops, or press and hold the power button for a few seconds.
2. **Adjust Fan Speed:** While the fan is on, press the power button repeatedly to cycle through the 5 available speed settings. The LED display will indicate the current speed level.
3. **Memory Function:** The fan remembers the last used speed setting. When turned back on, it will resume at that speed.
4. **Adjust Fan Head:** The fan head can be manually adjusted up to 180 degrees to direct airflow as needed. This is particularly useful when using it as a desk fan.

Charging

- Use the provided USB-C cable for charging.
- Connect to a 5V USB power source.
- The LED display shows the battery charge level. A full charge provides up to 12 hours of operation, depending on the speed setting used.
- Avoid using damaged cables or chargers.

Usage Scenarios

The Diveblues N607 fan offers versatile cooling for various situations:

- **Handheld:** Perfect for immediate personal cooling on the go.
- **Desk Fan:** Fold the handle to create a stable base and place it on any flat surface for hands-free cooling. Adjust the head for optimal airflow.
- **Neck Fan:** Attach the lanyard and wear it around your neck for continuous, hands-free cooling during outdoor activities or travel.



Using the fan in handheld mode for personal cooling.



The fan configured as a desk fan, providing airflow while working or relaxing.



The fan worn around the neck using the lanyard for hands-free cooling.

Maintenance

- **Cleaning:** Ensure the fan is turned off before cleaning. Use a soft, dry cloth to wipe the exterior. Do not use harsh chemicals or abrasive materials.
- **Storage:** When not in use for extended periods, store the fan in a cool, dry place. It is recommended to partially charge the battery every few months to maintain its health.
- **Safety:** Do not insert fingers or objects into the fan blades. Keep out of reach of small children.

Troubleshooting

- **Fan not turning on:** Ensure the battery is charged. Connect to a power source and try again.
- **Weak airflow:** Check the speed setting on the LED display and increase if necessary. Ensure the fan intake and outlet are not obstructed.

- **Charging issues:** Verify the USB-C cable and power adapter are working correctly. Try a different cable or power source.
- **Unusual noise:** Turn off the fan and check for any foreign objects obstructing the blades. If the noise persists, discontinue use and contact customer support.

Specifications

Feature	Detail
Brand	Diveblues
Model Name	N607
Product Dimensions	2.3"D x 2"W x 6.7"H
Item Weight	7 ounces (0.2 Kilograms)
Power Source	Battery Powered (Rechargeable)
Battery Type	1 Lithium Ion battery required
Battery Life	Up to 12 hours
Number of Power Levels	5
Max Wind Speed	10m/s
Max RPM	13,500 rpm
Motor Type	Brushless
Control Method	Touch
Noise Level	40 Decibels
Indoor/Outdoor Usage	Indoor, Outdoor

Official Product Video

Official Diveblues video demonstrating the portable handheld fan's features and various uses in different scenarios.

Warranty and Support

For warranty information or customer support, please refer to the contact details provided on the product packaging or visit the official Diveblues website. Keep your purchase receipt as proof of purchase.

© 2026 Diveblues. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question