

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Kärcher](#) /

› [Kärcher CVH 3 Plus Handheld Vacuum Cleaner User Manual](#)

Kärcher CVH 3 Plus

Kärcher CVH 3 Plus Handheld Vacuum Cleaner User Manual

Model: CVH 3 Plus (1.198-350.0)

INTRODUCTION

This manual provides essential instructions for the safe and efficient operation, maintenance, and care of your Kärcher CVH 3 Plus Handheld Vacuum Cleaner. Please read this manual thoroughly before first use and keep it for future reference.

SAFETY INSTRUCTIONS

Always observe the following safety precautions to prevent accidents and damage to the appliance:

- Read all instructions before using the appliance.
- Do not use the appliance outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without dust bag and/or filters in place.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.

PRODUCT OVERVIEW

The Kärcher CVH 3 Plus is a powerful and compact handheld vacuum cleaner designed for quick and efficient cleaning tasks. It features a two-stage filter system and two suction modes for versatile use.

Components Included:

- Kärcher CVH 3 Plus Handheld Vacuum Cleaner
- Parking station with charging function
- 5V/2A Charging station + adapter
- 2-in-1 Crevice nozzle
- HEPA filter (EN 1822:1998)

Key Features:

- **2-Stage Filter System:** Combines fine steel mesh for coarse dirt and hair with a downstream HEPA filter for clean exhaust air.
- **Hygienic Dirt Container Emptying:** Easy to remove and empty without direct contact with dirt.
- **Two Suction Modes:** Minimum mode for up to 20 minutes runtime, and maximum mode for stronger suction.
- **Cordless Design:** Offers mobility and convenience for various cleaning tasks.
- **Compact and Lightweight:** Easy to handle and store.



Image: The Kärcher CVH 3 Plus handheld vacuum cleaner, white and black, resting in its black charging station. The vacuum features a clear dustbin and a comfortable handle.

SETUP

1. Initial Charging

1. Unpack all components from the box.
2. Connect the 5V/2A charging adapter to the charging station.
3. Place the handheld vacuum cleaner into the charging station. Ensure it is seated correctly.
4. Allow the vacuum to charge fully before first use. The charging indicator light will show the charging status.

2. Attaching Accessories

The 2-in-1 crevice nozzle can be attached directly to the suction opening for specialized cleaning tasks.



Image: A person's hands demonstrating how to attach the 2-in-1 crevice nozzle to the front of the Kärcher CVH 3 Plus handheld vacuum cleaner.

OPERATING INSTRUCTIONS

1. Power On/Off

- To turn on the vacuum, press the power button located on the handle.
- To turn off the vacuum, press the power button again.

2. Selecting Suction Mode

- The CVH 3 Plus offers two suction modes: minimum and maximum.
- Press the mode selection button (usually near the power button) to switch between modes.
- Use the minimum mode for lighter debris and extended battery life (up to 20 minutes).
- Use the maximum mode for stronger suction on stubborn dirt.

3. General Cleaning Applications

The Kärcher CVH 3 Plus is suitable for various indoor cleaning tasks:

- Vacuuming crumbs and dry spills from kitchen counters and tables.
- Cleaning dust and debris from bookshelves and furniture.
- Detailing car interiors, including seats and floor mats.
- Removing dust from hard floors and delicate surfaces like laptop keyboards.



Image: A woman using the Kärcher CVH 3 Plus handheld vacuum to clean crumbs and small debris from a wooden table surface.



Image: A woman using the Kärcher CVH 3 Plus handheld vacuum to clean a car seat, demonstrating its use for automotive interiors.



Image: A woman using the Kärcher CVH 3 Plus handheld vacuum to carefully clean dust and debris from a laptop keyboard.

MAINTENANCE

1. Emptying the Dirt Container

1. Ensure the vacuum is turned off.
2. Locate the release button for the dirt container, usually near the nozzle.
3. Press the button and carefully detach the dirt container from the main unit.
4. Hold the container over a waste bin and open its lid to empty the collected dirt.
5. Reattach the dirt container securely until it clicks into place.

2. Cleaning the Filter System

The CVH 3 Plus features a 2-stage filter system that requires regular cleaning to maintain optimal suction performance and clean exhaust air.

1. After emptying the dirt container, separate the steel mesh pre-filter and the HEPA filter.
2. Tap the steel mesh filter gently to remove loose dirt and debris.
3. Rinse both the steel mesh filter and the HEPA filter under running water. Do not use detergents.
4. Allow both filters to air dry completely for at least 24 hours before reassembling. Ensure they are fully dry to prevent mold growth and damage to the vacuum.
5. Reassemble the filters and dirt container, then attach them back to the vacuum cleaner.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Vacuum does not turn on	Battery is discharged	Charge the battery fully.
Reduced suction power	Dirt container full; Filters clogged; Nozzle blocked	Empty dirt container; Clean or replace filters; Clear any blockages from the nozzle.
Short battery life	Battery not fully charged; Operating in maximum mode continuously	Ensure battery is fully charged; Use minimum mode for longer runtime.

SPECIFICATIONS

Feature	Detail
Brand	Kärcher
Model Name	CVH 3 Plus
Item Model Number	1.198-350.0
Special Feature	Bagless
Filter Type	HEPA Filter (EN 1822:1998)
Is Cordless?	Yes
Capacity	0.7 Liters
Wattage	70 watts
Recommended Uses	Hard Floor, Furniture, Car, Hardwood
Form Factor	Handheld
Color	White
Product Dimensions	12.99"L x 2.99"W x 2.99"H
Battery Type	Lithium-Ion
Noise Level	78 Decibels
Battery Life	Up to 20 minutes (in minimum mode)
Motor Horsepower	1.198 horsepower
Control Method	Touch
Number of Power Levels	2

Feature	Detail
Item Weight	1.32 pounds

WARRANTY AND SUPPORT

For warranty information, technical support, or to purchase replacement parts, please refer to the official Kärcher website or contact Kärcher customer service directly. Keep your proof of purchase for warranty claims.


Online Support: Visit www.kaercher.com



© 2025 Kärcher. All rights reserved.

Related Documents - CVH 3 Plus

	<p>Kärcher CVH 2, CVH 3, CVH 3 Plus Handheld Vacuum Cleaner Manual</p> <p>This document provides operating instructions, safety information, and technical specifications for the Kärcher CVH 2, CVH 3, and CVH 3 Plus handheld vacuum cleaners. Learn about intended use, maintenance, troubleshooting, and accessories.</p>
	<p>Kärcher CVH 2 & CVH 3 Plus Handheld Vacuum Cleaner User Manual</p> <p>Official user manual for the Kärcher CVH 2 and CVH 3 Plus handheld vacuum cleaners, providing operating instructions, maintenance, troubleshooting, and technical specifications for efficient home cleaning.</p>
	<p>Kärcher VC 7 Cordless yourMax User Manual</p> <p>Comprehensive user manual for the Kärcher VC 7 Cordless yourMax cordless vacuum cleaner, detailing setup, operation, maintenance, troubleshooting, and safety instructions.</p>
	<p>Kärcher VC 7 Cordless yourMax Vacuum Cleaner - User Manual and Operating Instructions</p> <p>Comprehensive user manual and operating instructions for the Kärcher VC 7 Cordless yourMax cordless vacuum cleaner. Includes setup, operation, maintenance, safety guidelines, troubleshooting, and technical specifications.</p>

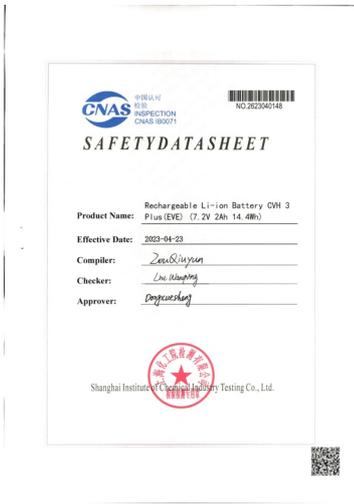

[pdf]

NAPS2 30279 795 Download Akku Handstaubsauger CVH 3 Plus KÄRCHER ZGONC zgonc at dl 201731 |||

...

lang:de score:14 filesize: 4.92 M page_count: 9 document date: 2024-03-20



[pdf] Datasheet

Publication InBetween Project Manager Informácie o produkte Sada HEPA filtrov pre CVH CENTRUM ČISTENIA Kärcher Levice 2 863 328 PI sk SKs1 kaercher media documents datasheets machines SK 2 ||| SADA HEPA FILTROV PRE CVH N HEPA filter spo ahlivo odstra uje z odpadov ho vzduchu a 99,5 ... OMPATIBILN STROJE Ru n vys va CVH 2 Ru n vys va CVH 2-4 Ru n vys va CVH 3 Plus Ru n vys va CVH Anniversary Edition Sada HEPA filtrov pre CVH, 2.863-328.0, 20...

lang:it score:13 filesize: 447.79 K page_count: 2 document date: 2025-10-01



[pdf]

Лучшие решения для вас WOW продукты Kärcher из программы 2024 года karcher 15 avr — Мести грести драить или оттирать вы можете но не обязаны это делать Выполнять все эти работы быстрее проще тщательней и с намного меньшими усилиями 492 pages Katalog s1 kaercher media file 233358 |||

WOW. : WOW- Krcher 2024 karcher.com HOME GARDEN , , : , , , ... HEPA 12* Krcher VC . 02 . 03 . 04 . 05 . 69 CVH 3 Plus . , , . 2- . WOW 70 2 CVH 3...

lang:de score:11 filesize: 44.99 M page_count: 492 document date: 2024-03-04