

FanttikOutdoor Zeta C10 Pro & Zeta C6 Pro Max

FanttikOutdoor Zeta C10 Pro & Zeta C6 Pro Max Instant Cabin Tent User Manual

Models: Zeta C10 Pro (10-Person) & Zeta C6 Pro Max (6-Person)

INTRODUCTION

This manual provides essential instructions for the safe and efficient setup, operation, maintenance, and troubleshooting of your FanttikOutdoor Zeta C10 Pro or Zeta C6 Pro Max Instant Cabin Tent. Please read this manual thoroughly before using your tent to ensure a positive camping experience.

SAFETY INFORMATION

Always prioritize safety when using your tent. Failure to follow these guidelines may result in injury or damage to the tent.

- **Fire Safety:** Keep all flame and heat sources away from the tent fabric. The tent is made of flame-resistant fabric, but it is not fireproof.
- **Ventilation:** Ensure adequate ventilation to prevent suffocation. Do not use fuel-burning devices inside the tent.
- **Site Selection:** Choose a level campsite free of sharp objects. Avoid pitching the tent under trees with dead branches or in areas prone to flash floods.
- **Weather Conditions:** In severe weather, such as strong winds or heavy snow, disassemble the tent and seek safer shelter.
- **Children:** Keep children away from the tent during setup and takedown. Do not allow children to play with tent components unsupervised.

PACKAGE CONTENTS

Verify that all components are present before beginning assembly.



Image: Packaging details for the FanttikOutdoor Zeta C10 Pro tent, illustrating the tent, carry bag, room divider, peg bag, gear loft, welcome mat, rainfly, and stakes.

- 1 x Instant Cabin Tent (Zeta C10 Pro or Zeta C6 Pro Max)
- 1 x Rainfly
- 1 x Carry Bag
- 1 x Room Divider (for C10 Pro)
- 1 x Peg Bag
- 1 x Gear Loft
- 1 x Welcome Mat
- Stakes (quantity varies by model)
- Ropes (pre-attached or included)

SETUP INSTRUCTIONS

The FanttikOutdoor Instant Cabin Tent is designed for quick assembly, typically within 60 seconds after initial unpacking.



Image: A visual guide demonstrating the four steps for instant tent setup.

- Step 1: Unpack and Unfold.** Remove the tent from its carry bag. Lay the tent flat on your chosen campsite.

2. **Step 2: Extend the Poles.** The tent features pre-installed poles. Gently lift the center of the tent and extend each leg pole outwards until it locks into place. Ensure all joints are fully extended and locked.
3. **Step 3: Secure to Ground.** Use the provided stakes to secure the tent corners and guy lines to the ground. This provides stability, especially in windy conditions.
4. **Step 4: Attach Rainfly.** Drape the rainfly over the tent, aligning it with the tent's structure. Secure the rainfly to the tent poles and stake out any additional guy lines for maximum weather protection.

For the Zeta C10 Pro, the room divider can be installed inside the tent after setup to create two separate sleeping areas.

OPERATING FEATURES

Ventilation System

The tent is equipped with a novel ventilation system to maintain airflow and comfort. This includes mesh windows on all four sides, floor vents, and a mesh screen design at the ceiling. These features help regulate internal temperature and allow for stargazing on clear nights.



Image: Interior view highlighting the advanced venting system, including mesh windows and ceiling.

Weather Protection

The tent is designed with windproof and waterproof features for protection against the elements:

- **Waterproof Fabric:** Constructed from high-quality waterproof fabric with a 600mm hydrostatic rating.
- **Seam Sealing:** Heat-sealed, taped seams with inverted stitching prevent water intrusion.
- **Removable Rainfly:** Fully taped rainfly diverts water away from the tent.
- **Water-Resistant Floor:** Polyethylene and polyurethane floor material prevents ground water intrusion.
- **Wind Stability:** Strong camping pegs and adjustable camping ropes, along with a sturdy carbon frame, provide stability in windy conditions.



Image: Diagram detailing the tent's weather protection features, such as the water-resistant rainfly, fully zipped windows, guy lines, multi-layer protection, and water-resistant floor.

Additional Features

- **Power Cord Entrance:** Allows for connection to an external power source.
- **Mesh Pockets:** Internal mesh pockets facilitate easy storage of small items.
- **Gear Loft:** Provides overhead storage for lightweight items.
- **SBS Zippers:** High-quality SBS zippers ensure smooth operation.
- **Room Divider:** The Zeta C10 Pro includes a removable room divider to create two separate spaces.

PACKAGING DETAILS



1 x Carry Bag



1 x Peg Bag



1 x Room Divider

1 x Instant Cabin Tent



1 x Gear Loft



1 x Welcome Mat



1 x Rainfly



14 x Stake

Image: Detailed views of the tent's internal gear loft, external cable port, built-in storage bag, and the quality of the easy-pull zipper.

MAINTENANCE AND CARE

Proper care extends the life of your tent and ensures its performance.

- **Cleaning:** Hand wash the tent with mild soap and water. Do not use harsh detergents, bleach, or washing machines, as these can damage the fabric and waterproof coating.
- **Drying:** Always ensure the tent is completely dry before packing it away. Packing a damp tent can lead to mildew and fabric degradation. Air dry in a shaded area.
- **Storage:** Store the tent in a cool, dry place, away from direct sunlight and extreme temperatures.

- **Inspection:** Regularly inspect the tent for any damage to the fabric, poles, zippers, or seams. Repair minor issues promptly to prevent further damage.
- **Stakes and Ropes:** Clean stakes and ropes after each use. Store them neatly to prevent tangling.

TROUBLESHOOTING

This section addresses common issues you might encounter.

Problem	Possible Cause	Solution
Tent not standing upright / unstable	Poles not fully extended or locked; insufficient staking.	Ensure all pole joints are fully extended and locked. Re-stake all corners and guy lines firmly into the ground.
Water leakage	Rainfly not properly installed; damaged seams; condensation.	Ensure rainfly is correctly positioned and secured. Check for tears or worn seams and repair if necessary. Improve ventilation to reduce condensation.
Zipper sticking	Fabric caught in zipper; dirt/debris in zipper teeth.	Gently pull fabric away from the zipper. Clean zipper teeth with a brush. Apply a zipper lubricant if needed.
Poor ventilation / stuffy interior	Windows/vents closed; obstructed airflow.	Open all mesh windows and floor vents. Ensure no items are blocking airflow.

SPECIFICATIONS


Key specifications for the FanttikOutdoor Zeta C10 Pro and Zeta C6 Pro Max Instant Cabin Tents.

INSTANT CABIN® TENT

14'x10'x76"



 Sleeps 10



140 Square Feet

76 Inch



Center Height

Fits 2 Queen



Air Mattresses

2 Rooms



with Divider


Image: FanttikOutdoor Zeta C10 Pro Instant Cabin Tent, highlighting its 10-person capacity and dimensions of 14'x10'x76".

INSTANT CABIN® TENT

11'x9'x72"



Sleeps 6

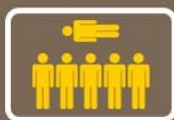

99 Square Feet

72 Inch



Center Height

Fits 1 Queen



Air Mattresses

Image: FanttikOutdoor Zeta C6 Pro Max Instant Cabin Tent, highlighting its 6-person capacity and dimensions of 11'x9'x72".

Feature	Zeta C10 Pro (10-Person)	Zeta C6 Pro Max (6-Person)
Occupancy	10 Person	6 Person
Floor Area	140 sq ft (approx. 14'x10')	99 sq ft (approx. 11'x9')

Feature	Zeta C10 Pro (10-Person)	Zeta C6 Pro Max (6-Person)
Maximum Height	76 inches (6.3 feet)	72 inches (6 feet)
Assembly Time	60 seconds (approx.)	60 seconds (approx.)
Number of Doors	1	1
Number of Windows	4	4
Number of Rooms	6 (with divider)	Not specified (typically 1 large room)
Water Resistance Level	Water Resistant (600mm hydrostatic rating)	Water Resistant (600mm hydrostatic rating)
Rainfly Material	Silnylon or Polyester with DWR finish	Silnylon or Polyester with DWR finish
Tent Floor Material	Polyethylene, Polyurethane	Polyethylene, Polyurethane
Pole Material Type	Aluminum	Aluminum
Included Components	Tent, Rainfly, Ropes, Stakes, Carry Bag, Room Divider, Peg Bag, Gear Loft, Welcome Mat	Tent, Rainfly, Ropes, Stakes, Carry Bag, Peg Bag, Gear Loft, Welcome Mat

WARRANTY INFORMATION

FanttikOutdoor provides a **1-year limited warranty** on this product from the date of purchase. This warranty covers manufacturing defects in materials and workmanship. It does not cover damage caused by misuse, accidents, improper care, normal wear and tear, or modifications.

To make a warranty claim, please retain your proof of purchase and contact customer support.

CUSTOMER SUPPORT

For further assistance, questions, or to report any issues, please contact FanttikOutdoor customer support:

- **Website:** Visit the [FanttikOutdoor Store on Amazon](#) for product information and support resources.
- **Email:** Refer to your product packaging or the FanttikOutdoor website for the most current customer service email address.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CXP1FJMN>

More documents and user manuals: **<https://manuals.plus/>**