

Manuals.plus /

- › FanttikOutdoor /
- › FanttikOutdoor Zeta C8 Pro & C8 Pro Max Instant Cabin Tent User Manual

FanttikOutdoor Zeta C8 Pro & C8 Pro Max

FanttikOutdoor Zeta C8 Pro & C8 Pro Max Instant Cabin Tent User Manual

Model: Zeta C8 Pro & C8 Pro Max

1. SAFETY INFORMATION

Read all instructions before setting up and using the tent. Failure to follow these warnings can result in serious injury or death.

- **Keep all flame and heat sources away from this tent fabric.** The tent is made of flame-resistant fabric, but it is not fireproof.
- Do not use fuel-burning appliances inside the tent. Carbon monoxide fumes can be deadly.
- Ensure adequate ventilation. Do not block tent vents.
- Do not pitch the tent near open flames, heaters, or other ignition sources.
- Avoid setting up the tent under trees with dead branches that could fall.
- In strong winds or severe weather, secure the tent with all guy lines and stakes. Consider dismantling the tent if conditions become extreme.
- Keep children away from the tent during setup and takedown to prevent injury from poles or stakes.

2. PACKAGE CONTENTS

Verify that all components are present before beginning setup.

- 1 x Instant Cabin Tent
- 1 x Rainfly

- 1 x Room Divider
- 1 x Carry Bag
- 1 x Peg Bag
- 1 x Gear Loft
- 1 x Welcome Mat
- 14 x Stakes
- Ropes (pre-attached or in peg bag)



Image: Detailed view of all components included in the FanttikOutdoor Zeta C8 Pro & C8 Pro Max tent package, including the tent, rainfly, room divider, carry bag, peg bag, gear loft, welcome mat, and stakes.

3. SETUP INSTRUCTIONS

The FanttikOutdoor Zeta C8 Pro & C8 Pro Max tent features an instant setup design, allowing for quick assembly.

Instant Setup (Approx. 60 Seconds)

1. **Step 1: Unpack and Lay Flat.** Remove the tent from its carry bag. Lay the tent flat on the ground with the door facing the desired direction.
2. **Step 2: Extend Legs.** Locate the pre-installed poles. Gently pull each leg of the tent outwards until the pole joints are fully extended and locked into place.
3. **Step 3: Lift and Lock.** Stand inside the tent and push up on the central hub until the roof poles are fully extended and locked. The tent structure will now be upright.
4. **Step 4: Secure the Tent.** Stake down the tent corners and all guy lines to secure it against wind. Attach the rainfly if weather conditions require it.

PACKAGING DETAILS



Image: Visual guide demonstrating the four-step instant setup process for the FanttikOutdoor Zeta C8 Pro & C8 Pro Max tent, from unpacking to securing the erected tent.

Attaching the Rainfly

- Unfold the rainfly and drape it over the tent, aligning the doors and windows.
- Secure the rainfly to the tent poles or base using the attached buckles, hooks, or ties.
- Extend and stake out any additional guy lines on the rainfly for added stability and weather protection.

4. OPERATING FEATURES

Ventilation System

The tent is equipped with a novel ventilation system to maintain airflow and comfort.

- **Mesh Windows:** All four sides feature mesh windows that can be zipped open or closed for adjustable airflow.
- **Floor Vents:** Vents located at the floor level assist in drawing cooler air into the tent.
- **Ceiling Mesh:** A mesh screen design at the ceiling allows for hot air to escape and provides views of the sky.



Image: Close-up view of the tent's advanced venting system, highlighting the mesh windows and ceiling for optimal airflow.

Room Divider

A removable room divider is included to create two separate living spaces within the tent.

- Locate the attachment points (loops or toggles) inside the tent.
- Unfold the room divider and attach it securely to these points.
- To remove, simply unfasten the divider from its attachment points.

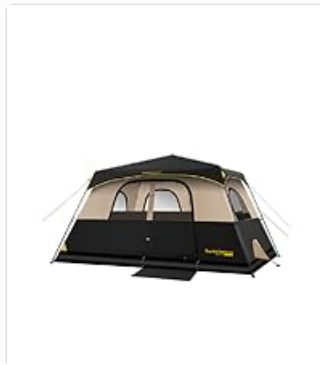 


Image: Illustration of the tent's interior with the room partition installed, creating two distinct areas.

Additional Features

- **Power Cord Entrance:** A designated port allows for external power cords to enter the tent safely.
- **Mesh Pockets:** Internal mesh pockets provide convenient storage for small items.
- **Gear Loft:** An overhead mesh loft for lightweight storage.
- **SBS Zippers:** High-quality SBS zippers ensure smooth and reliable operation for doors and windows.



Image: Close-up details of the tent's interior features, including the gear loft, cable port, built-in storage bag, and easy-pull zipper.

5. MAINTENANCE

Proper care and maintenance will extend the life of your tent.

- **Cleaning:** Hand wash the tent fabric with mild soap and lukewarm water. Do not use harsh detergents, bleach, or machine wash. Rinse thoroughly.
- **Drying:** Always ensure the tent is completely dry before packing it away to prevent mildew and odor. Air dry in a shaded area.
- **Storage:** Store the tent in its carry bag in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Zippers:** Keep zippers clean and free of dirt. Lubricate with a silicone-based zipper lubricant if they become stiff.

- **Stakes and Poles:** Clean stakes and poles after each use. Check for any damage and replace if necessary.

6. TROUBLESHOOTING

Common issues and their solutions.

Problem	Possible Cause	Solution
Tent is unstable in wind	Insufficient staking or guy line tension.	Ensure all stakes are fully driven into the ground and guy lines are taut. Re-position tent to face wind if possible.
Water leakage	Rainfly not properly installed, damaged fabric, or zipper not fully closed.	Ensure rainfly is correctly positioned and secured. Check for tears or holes and repair if necessary. Fully close all zippers.
Condensation inside tent	Lack of ventilation.	Open mesh windows and floor vents to increase airflow. Ensure rainfly vents are open.
Poles not locking properly	Dirt in joints or mechanism not fully extended.	Clean pole joints. Ensure each pole section is fully extended and clicks into place.



Image: Diagram illustrating the tent's weather protection features, including water-resistant rainfly, guylines, water-resistant fabric, multi-layer protection, and water-resistant floor.

7. SPECIFICATIONS


Feature	Detail
Brand	FanttikOutdoor
Model Name	Zeta C8 Pro & C8 Pro Max
Occupancy	8 Person
Dimensions (Approx.)	13' x 9' x 78" (Length x Width x Height)
Seasons	Summer
Material	Polyester (Rainfly), Nylon/Polyester (Tent Floor), Mesh (Fabric Type)
Pole Material Type	Carbon Fiber
Installation Type	Instant
Water Resistance Level	Waterproof (600mm hydrostatic rating)
Special Features	Waterproof, Windproof, Advanced Ventilation, Room Divider, Power Cord Entrance, Mesh Pockets, Gear Loft
Number of Rooms	1 (can be divided into 2 with included divider)

INSTANT CABIN® TENT

13'x9'x78"



 Sleeps 8

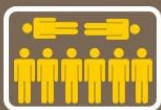

117 Square Feet

78 Inch



Center Height

Fits 2 Queen



Air Mattresses

2 Rooms



with Divider

Image: Overview of the FanttikOutdoor Zeta C8 Pro & C8 Pro Max tent, highlighting its 8-person occupancy, dimensions (13'x9'x78"), water-resistant construction, 1-year warranty, and venting system.

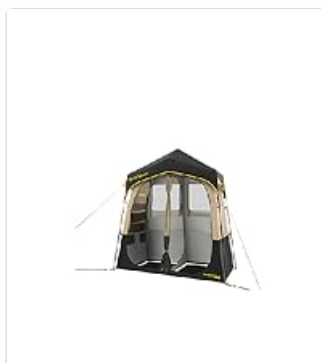 


Image: Visual representation of the tent's sleeping capacity, indicating it sleeps 8 according to industry standards, or 4 plus gear for most comfortable use.

8. WARRANTY AND SUPPORT

The FanttikOutdoor Zeta C8 Pro & C8 Pro Max Instant Cabin Tent comes with a **1-year limited warranty** against defects in materials and workmanship.

For warranty claims, technical support, or any questions regarding your product, please contact FanttikOutdoor customer service through the retailer where the product was purchased or visit the official FanttikOutdoor website for contact information.

Please retain your proof of purchase for warranty service.