

[Manuals.plus](#) /

› [UPBRIGHT](#) /

› UpBright 12V 1.5A AC/DC Adapter Instruction Manual

UPBRIGHT Coby DP-882 12V Power Supply

UpBright 12V 1.5A AC/DC Adapter Instruction Manual

Model: Coby DP-882 12V Power Supply

INTRODUCTION

This manual provides essential information for the safe and effective use of your UpBright 12V 1.5A AC/DC Adapter. This power supply is designed to provide stable 12V DC power to compatible electronic devices, specifically Coby DP-882 8" and DP-102 10" Color TFT LCD Digital Photo Display Frames and MP3 Players.

Please read this manual thoroughly before using the product and retain it for future reference.

SAFETY PRECAUTIONS

- Ensure the adapter's voltage and current ratings match your device's requirements before connecting.
- Do not expose the adapter to water, moisture, or extreme temperatures.
- Avoid dropping or subjecting the adapter to strong impacts.
- Do not attempt to open or repair the adapter. Refer servicing to qualified personnel.
- Unplug the adapter from the power outlet when not in use for extended periods.
- Keep out of reach of children.

SETUP

Follow these steps to properly set up your AC/DC adapter:

1. **Inspect the Adapter:** Before use, visually inspect the adapter and its cable for any signs of damage. Do not use if damaged.
2. **Connect to Device:** Locate the power input port on your compatible device (e.g., Coby DP-882/DP-102 Digital Photo Frame). Insert the barrel round connector of the adapter firmly into the device's power input port.
3. **Connect to Power Outlet:** Plug the AC prongs of the adapter into a standard 100-240VAC 50/60Hz wall power outlet. Ensure the outlet is easily accessible.
4. **Verify Power:** Once connected, your device should receive power. Refer to your device's manual for specific power indicators.



Image: The UpBright 12V 1.5A AC/DC Adapter showing the main unit, power cord, and barrel connector. This adapter is designed to provide stable power to compatible electronic devices.

OPERATING INSTRUCTIONS

The UpBright AC/DC Adapter operates automatically once connected to a power source and a compatible device. It converts the alternating current (AC) from your wall outlet into direct current (DC) required by your device.

- Ensure the adapter is securely plugged into both the wall outlet and your device.
- The adapter is designed for continuous operation within its specified limits.
- Disconnect the adapter from the power source and device when not in use to conserve energy and prolong its lifespan.

MAINTENANCE

Proper maintenance ensures the longevity and safe operation of your adapter:

- **Cleaning:** Disconnect the adapter from all power sources before cleaning. Use a soft, dry cloth to wipe the exterior. Do not use liquid cleaners or solvents.
- **Storage:** When not in use, store the adapter in a cool, dry place, away from direct sunlight and excessive heat. Avoid tightly coiling the cable to prevent damage.

- **Cable Care:** Do not bend, twist, or pull the cable excessively, especially near the connectors, as this can cause internal damage.



Image: The UpBright AC/DC Adapter with its cable neatly coiled, illustrating proper storage to prevent cable damage.

TROUBLESHOOTING

If you encounter issues with your adapter, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Device not powering on.	Adapter not properly connected to device or outlet.	Ensure both ends of the adapter are securely plugged in. Try a different wall outlet.
Device powers on intermittently.	Loose connection or damaged cable.	Check connections. Inspect the cable for cuts or fraying. If damaged, discontinue use.
Adapter feels unusually hot.	Overload or poor ventilation.	Ensure the device's power requirements do not exceed the adapter's output. Provide adequate ventilation around the adapter. Discontinue use if excessively hot.
Adapter not compatible with device.	Incorrect voltage or connector type.	Verify your device's power requirements (voltage, current, connector type) against the adapter's specifications. This adapter is specifically for 12VDC, 1.5A devices with a barrel round connector.

If the problem persists after trying these solutions, contact customer support.

SPECIFICATIONS


Feature	Detail
Brand	UPBRIGHT
Model Number	Coby DP-882 12V Power Supply
Product Dimensions	4 x 3 x 2 inches
Input Voltage	100-240VAC, 50/60Hz (World Wide Input Voltage)
Output Voltage	12 Volts (DC)
Output Current	1.5 Amps (1500mA)
Connector Type	Barrel Round Connector
Compatible Devices	Coby DP-882 DP882 8" DP-102 DP102 10" Color TFT LCD Digital Photo Display Frame MP3 Player
Protection Features	OVP (Over Voltage output Protection), OCP (Over Current output Protection), SCP (Short Circuit output Protection)

WARRANTY AND SUPPORT

UpBright products are designed for reliability and performance. This adapter comes with the following warranty and support:

- **Refund Policy:** 30 days refund period from the date of purchase.
- **Exchange Policy:** 24 months exchange period for defective units.
- **Customer Support:** For technical assistance, troubleshooting beyond this manual, or warranty claims, please contact UpBright customer service. Refer to the product packaging or the official UpBright website for contact information.

Come With A Suitable Outlet Adapter (Only One) to Fit
Your Country/Area For International Order

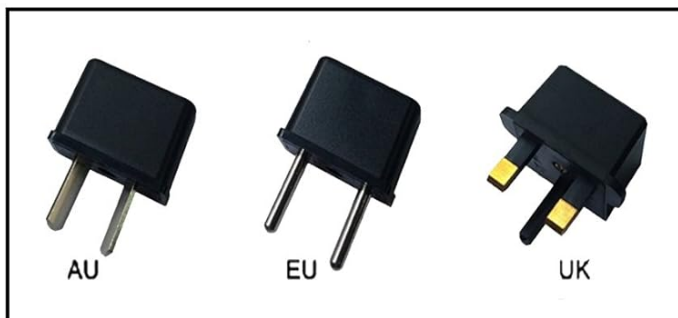

THIS PRODUCT COMES WITH A UPBRIGHT®

LIMITED WARRANTY CERTIFICATE
+ UPBRIGHT® LIMITED WARRANTY



Image: An illustration of the UpBright Limited Warranty Certificate, indicating the product's coverage. Note that international outlet adapters may be included with international orders.

© 2024 UPBRIGHT. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0CXPJZS48>

More documents and user manuals: <https://manuals.plus/>