



Manuals.plus /

› LONGDEEM /

› Longdeem Electric Milk Frother LD-D3001T User Manual

LONGDEEM LD-D3001T

Longdeem Electric Milk Frother LD-D3001T User Manual

Model: LD-D3001T

1. INTRODUCTION

Thank you for choosing the Longdeem Electric Milk Frother LD-D3001T. This appliance is designed to create various types of milk foam and warm milk for your favorite beverages, including lattes, cappuccinos, macchiatos, and hot chocolate. It features a 4-in-1 functionality, offering light warm foam, thick warm foam, cold foam, and a simple warming feature. For optimal performance and safety, please read this manual thoroughly before use and retain it for future reference.

4 in 1 Milk Frother

Enjoy a cup of Coffee Brewed by Yourself



Image 1.1: The Longdeem Electric Milk Frother demonstrating its 4-in-1 capabilities for various milk preparations.



Rich & Creamy Milk Foam

Image 1.2: Illustration of rich and creamy milk foam produced by the frother.

2. SAFETY INSTRUCTIONS

To prevent personal injury or damage to the appliance, please observe the following safety precautions:

- Read all instructions before using the appliance.
- Do not immerse the frother base, power cord, or plug in water or other liquids.
- Ensure the power supply voltage matches the rating on the appliance.
- Always unplug the frother from the outlet when not in use and before cleaning.
- Do not operate the appliance with a damaged cord or plug, or if it malfunctions or has been damaged in any manner.

- Keep the appliance out of reach of children. Close supervision is necessary when used near children.
- Avoid contact with moving parts.
- Do not use attachments not recommended by the manufacturer.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always ensure the lid is securely in place before operating.
- The frother features an auto shut-off and overheating protection for enhanced safety.
- For optimal nutrition, avoid heating milk above 60°C (140°F), as higher temperatures can degrade nutritional components.
- This product is for household use only.

3. PRODUCT COMPONENTS

The Longdeem Electric Milk Frother LD-D3001T includes the following components:

- Automatic Milk Frother (main unit with non-stick interior and handle)
- Transparent Lid
- Frothing Whisk (x2)
- Heating Whisk
- 360° Power Base with Power Cord
- User Manual (this document)
- Quick Start Guide

Made of 304 Stainless Steel



Image 3.1: Exploded view of the Longdeem Milk Frother components.

4. SETUP

1. **Unpack:** Carefully remove all components from the packaging.
2. **Initial Cleaning:** Before first use, clean the interior of the frother and the whisks with warm soapy water. Rinse thoroughly and dry. Wipe the exterior with a damp cloth.
3. **Placement:** Place the power base on a stable, flat, and dry surface.
4. **Power Connection:** Plug the power cord into a standard electrical outlet.
5. **Insert Whisk:** Select the desired whisk (frothing or heating) and place it onto the drive shaft at the bottom of the frother jug. Ensure it is securely seated.

5. OPERATING INSTRUCTIONS

5.1 Filling Milk

Pour cold milk into the frother jug. Observe the internal MAX and MIN level indicators:

- **MAX (Heating Milk):** Do not exceed 300ml (10 oz) when only heating milk (using the heating whisk).
- **MAX (Milk Frothing):** Do not exceed 150ml (5 oz) when frothing milk (using the frothing whisk).
- **MIN:** Always fill at least 75ml (2.5 oz) for frothing or heating milk.

Exceeding the MAX frothing level can cause overflow during operation.



Image 5.1: Internal milk level indicators for accurate filling.

5.2 Selecting a Function

Place the lid on the frother. Press the power button to cycle through the 4 available functions. The indicator light will change to reflect the selected mode:

- **Light Warm Foam:** Ideal for a delicate, warm froth.
- **Thick Warm Foam:** Produces a dense, rich warm froth.
- **Cold Foam:** Creates cold froth without heating the milk.
- **Warming Only:** Heats milk without frothing (use heating whisk).



Image 5.2: Visual guide to the frother's four operating modes.

5.3 Starting and Stopping

- After selecting the desired function, the frother will automatically begin operation.
- The frother will automatically shut off once the cycle is complete or if it detects overheating.
- To manually stop the frother during operation, press the power button once.

5.4 Pouring

The frother features a dripless spout design for accurate pouring and to minimize mess, which is beneficial for creating latte art.

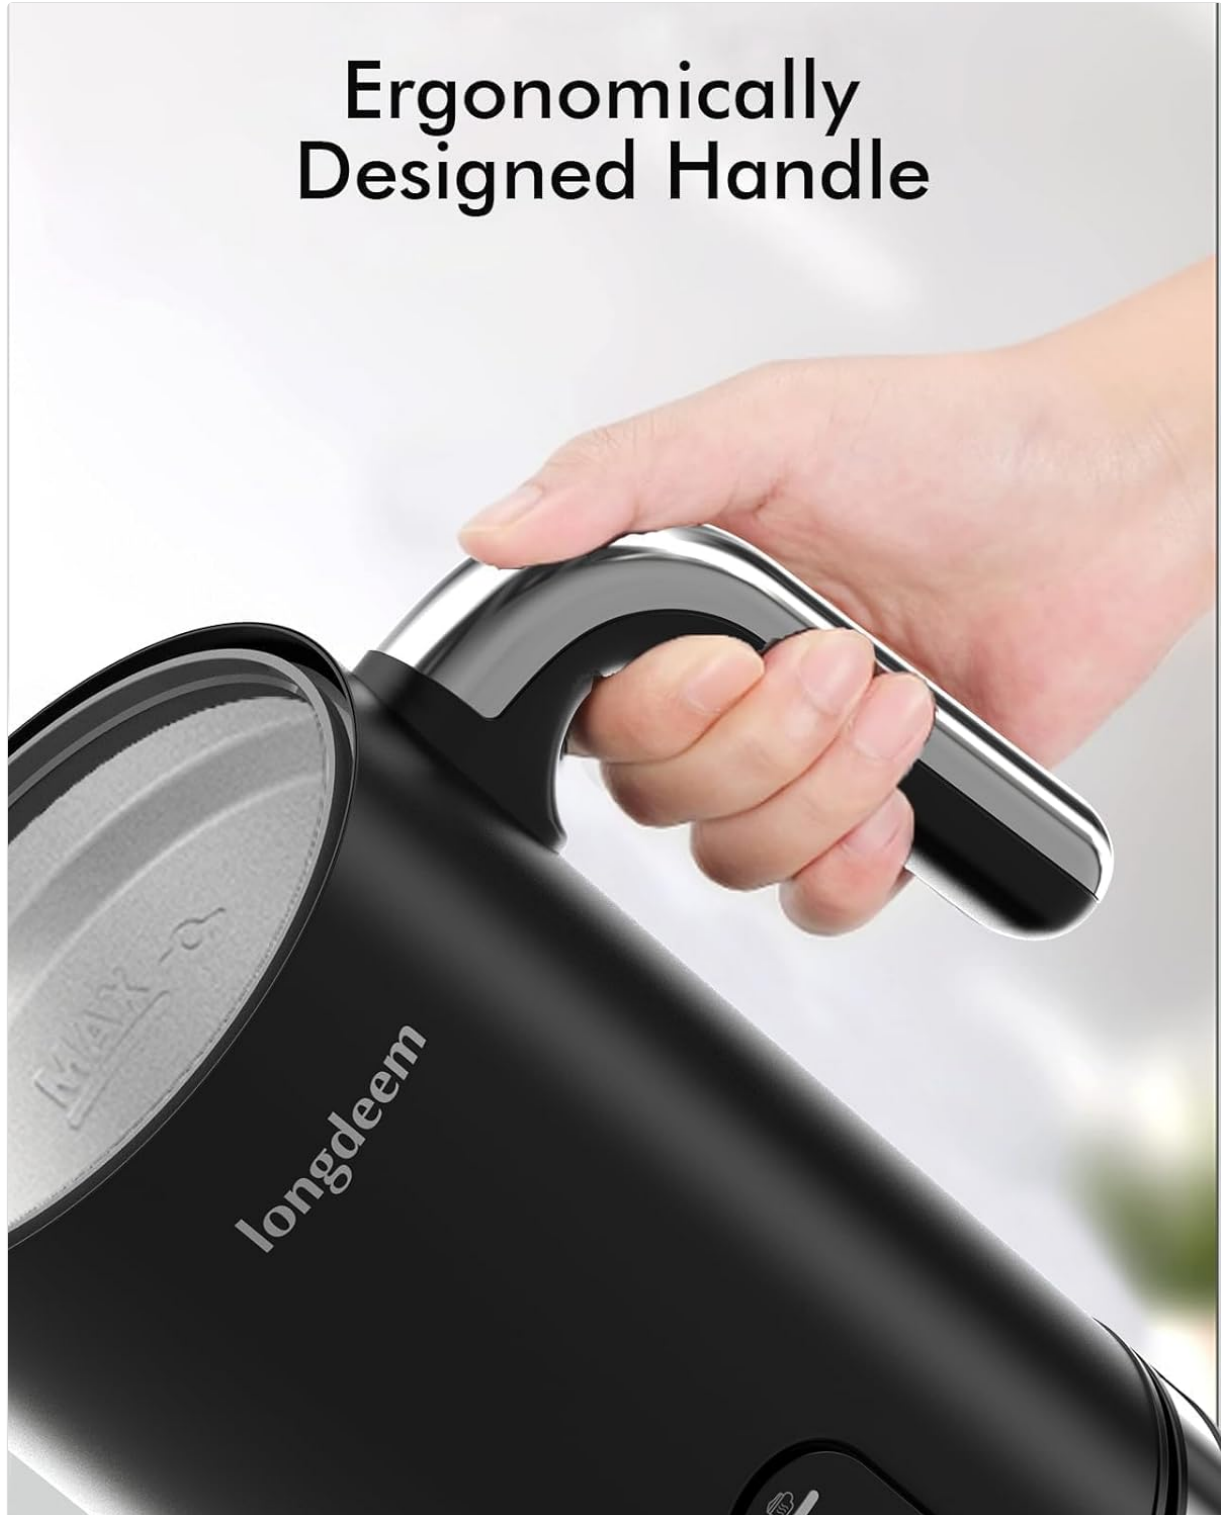


Image 5.3: The ergonomically designed handle for comfortable and precise pouring.

6. MAINTENANCE AND CLEANING

Proper cleaning ensures the longevity and hygiene of your frother.

- **Always unplug** the appliance from the power outlet before cleaning.
- **Hand Wash Only:** The frother jug is not dishwasher safe and should not be submerged in water.
- **Interior Cleaning:** Immediately after each use, rinse the interior of the frother with warm water. Use a soft, non-abrasive sponge or cloth with mild dish soap to clean the non-stick interior. Ensure all milk residue is removed, especially around the drive shaft and whisk.
- **Whisk Cleaning:** Remove the whisk(s) and wash them with warm soapy water. Rinse and dry thoroughly.
- **Exterior Cleaning:** Wipe the exterior of the frother and the power base with a damp cloth. Do not use abrasive cleaners or scouring pads.
- **Drying:** Ensure all parts are completely dry before reassembling or storing the frother.

7. TROUBLESHOOTING

If you encounter issues with your Longdeem Electric Milk Frother, refer to the following common problems and solutions:

- **Frother does not turn on:** Ensure the power base is securely plugged into a working outlet and the frother jug is correctly placed on the base.
- **Milk is not frothing or frothing poorly:**
 - Ensure the correct frothing whisk is installed.
 - Check that the milk level is between the MIN and MAX frothing indicators (75ml - 150ml).
 - Use cold, fresh milk. Whole milk generally produces the best froth.
 - Ensure the whisk is clean and free of obstructions.
- **Milk is not heating:**
 - Ensure the heating whisk is installed if you only want to heat milk without frothing.
 - Check that the milk level is between the MIN and MAX heating indicators (75ml - 300ml).
 - The frother has no adjustable temperature control; it heats to an optimal temperature for beverages.
- **Milk overflows during operation:** The milk level likely exceeded the MAX frothing indicator (150ml). Reduce the amount of milk.
- **Unusual noise during operation:** Ensure the whisk is properly seated on the drive shaft and there are no foreign objects in the jug.
- **Base instability:** Ensure the power cord is routed correctly from the base to prevent tilting.

If the problem persists after attempting these solutions, please contact customer support.

8. SPECIFICATIONS

Feature	Specification
Brand	LONGDEEM
Model Name	LD-D3001T
Product Dimensions	5.7"W x 7.95"H
Item Weight	1.52 pounds
Material	304 Stainless Steel (interior), Non-stick coating
Color	Light Black
Power Source	Corded Electric
Wattage	500 watts
Capacity (Heating)	300ml / 10 oz
Capacity (Frothing)	150ml / 5 oz
Number of Settings	4 (Light Warm Foam, Thick Warm Foam, Cold Foam, Warming Only)
Special Features	Auto Shut-Off, Compact Design, Visible Milk Level Indicator, Ergonomic Handle
Product Care	Hand Wash Only
UPC	718430186781

9. WARRANTY AND SUPPORT

The Longdeem Electric Milk Frother LD-D3001T comes with a **2-Year Warranty** from the date of purchase, covering defects in materials and workmanship under normal use.

This warranty does not cover damage caused by misuse, neglect, accident, alteration, or unauthorized repair. Please retain your proof of purchase for warranty claims.

For technical support, warranty claims, or any questions regarding your product, please contact Longdeem customer service through the retailer where the product was purchased or visit the official Longdeem website for contact information.