

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Seesii](#) /

› [Seesii 2-in-1 Cordless Electric Pruning Shears with Pole - Instruction Manual](#)

Seesii HNTLZH534

Seesii 2-in-1 Cordless Electric Pruning Shears with Pole

INSTRUCTION MANUAL

Brand: Seesii | Model: HNTLZH534

1. Introduction and Overview

The Seesii 2-in-1 Cordless Electric Pruning Shears with Pole is a versatile tool designed for efficient and effortless branch trimming. It offers both handheld and extended pole operation, allowing users to reach high branches without the need for ladders. Equipped with a powerful brushless motor and long-lasting batteries, this pruner is suitable for various gardening tasks, from delicate shrubs to thicker tree limbs.

Key features include:

- **2-in-1 Design:** Easily switch between handheld pruning shears and an extended pole pruner for versatile use.
- **Extended Reach:** The pole extends from 4.9 to 9 feet, providing a total reach of up to 15 feet, enabling safe ground-level pruning of high branches.
- **Precision Cutting:** Sharp, high-carbon SK5 steel blades cut branches up to 1.2 inches (30mm) in diameter smoothly.
- **Brushless Motor:** Ensures consistent power, extended tool lifespan, and reduced maintenance.
- **Long-Lasting Batteries:** Two 21V 4000mAh Lithium-Ion batteries provide up to 6-8 hours of continuous operation.



Image: The Seesii 2-in-1 Electric Pruning Shears, showcasing its dual functionality as a handheld pruner and a pole pruner.

2. Safety Information

Always prioritize safety when operating power tools. Read and understand all instructions before use. Failure to follow these guidelines may result in serious injury or property damage.

- **Personal Protective Equipment (PPE):** Always wear safety glasses, gloves, and appropriate protective clothing when operating the pruner.
- **Dual-Trigger Activation:** The pruner is equipped with a double-trigger system for safe operation. Both the safety button and the main trigger must be pressed simultaneously to activate the blades.
- **Keep Hands Clear:** Never place hands or fingers near the cutting blades when the battery is installed.
- **Secure Grip:** Maintain a firm and secure grip on the tool, especially when using the extension pole.
- **Stable Footing:** Ensure stable footing and balance, particularly when reaching for higher branches. Avoid overreaching.

- **Battery Safety:** Use only the provided charger and batteries. Do not expose batteries to extreme temperatures or moisture.
- **Inspect Before Use:** Before each use, inspect the blades, pole, and battery for any signs of damage or wear. Do not operate if damaged.
- **Storage:** Store the pruner in a dry, secure location out of reach of children and unauthorized users.

3. Components and What's Included

Your Seesii 2-in-1 Cordless Electric Pruning Shears kit includes the following items:

- 1x Electric Pruning Shears Unit
- 1x Telescopic Pole (extendable)
- 2x 21V 4000mAh Lithium-Ion Batteries
- 1x Battery Charger
- 1x Shoulder Strap
- 1x Replacement Blades Set
- 1x Sharpening Stone
- 2x Small Wrenches
- 1x User Manual
- 1x Pair of Gloves

Full Kit, Full Power.



Image: All components of the Seesii Electric Pruning Shears kit laid out, including the main unit, pole, batteries, charger, and accessories.

4. Setup Instructions

Follow these steps to set up your Seesii Electric Pruning Shears:

1. **Charge Batteries:** Before first use, fully charge both 21V 4000mAh Lithium-Ion batteries using the provided charger. The indicator lights on the battery will show charging status.
2. **Install Battery:** Slide a charged battery into the base of the pruning shears unit until it clicks securely into place.
3. **Handheld Mode Assembly:** For handheld operation, ensure the battery is securely attached. The unit is ready for use in this configuration.
4. **Pole Mode Assembly:**

- Attach the pruning shears unit to the telescopic pole by aligning the connectors and securing them firmly.
- Adjust the pole length as needed by loosening the locking mechanism, extending the pole to the desired length (4.9 to 9 ft), and then tightening the lock.
- Attach the shoulder strap to the designated points on the pole for comfortable and balanced operation, especially during extended use.

Your browser does not support the video tag.

Video: This video demonstrates the easy installation and locking mechanism of the Seesii Electric Pruning Shears, including attaching the battery and extending the pole for various pruning tasks.

5. Operating Instructions

Operating your Seesii Electric Pruning Shears is straightforward:

1. **Power On:** Press and hold the power button until the indicator lights illuminate.
2. **Activate Blades:** To open the blades, simultaneously press the safety button and the main trigger. The blades will open to their maximum setting.
3. **Adjust Cutting Diameter (3 Modes):** The pruner offers three adjustable cutting diameters (15mm/0.59", 20mm/0.79", 30mm/1.2"). To cycle through these modes, press the power button briefly while the blades are open. The indicator lights will change to reflect the selected mode.
4. **Pruning:** Position the open blades around the branch you wish to cut. Ensure the branch fits within the selected cutting diameter. Press the main trigger to close the blades and make the cut. Release the trigger to open the blades.
5. **Using the Pole:** When using the telescopic pole, ensure the unit is securely attached. The head of the pruner can rotate 0-180 degrees horizontally and vertically, allowing for optimal angle adjustment for hard-to-reach branches. Use the shoulder strap for better control and reduced fatigue.
6. **Power Off:** After use, press and hold the power button until the indicator lights turn off. Remove the battery for storage.



Image: Illustration of the three adjustable cutting diameter modes (15mm, 20mm, 30mm) available on the Seesii Electric Pruning Shears.

Your browser does not support the video tag.

Video: A demonstration of the electric pruning shears in action, showing its effectiveness for orchard pruning tasks.

Your browser does not support the video tag.

Video: This video illustrates how the Seesii Pole Electric Pruner can be used to effectively prune hard-to-reach branches, highlighting its extended reach capabilities.

Your browser does not support the video tag.

Video: A close-up demonstration of the Seesii Battery Pruner cutting through branches up to 1 inch in diameter with ease.

6. Maintenance

Regular maintenance ensures the longevity and optimal performance of your pruning shears:

- **Blade Cleaning:** After each use, especially when cutting resinous wood, clean the blades with a damp cloth to remove sap and debris. Ensure the battery is removed before cleaning.
- **Blade Sharpening:** Use the included sharpening stone to keep the blades sharp. Sharpening should be done regularly to maintain cutting efficiency and prevent strain on the motor.
- **Lubrication:** Periodically apply a small amount of lubricating oil to the pivot point and blades to ensure smooth operation and prevent rust.
- **Battery Care:** Store batteries in a cool, dry place. Do not store fully discharged batteries for long periods. Charge them periodically if not in use.
- **General Inspection:** Regularly check all screws and fasteners for tightness. Inspect the pole and connections for any signs of damage or wear.



Image: A close-up view of the Seesii Electric Pruning Shears cutting a branch, demonstrating its cutting capability. Regular maintenance of these blades is crucial.

7. Troubleshooting

If you encounter issues with your Seesii Electric Pruning Shears, refer to the following common troubleshooting tips:

Problem	Possible Cause	Solution
Pruner does not turn on.	Battery not installed correctly or discharged.	Ensure battery is fully charged and securely inserted.
Blades do not open/close.	Safety button not pressed, or blades are jammed.	Ensure both the safety button and trigger are pressed simultaneously. Check for debris jamming the blades and clear if necessary (with battery removed).
Reduced cutting performance.	Dull blades or low battery.	Sharpen blades using the sharpening stone. Recharge or replace the battery.
Tool feels sluggish or overheats.	Overuse or attempting to cut branches too thick.	Allow the tool to cool down. Ensure you are not exceeding the maximum cutting diameter (1.2 inches).

If the issue persists after attempting these solutions, please contact Seesii customer support for further assistance.

8. Specifications

Feature	Detail
Brand	Seesii
Model Number	HNTHLZH534
Voltage	21 Volts
Wattage	600 watts
Blade Material	High Carbon Steel (SK5)
Max Cutting Diameter	1.2 Inches (30mm)
Pole Extension Range	4.9 to 9 FT
Total Reach (with user)	Up to 15 FT
Item Weight (Shears only)	2.85 lbs
Item Weight (with pole)	6.2 lbs
Battery Type	Lithium Ion
Battery Capacity	2x 4000mAh

9. Warranty and Support

Seesii stands behind the quality of its products. Your 2-in-1 Cordless Electric Pruning Shears with Pole is backed by a **12-month product support** and **lifetime customer support**.

For any questions, concerns, or assistance with your product, please contact Seesii customer support. Please have your model number (HNTHLZH534) and purchase information ready when contacting support.

Contact information for support can typically be found on the product packaging or the official Seesii website.